# 6(b) RF Troubleshooting


Copyright © 2003 Nokia Corporation
Company Confidential

**This page has been left blank intentionally**


Copyright © 2003 Nokia Corporation
Company Confidential

# Table of Contents

| | Page No |
|---|---|
| RF Troubleshooting | 5 |
| Abbreviations | 5 |
| Introduction | 5 |
| RF Key component placement | 6 |
| RF Measurement points | 7 |
| RF Supply points | 7 |
| Measurement points in the receiver | 8 |
| Measurement points in the transmitter | 9 |
| RF in general | 10 |
| RF Power Supply Configuration | 13 |
| Receiver | 14 |
| General instructions for RX troubleshooting | 14 |
| Measuring RX I/O signals using RSSI reading | 14 |
| Measuring RX performance using SNR measurement | 15 |
| Measuring frontend power levels | 17 |
| Measuring analogue RX I/O signal voltages | 18 |
| Receiver RSSI readings from Phoenix | 19 |
| Receiver fault finding | 20 |
| RX signal paths | 20 |
| Antenna switch (RX/TX Switch) | 21 |
| Front-end | 22 |
| RX paths of Mjoelner RF ASIC | 22 |
| GSM850 Transmitter | 22 |
| General instructions for GSM850 TX troubleshooting | 22 |
| TX Path of the transmitted GSM850 signal | 30 |
| GSM850 TX path of Mjoelner RF ASIC | 31 |
| GSM850 TX path of Power Amplifier (PA) | 31 |
| Antenna Switch (TX/RX switch) | 31 |
| 850 TX fault finding flow chart | 32 |
| GSM1900 Transmitter | 33 |
| General instructions for GSM1900 TX troubleshooting | 33 |
| PCS 1900 TX fault finding flow chart | 33 |
| Path of the transmitted GSM1900 signal | 34 |
| The path of Mjoelner RF ASIC | 34 |
| The path of the PA | 34 |
| Antenna Switch | 35 |
| Fault finding chart for GSM1900 transmitter | 35 |
| NHM-10 Synthesiser | 36 |


Copyright © 2003 Nokia Corporation
Company Confidential

Page No

General instructions for Synthesiser troubleshooting ..... 36
26 MHz reference oscillator (VCXO) ..... 38
VCO ..... 39
Fault finding chart for PLL Synthesiser ..... 39
PLL Block diagram ..... 40
PLL power supply ..... 41
Loop Filter ..... 41
VCO and power supply ..... 41
26 MHz Bluetooth buffer ..... 41
Phoenix tuning ..... 42
RF tuning after repairs ..... 42
RX Calibration (incl. VCXO Calibration) ..... 42
GSM850 ..... 43
GSM1900 (PCS) ..... 45
RX AGC limits ..... 46
RX Band Filter Response Compensation ..... 47
GSM850 ..... 47
Manual Tuning ..... 48
Auto Tuning ..... 49
RX Channel Select Filter Calibration ..... 50
TX Power tuning ..... 51
GSM850 ..... 52
GSM1900 (PCS) ..... 53
TX I/Q Tuning ..... 53
GSM850 ..... 53
GSM1900 (PCS) ..... 57


Copyright © 2003 Nokia Corporation
Company Confidential

# RF Troubleshooting

## Abbreviations in fault finding charts

| | |
|---|---|
| ASIC | Application Specific Integrated Circuit |
| BB | Base band |
| BT | Bluetooth |
| ESD | Electro Static Discharge |
| GPRS | General Packed Radio Service |
| HSCSD | High Speed Circuit Switched Data |
| LO | Local Oscillator |
| PA | Power Amplifier |
| PCS | GSM1900 |
| PLL | Phase Locked Loop |
| PWB | Printed Wired Board |
| RF | Radio Frequency |
| RX | Receiver |
| SA | Spectrum analyzer |
| TX | Transmitter |
| UEM | Universal Energy Management |
| UHF | Ultra High Frequency |
| VCO | Voltage controlled oscillator |
| VHF | Very High Frequency |

## Introduction

Two types of measurements have to be done for repair of the phone boards:

- RF measurements shall be done using a Spectrum Analyzer together with a high-frequency probe. (Note, that signal will be significantly attenuated). Correct attenuation can be checked by using a "good" phone board, for example.
- LF (Low frequency) and DC measurements shall be done with a an oscilloscope together with an 10:1 probe.

Always make sure that the measurement set-up is calibrated when measuring RF parameters at the RF connector. Remember to include the correct losses in the module repair jig and the connecting cable when realigning the phone.

**Most RF semiconductors are static discharge sensitive.** ESD protection must be taken into account during repair (ground straps and ESD soldering irons).

**Mjoelner RF ASIC is moisture sensitive.** Therefore, Mjoelner RF ASIC must be pre-baked prior to soldering.


Copyright © 2003 Nokia Corporation
Company Confidential

**Rx calibration done via Phoenix software is temperature sensitive because of calibration of 26 MHz reference oscillator (VCXO).** According to Mjoelner specification ambient temperature has to be in a range from 22°C to 36°C.

Apart from key-components described in this document there are a lot of discrete components (resistors, inductors and capacitors) for which troubleshooting is done by checking if soldering of the component is done properly and checking if the component is missing from PWB. Capacitors can be checked for short-circuiting and resistors for value by means of an ohm-meter, but be aware in-circuit measurements should be evaluated carefully.

## RF Key component placement

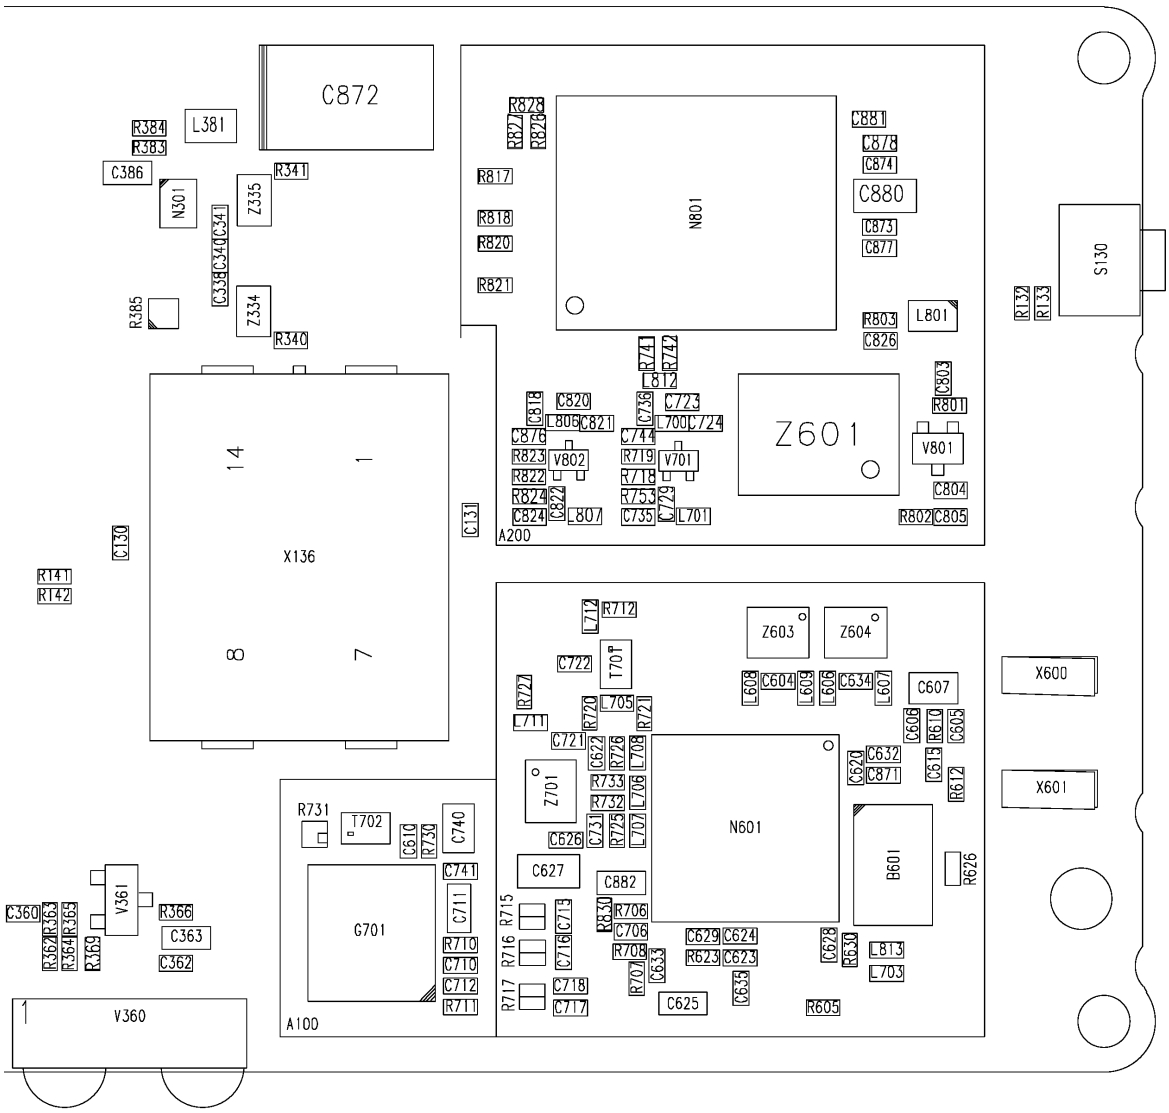


**Figure 1: RF key component placement**


Copyright © 2003 Nokia Corporation
Company Confidential

| Reference number | Name | Reference number | Name |
|---|---|---|---|
| N601 | Mjoelner RF ASIC | X600 | Antenna signal clip |
| B601 | 26 MHz Xtal | X601 | Antenna ground clip |
| Z603 | GSM1900 RX SAW | X602 | RF Connector |
| Z604 | 850 RX SAW filter | L801 | Directional Coupler |
| Z701 | 850 TX SAW filter | V801 | Detector Diode |
| T701 | GSM1900 TX Balun | Z601 | Antenna switch |
| V802 | 850 TX buffer | N801 | Power Amplifier |
| G701 | 3.7 GHz VCO | V701 | 1900 TX buffer |
| T702 | VCO Balun | | |

## RF Measurement points

### RF Supply points

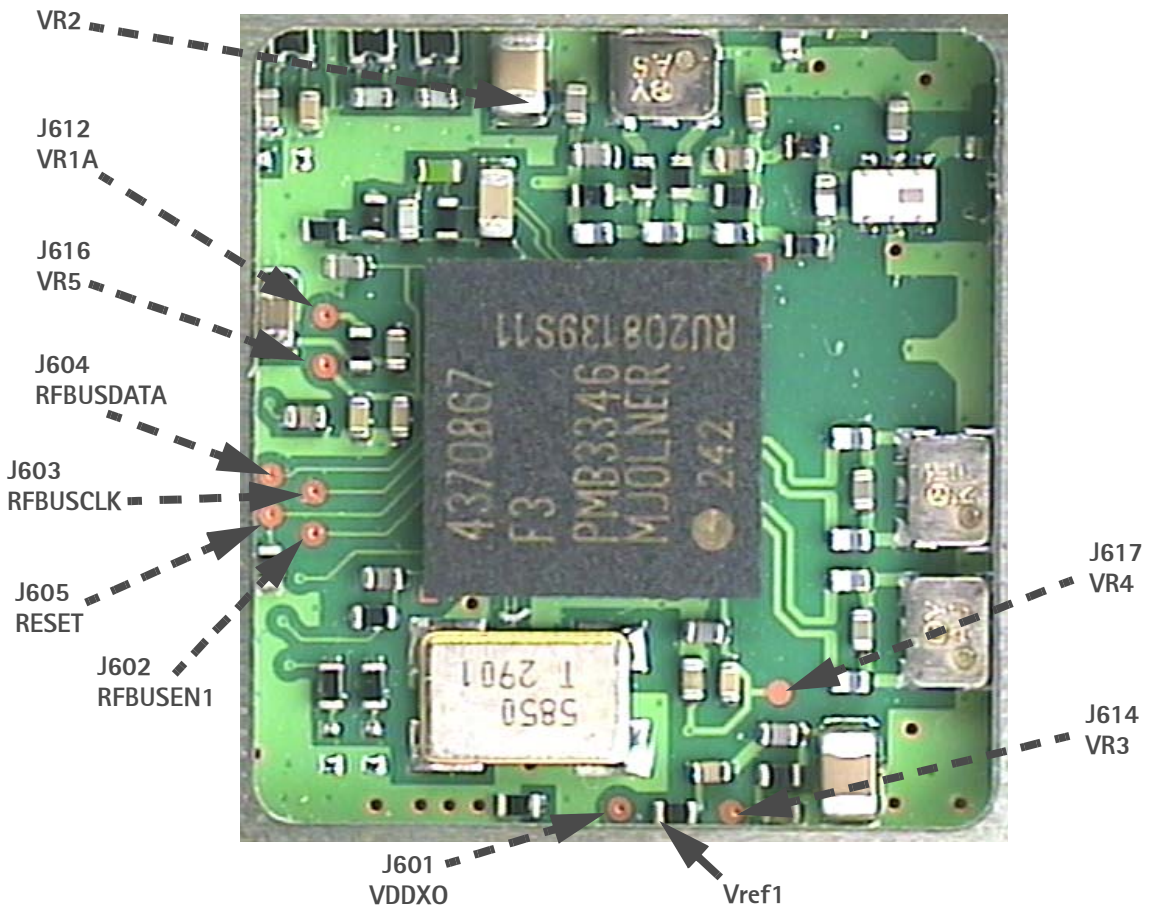


**Figure 2: RF Supply points inside Mjoelner can**

RF power supplies are generated in the UEM and can be measured either in the Mjoelner can or in the baseband can. Arrows mark the measurement points inside the pictures.


Copyright © 2003 Nokia Corporation
Company Confidential

Measurement of VR7 inside Mjoelner can requires removal of RF shielding frame. Therefore, VR7 shall be measured inside baseband can

**Measurement points in the receiver**

Measurement points are indicated on the picture below.

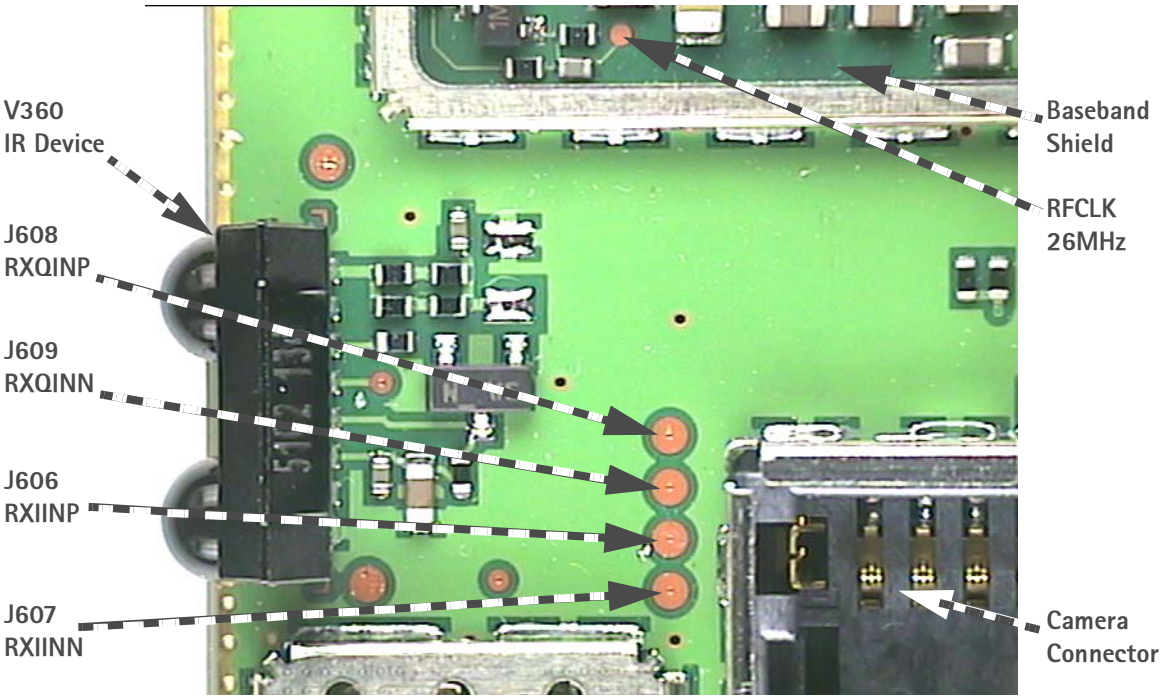


**Figure 3: Rx I and Q measurement points**

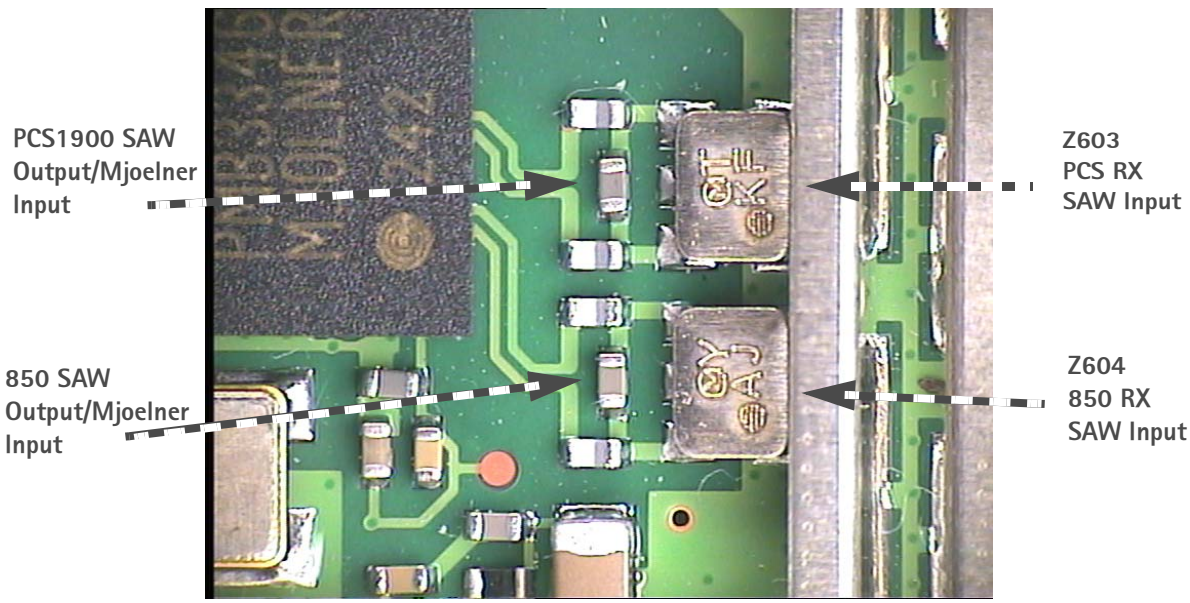


**Figure 4: Rx measurement points at Rx SAW filters and Mjoelner RF ASIC**


Copyright © 2003 Nokia Corporation
Company Confidential

## Measurement points in the transmitter

Measurement points are shown in the picture below,

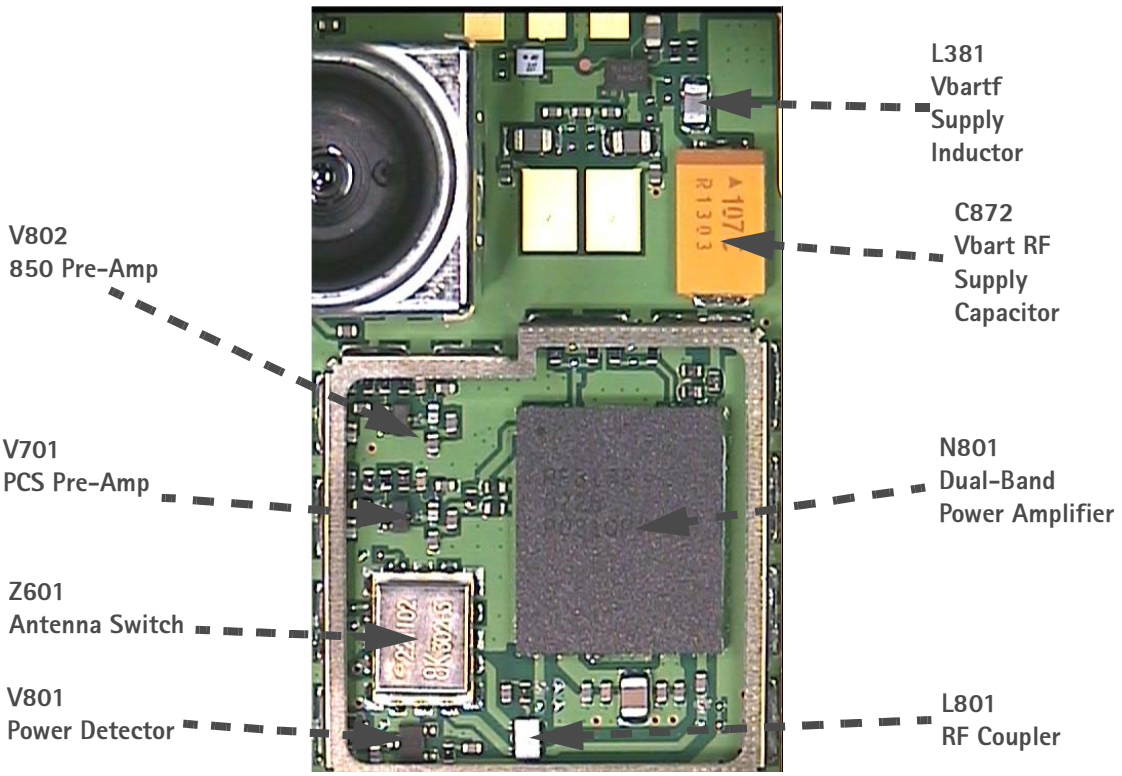


**Figure 5: Tx measurement points inside PA can**

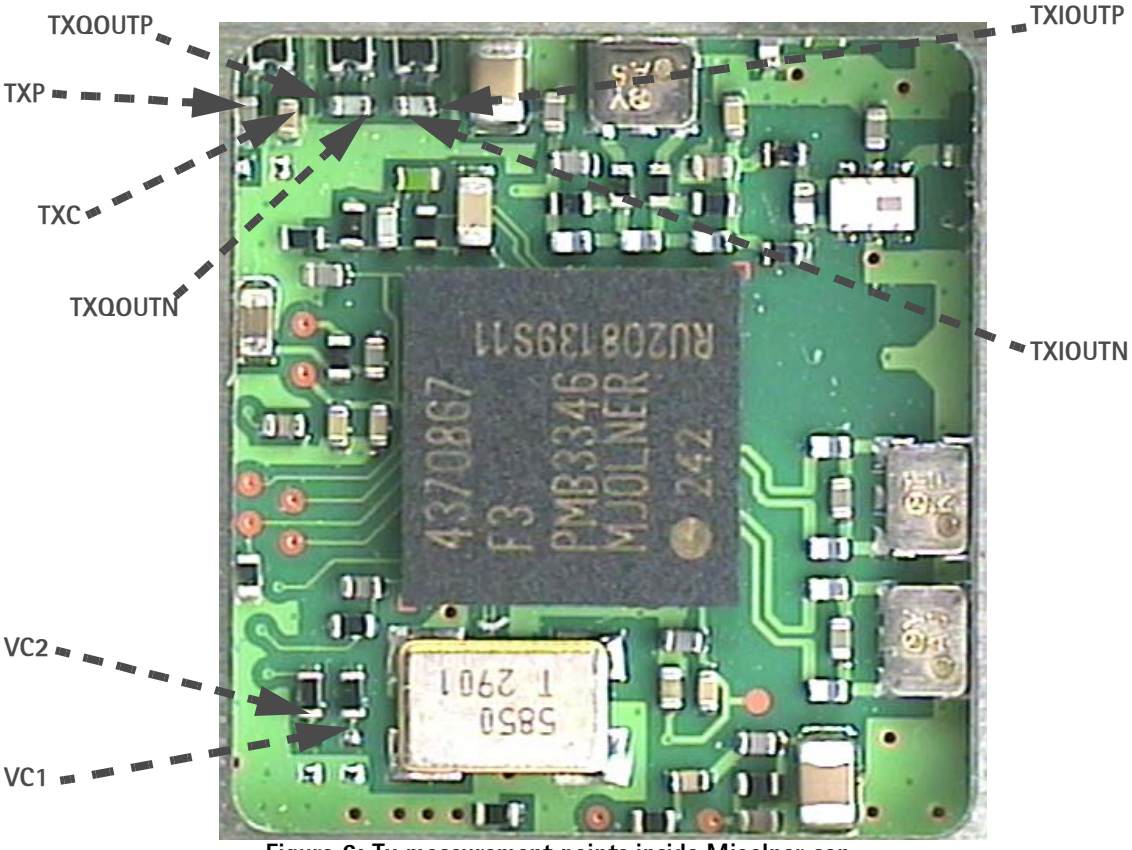


**Figure 6: Tx measurement points inside Mjoelner can**


Copyright © 2003 Nokia Corporation
Company Confidential

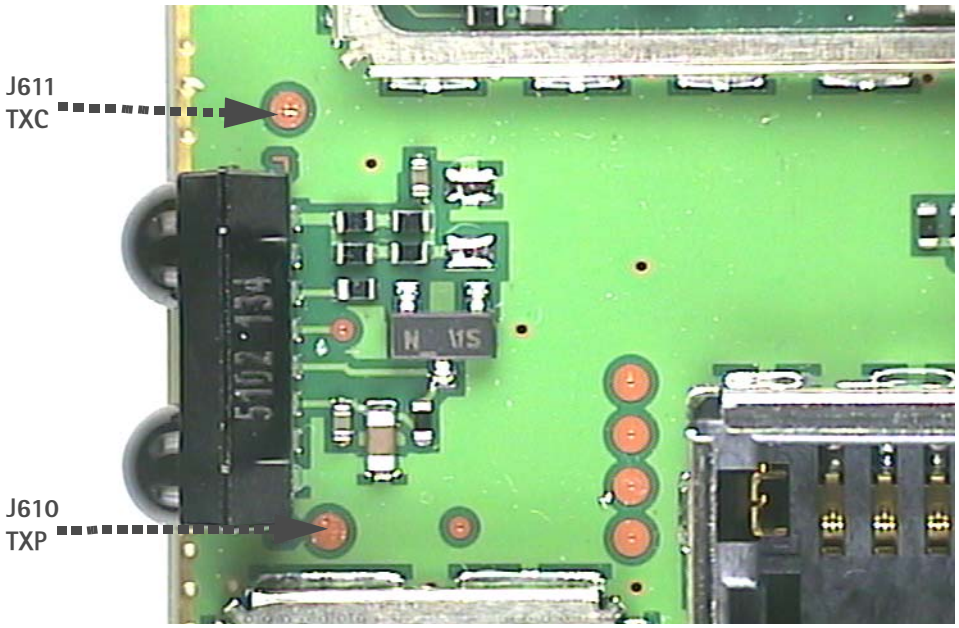


**Figure 7: Tx measurement points for TXC, TXP signals**

# RF in general

The RF part is a multi-band direct conversion transceiver, however, only two bands are used. Using direct conversion no intermediate frequencies are used for up- or down-conversion.

The VCO is set to either twice or four times (depending on the band used) the wanted RX or TX frequency. The VCO frequency is divided by either 2 or 4 and fed to the mixers (down-conversion) or modulators (up-conversion). Up- or down- conversion is done in one step, directly between RF frequency and DC. All up and down-conversion takes place in the RF ASIC named Mjoelner (N601).

Mjoelner RF ASIC also contains PLL and LNAs for all used bands. A DC control section is included in to power and/or control TX buffers, detector and antenna switch. The Mjoelner RF ASIC is controlled via a serial bus.

Mjoelner RF ASIC contains an integrated VCXO which uses an external 26 MHz Xtal. No analogue AFC signal is needed. AFC is done via the serial interface of Mjoelner.

The interface between Mjoelner RF ASIC, UPP and Bluetooth uses a 26 MHz reference clock. An external 26 MHz reference clock buffer is used to drive Bluetooth module.

The RF supports GPRS (General Packed Radio Service), meaning multi-slot operation, this will not require special equipment or procedures in repair situations.


Copyright © 2003 Nokia Corporation
Company Confidential

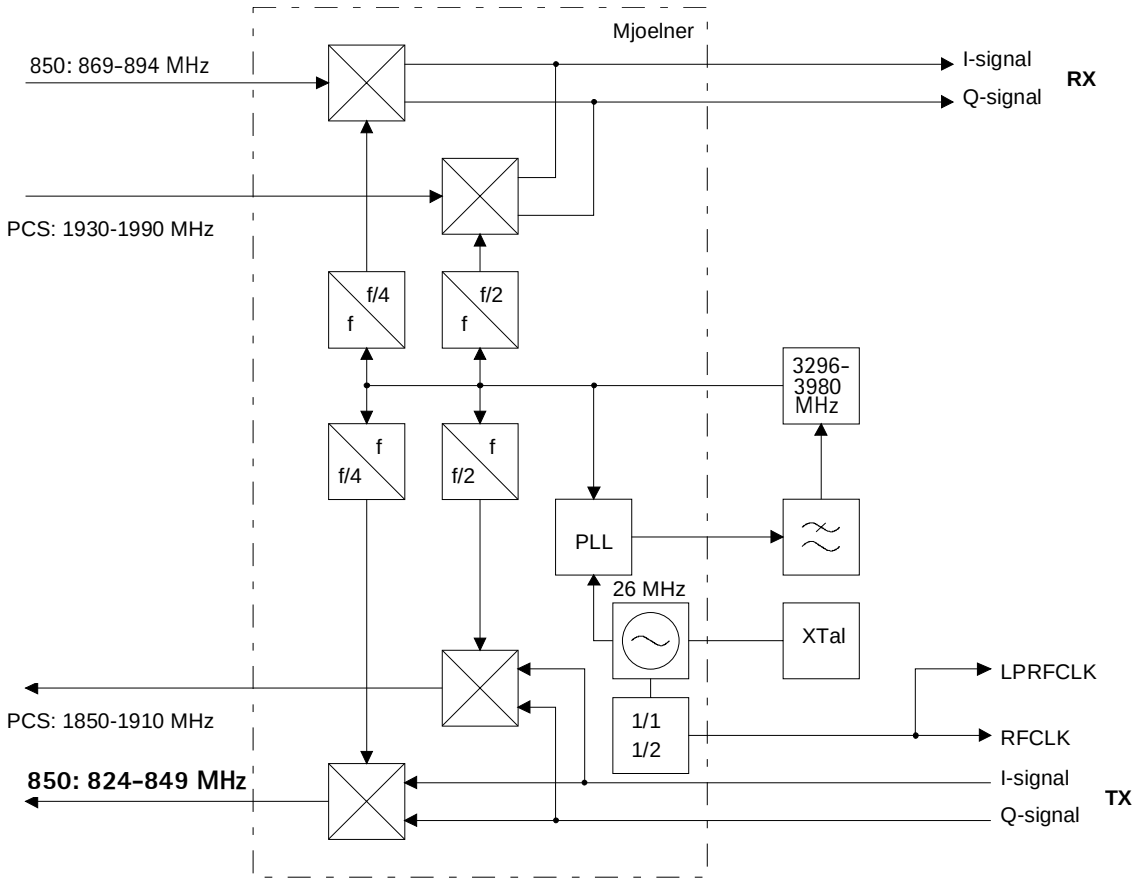


**Figure 8: RF frequency plan**


Copyright © 2003 Nokia Corporation
Company Confidential

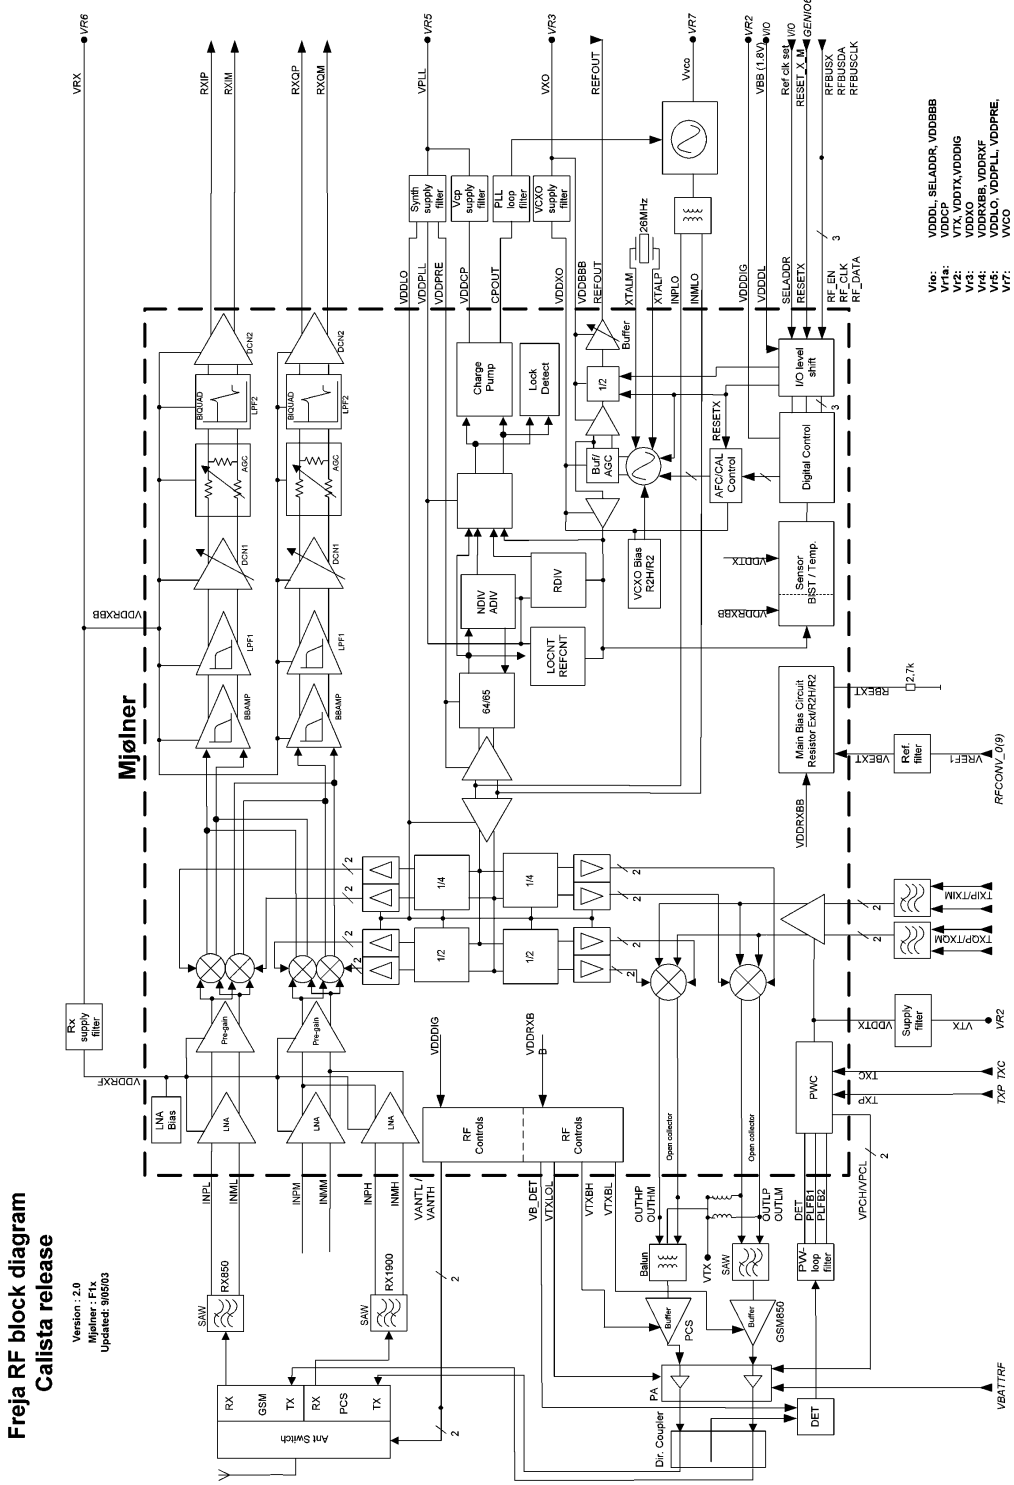


**Figure 9: RF Block diagram**


Copyright © 2003 Nokia Corporation
Company Confidential

# RF Power Supply Configuration

All power supplies for the RF Unit are generated in the UEM IC (D200). All RF supplies can be checked either in Mjoelner can or in BB can.

The power supply configuration used is shown in the block diagram below. Values of voltages are given as nominal outputs of UEM. Currents are typical values.

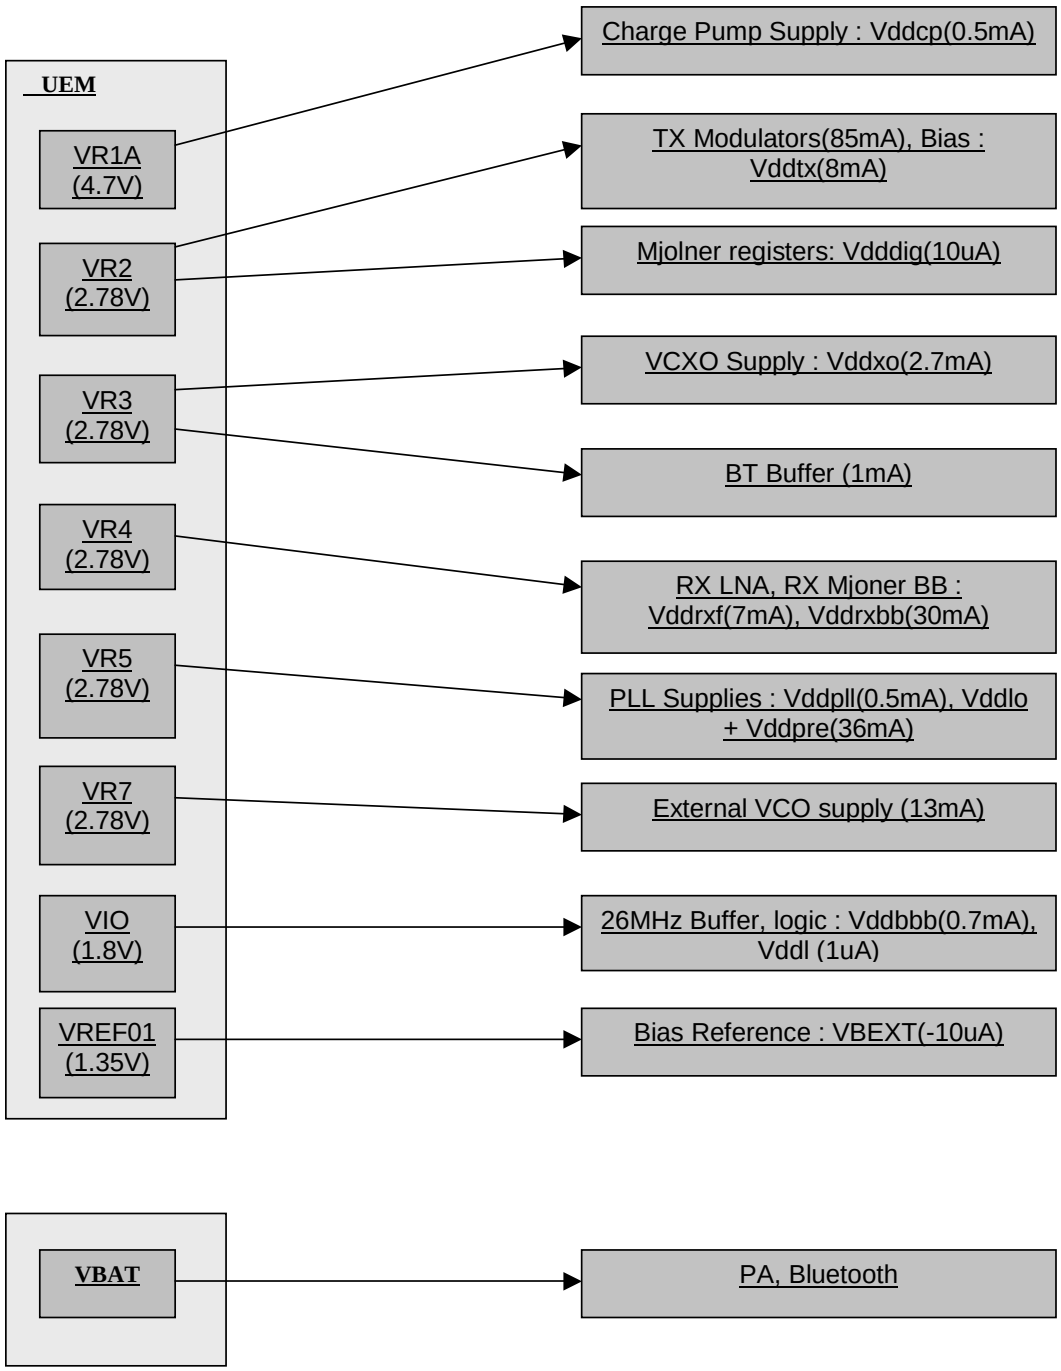


**Figure 10: RF Power distribution diagram**


Copyright © 2003 Nokia Corporation
Company Confidential

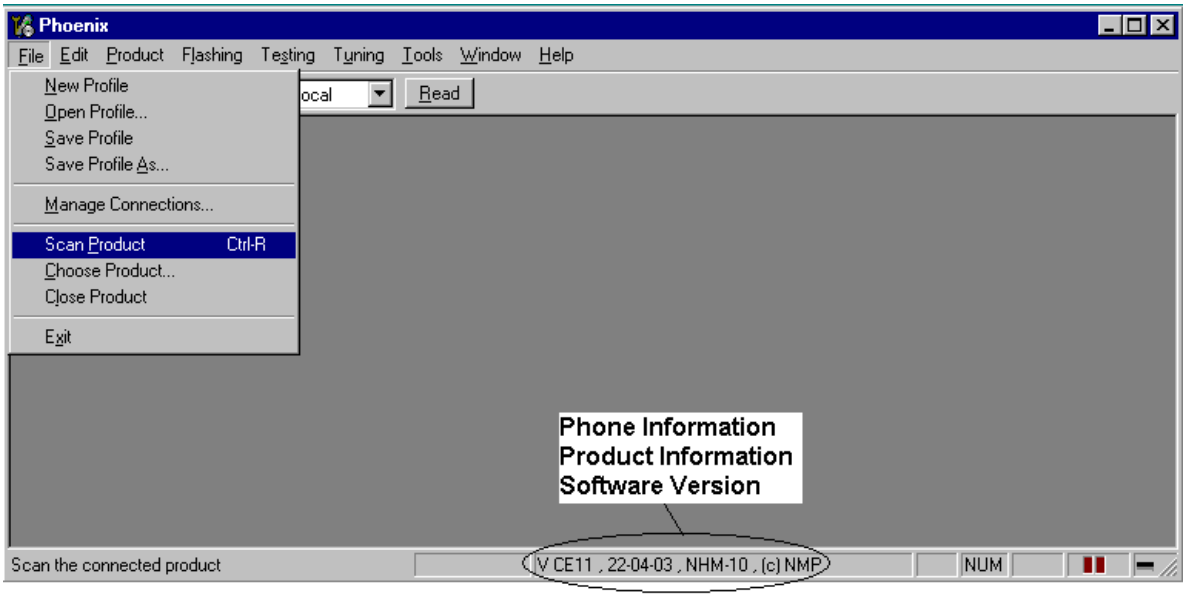


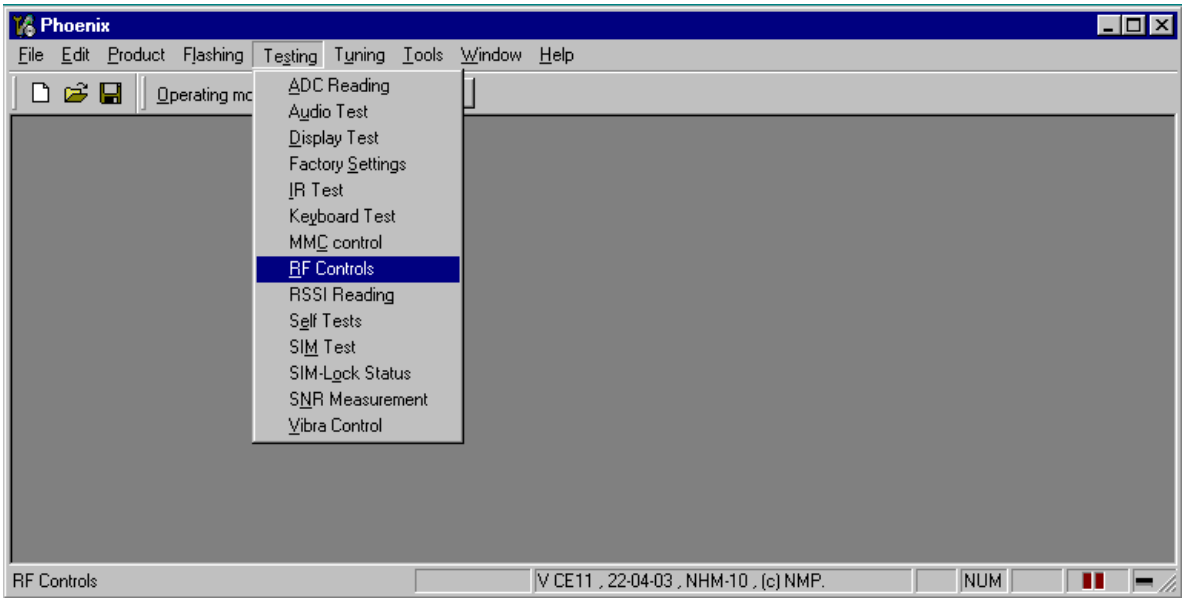


# Receiver

## General instructions for RX troubleshooting

Connect the the phone to a PC with DAU-9S cable and dongle and follow the following instructions:

### Measuring RX I/Q signals using RSSI reading

Start Phoenix Service Software

Open the FBUS connection

Select Scan Product Ctrl-R


Copyright © 2003 Nokia Corporation
Company Confidential

Wait until phone information shows in the window at the bottom of the screen.

Set operating mode to local mode

| | | |
|---|---|---|
| Select | Testing | Alt-S |
| | RF Controls | R |

Wait until the RF Controls window pops up

| | | |
|---|---|---|
| Select | Band | GSM 850 or GSM 1900 |
| | Active unit | RX |
| | Operation mode | Burst |
| | RX/TX Channel | 190 or 661 |

| | | |
|---|---|---|
| Select | Testing | Alt-S |
| | RSSI reading | G |

The setup should now look like this:

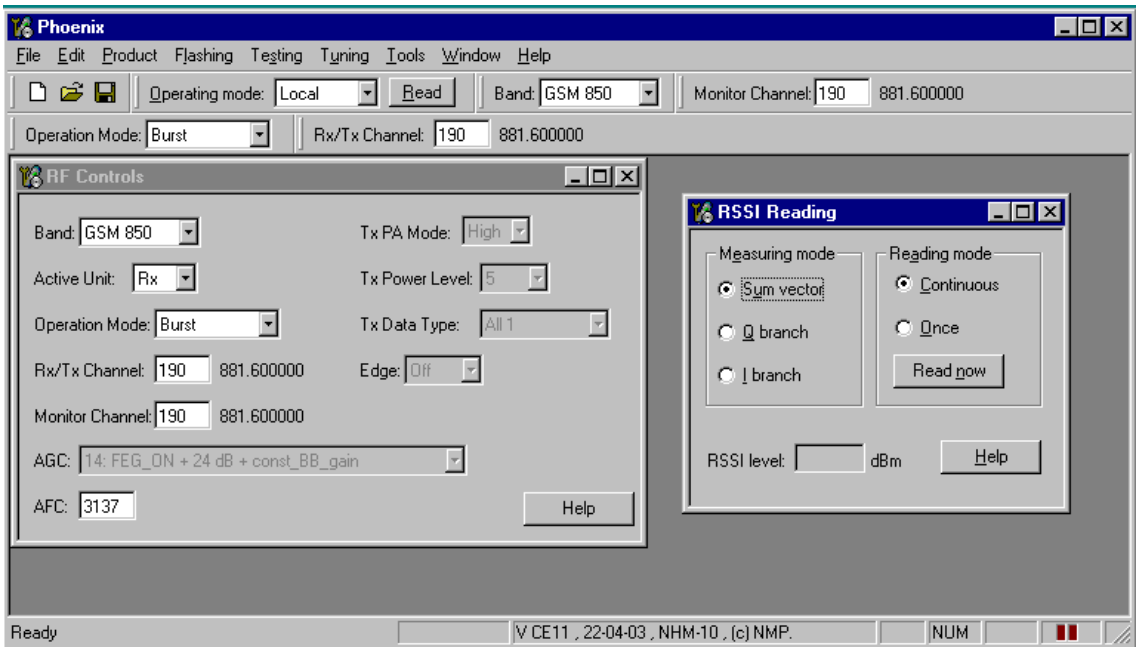


Apply a signal with a frequency of

GSM 850: 881.667 MHz (channel 190 + 67.710kHz offset)
GSM1900: 1960.067 MHz (channel 661 + 67.710kHz offset)

and a power level of -80dBm to the RF-connector (remember to compensate for cable attenuation).

In RSSI reading click on Read now.

The resulting RSSI level should be –80dBm in each band.


Copyright © 2003 Nokia Corporation
Company Confidential

**Measuring RX performance using SNR measurement**

Start Phoenix Service Software

Open the FBUS connection

Select Scan Product Ctrl-R

Wait until phone information is shown in the lower window at the bottom of the screen.

Set operating mode to local mode

Select Testing Alt-S
RF Controls R

Wait until the RF Controls window pops up

Select Band GSM 850 or GSM1900
Active unit RX
Operation mode **Burst**
RX/TX Channel 190 or 661

Select Testing Alt-S
SNR Measurement N
select Fast SNR Radio Button

The setup should now look like this:

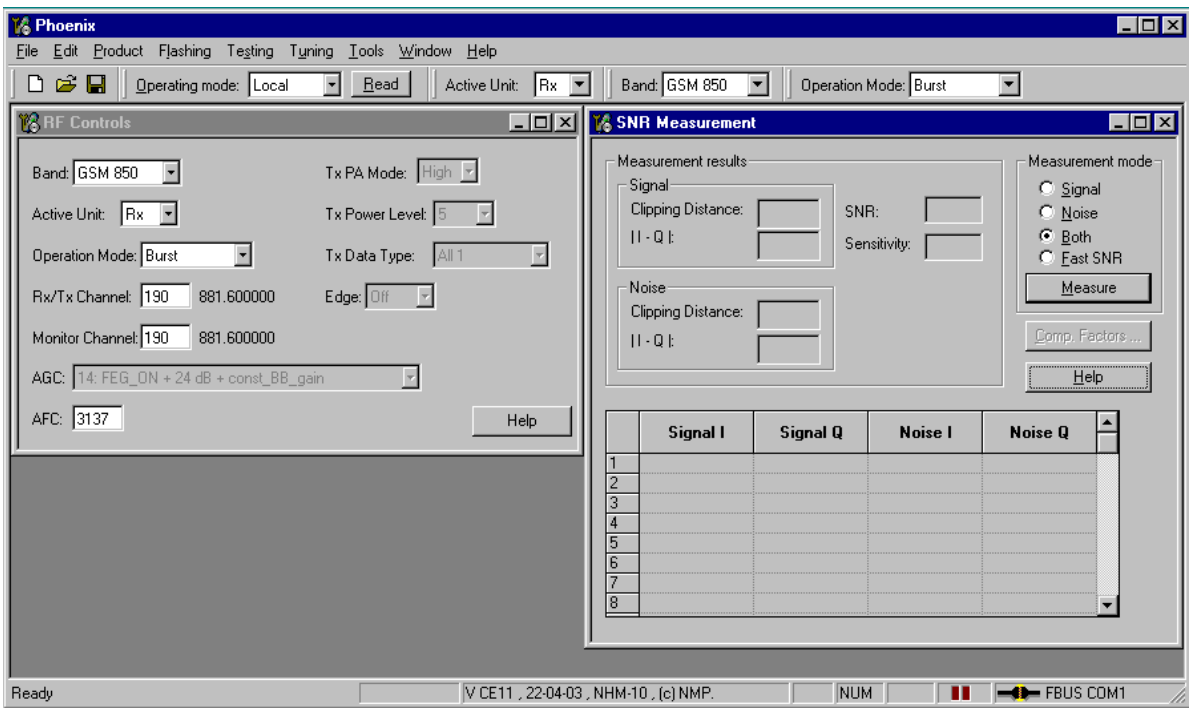



Copyright © 2003 Nokia Corporation
Company Confidential

Choose respective band (GSM850 or GSM1900)

Press measure. A window pops up, e.g. for GSM850 band:

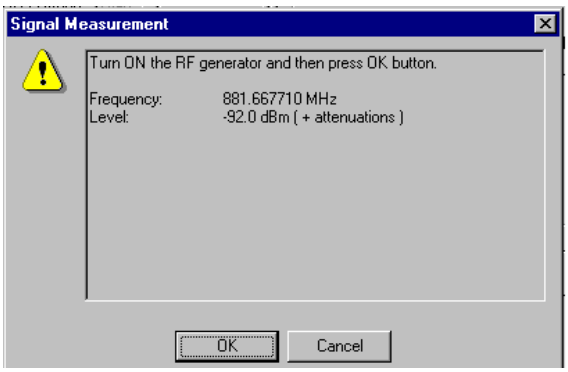
Signal Measurement
Turn ON the RF generator and then press OK button.
Frequency: 881.667710 MHz
Level: -92.0 dBm ( + attenuations )
OK
Cancel

Connect an external signal generator to the RF connector of the phone and set the generator as told in the window, taking care for external cable losses.

Press ok and the window closes.

Read the SNR result. SNR should be: GSM850 >20dB
GSM1900 >18dB

**Measuring frontend power levels using Spectrum analyzer**

**Spectrum Analyzer (SA) level values depend on the probe type and should be validated using a good sample.**
The levels that are given here are measured using a resistive probe (50Ohm semi-rigid cable).

Start Phoenix Service Software

Open the FBUS connection

| | | |
|---|---|---|
| Select | Scan Product | Ctrl-R |

Wait until phone information shows in the lower right corner of the screen.

Set operating mode to local mode

| | | |
|---|---|---|
| Select | Testing | Alt-S |
| | RF Controls | R |

Wait until the RF Controls window pops up

| | | |
|---|---|---|
| Select | Band | GSM 850 or GSM1900 |
| | Active unit | RX |
| | Operation mode | **Continuous** |
| | RX/TX Channel | 190 or 661 |

Please refer to the fault finding chart for proper levels at different test points.


Copyright © 2003 Nokia Corporation
Company Confidential

**Measuring analogue RX I/Q signal voltages using Oscilloscope**

Measuring with an oscilloscope on "RXIINN" or "RXQINN" is recommended only if RSSI reading does not provide enough information. No dedicated test points exist for RX I and Q signals, but they can be accessed by probing on via hole plating. Input level = -80dBm

Start Phoenix Service Software

| | | |
|---|---|---|
| Select | Scan Product | Ctrl-R |

Wait until phone information shows in the lower right corner of the screen.

Set operating mode to local mode

| | | |
|---|---|---|
| Select | Testing | Alt-S |
| | RF Controls | R |

Wait until the RF Controls window pops up

| | | |
|---|---|---|
| Select | Band | GSM 850 or GSM1900 |
| | Active unit | RX |
| | Operation mode | **continuous** |
| | RX/TX Channel | 190 or 661 |
| | AGC | 14 |

Following picture should be seen on a working 850 receiver:

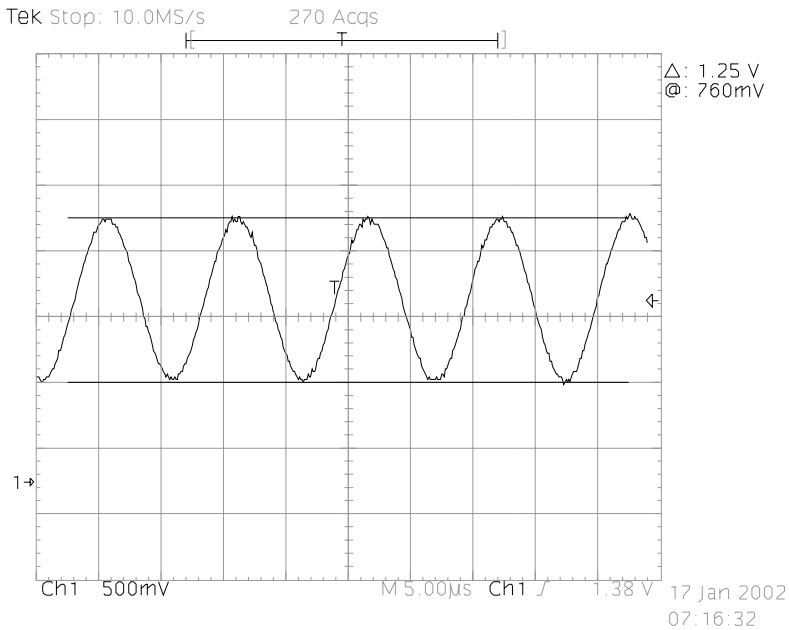


| | |
|---|---|
| Signal amplitude | 1.25V |
| DC offset | 1,35V |
| Frequency | 67kHz |


Copyright © 2003 Nokia Corporation
Company Confidential

## Receiver RSSI readings from Phoenix

Open Phoenix and select Fbus connection.

Set up signal generator to 881.668MHz, -80dBm.

Select 'File', 'Scan Product' from pull down menu.

Select 'RF', 'Tuning', 'RF Controls'.

Select 'RF', 'Testing', 'RSSI reading'.

Observe RSSI level in the box.

Change band to GSM 1900 in RF control box and frequency to 1960.0668MHz on signal generator.

Observe RSSI level.

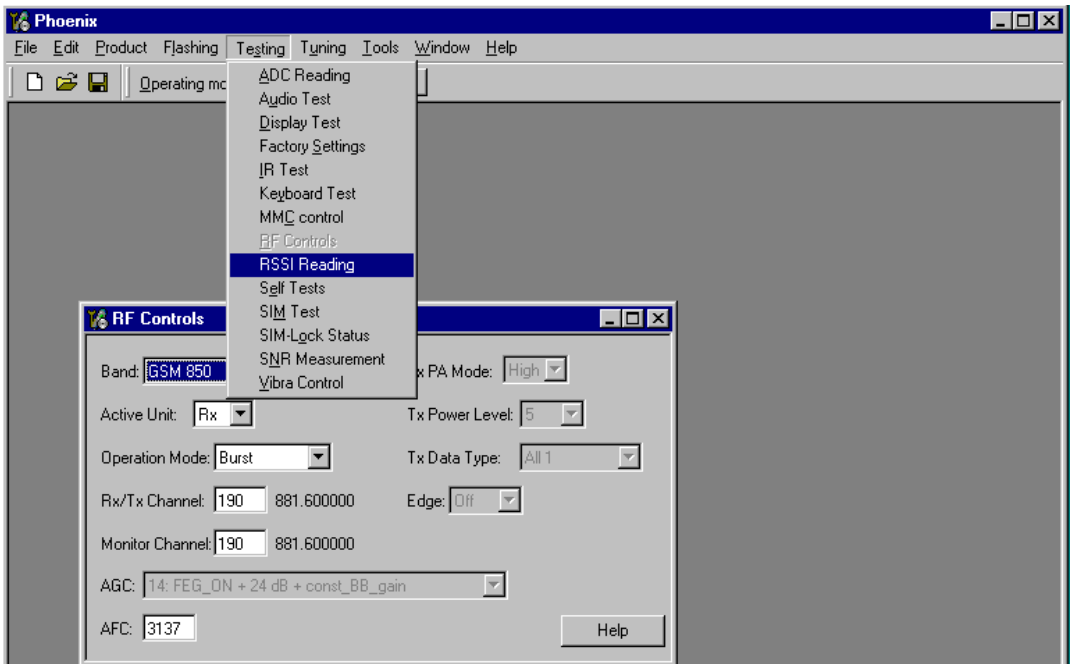


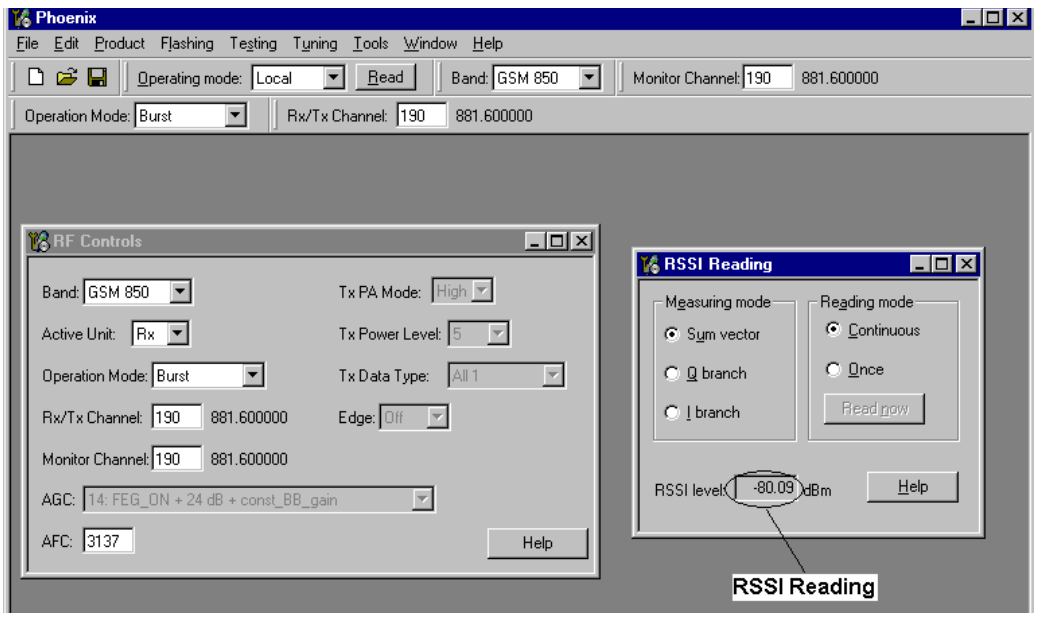



Copyright © 2003 Nokia Corporation
Company Confidential

## Receiver fault finding

Set up Phoenix as if doing RSSI measurements.

Ascertain which Rx band is faulty.

Refer to Rx fault finding flow chart.

Set signal generator frequency to 881.67MHz for 850 or 1960.07MHz for PCS 1900.

Set signal generator amplitude to -60dBm.

Note: That checking the RF inputs to SAW filters Z603 & Z604 will be extremely difficult with the Mjoelner Can Shield in place. If this is impossible to get to, try checking the test points shown on the antenna switch Z601.

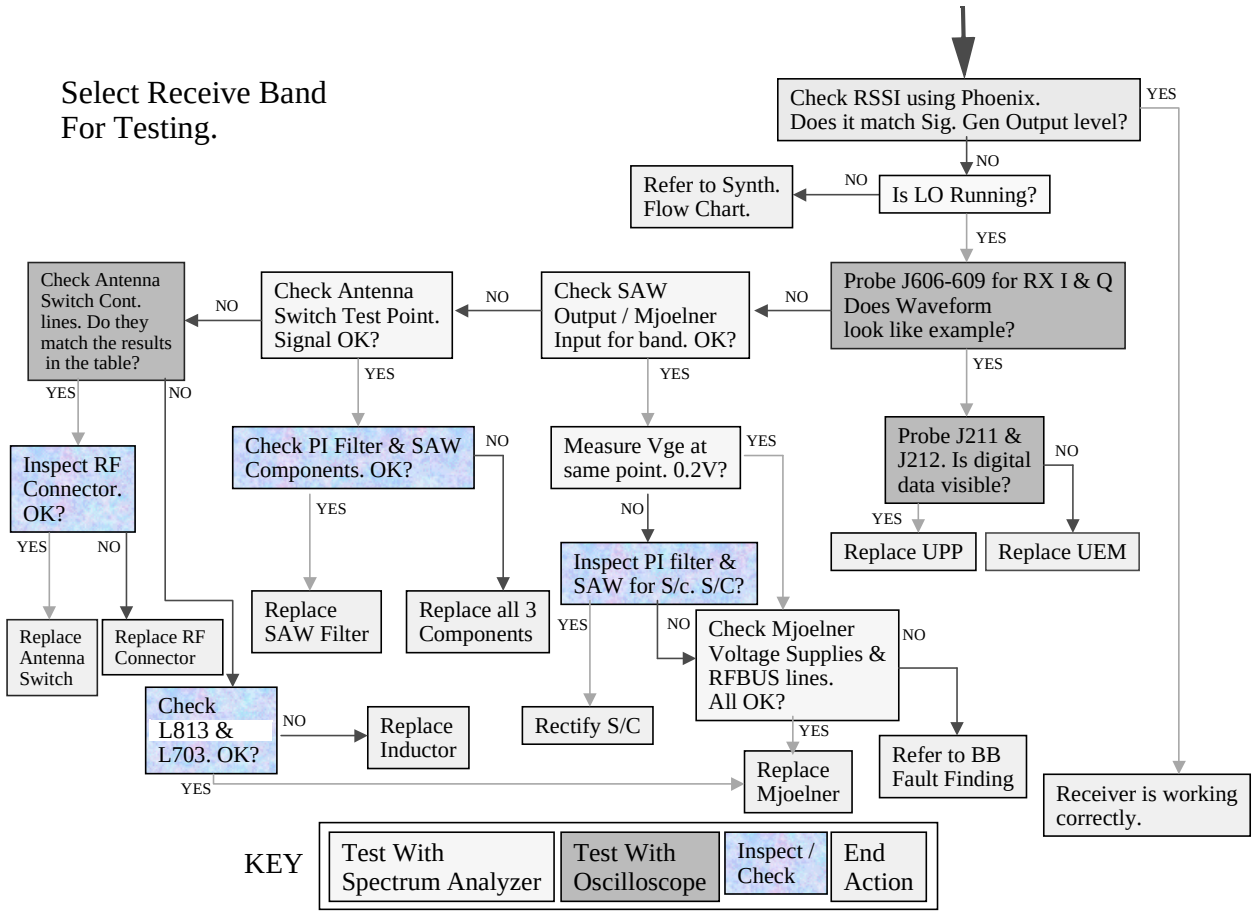


## Rx Signal paths

The signal paths of the receiver are shown in following block diagram. Note that the picture shows GSM850 receiver (top) and GSM1900 (PCS) receiver (down).


Copyright © 2003 Nokia Corporation
Company Confidential

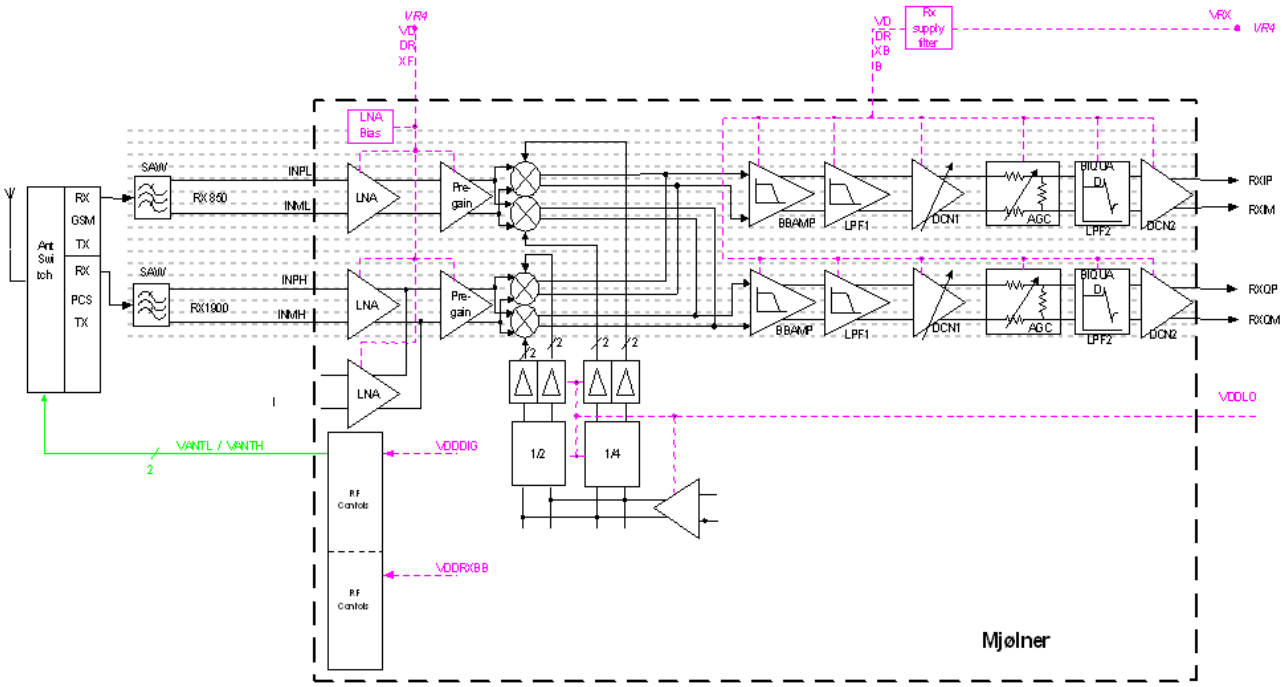


## Antenna switch (RX/TX Switch)

From the antenna-pad (X600) the RF signal is fed through the antenna connector (X602) to the RX/TX switch (Z601). The antenna connector represents a mechanical switch between internal antenna and external antenna feed.

The RX/TX switch (Z601) works as diplexer.

From 850-RX output of the antenna switch the RX signal is routed in the inner layers of the PWB to the GSM850 SAW filter (Z604). From 1900-RX output the RX GSM1900 signal is routed to the GSM1900 SAW filter (Z603).

The RX/TX switch with routed lines has following typical insertion losses:

0.9dB@GSM850 and 1.0dB@GSM1900.

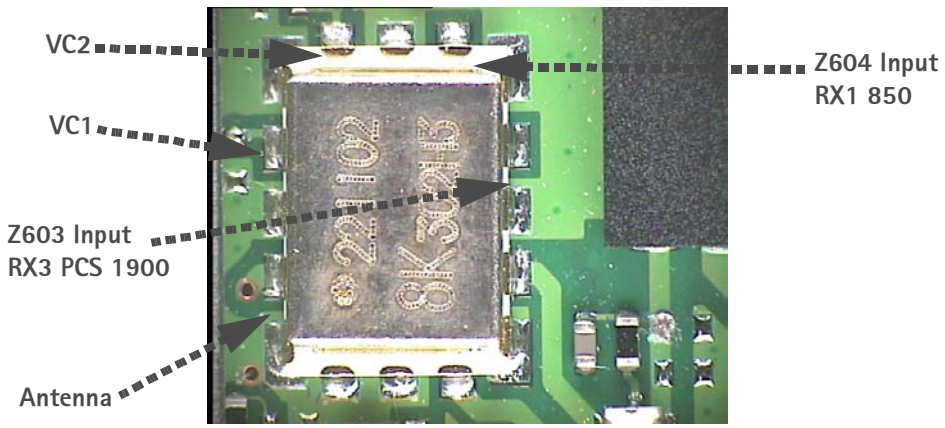


**Figure 11: Antenna switch Rx test points**


Copyright © 2003 Nokia Corporation
Company Confidential

**Front-end**

The RX front end includes two SAW filters (GSM850 (Z604) and GSM1900 (Z603)). Each of the SAW filters is matched with a differential matching circuit (LC-type) to the corresponding LNA input of Mjoelner RF ASIC (N601). The SAW filters provide out-of-band blocking immunity, the integrated LNAs provide the front-end gains. Each of the SAW filters has a single-ended input and a balanced output which provides a balanced RX signal to the corresponding input of the Mjoelner RF ASIC.

The SAW filters have maximum insertion losses of

3.5dB@GSM850 and 4.0dB@GSM1900.

**RX paths of Mjoelner RF ASIC**

The balanced RX signal is amplified by the integrated LNA and the subsequent Pre-Gain stage. After amplification the RX signal is down-converted with a LO signal coming from the local oscillator.

The RX paths of Mjoelner RF ASIC consist of following building blocks:

- Separate LNAs for each band: GSM850 and GSM1900.
- Two PREGAIN amplifiers, one for GSM850 and one for GSM1900.
- Two passive I/Q mixers (MIX), one for GSM850 and for GSM1900.

The resulting BB signal is further amplified in the BB chain. For that no external circuitry is required:

- Base band amplifiers (BBAMP1). That amplifiers implement the initial channel filtering.
- Low pass filters (LPF1).
- DC compensation / AGC amplifiers (DCN1). They implement gain steps from 0dB to 24dB in 6dB steps.
- Attenuators (AGC). They implement gain steps from -48dB to 0dB in 6dB steps, yielding a total gain range of 72dB together with DCN1.
- Bi-quad filters (LPF2).
- DC compensation amplifiers (DCN2).

The differential base band outputs are internally DC coupled and can be connected directly to the ADC inputs of the RF converter chip. The common mode level is set equal to the VBEXT reference voltage.

# GSM850 Transmitter

## General instructions for GSM850 TX troubleshooting

Apply a RF-cable to the RF-connector to allow the transmitted signal to act as normal. RF-cable should be connected to measurement equipment (GSM Test equipment, Powermeter, Spectrum Analyzer, or similar). Be sure to use at least a 10-dB attenuator, otherwise the analyzer may be overloaded.


Copyright © 2003 Nokia Corporation
Company Confidential

Connect the phone to a PC with DAU-9P cable and dongle and follow the following instructions:

Connect the phone to a power supply (3.5 ... 4V).

Open Phoenix and select Fbus connection.

Select 'File' and 'Scan Product' from the pull down menus.

Select 'Testing', 'RF controls' from the pull down menu.

Chose Transmit Band for testing, Use the automatically selected channel.

Set Operation Mode to 'Burst'.

Choose the Power level you want the phone to operate at.

Set spectrum analyzer centre frequency, 836.6MHz for 850 & 1880MHz PCS 1900 and set Span to 1MHz.

Set Amplitude of spectrum analyzer reference level to one that you can clearly see the transmit pulse according to the kind of test probe you are using.

Diagnose as per fault finding flow chart.

Note: Be careful when selecting the operation mode, if 'Continuous' is selected prolonged transmission may damage the phone

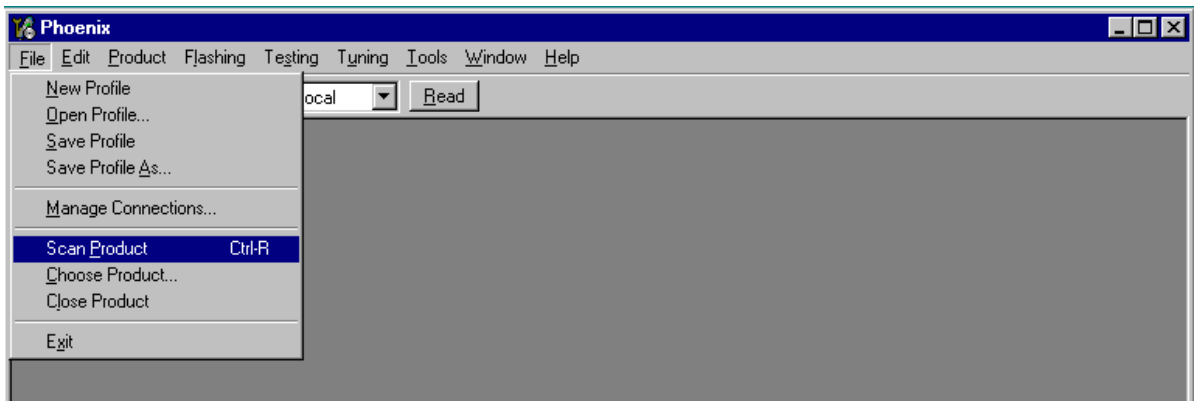



Copyright © 2003 Nokia Corporation
Company Confidential

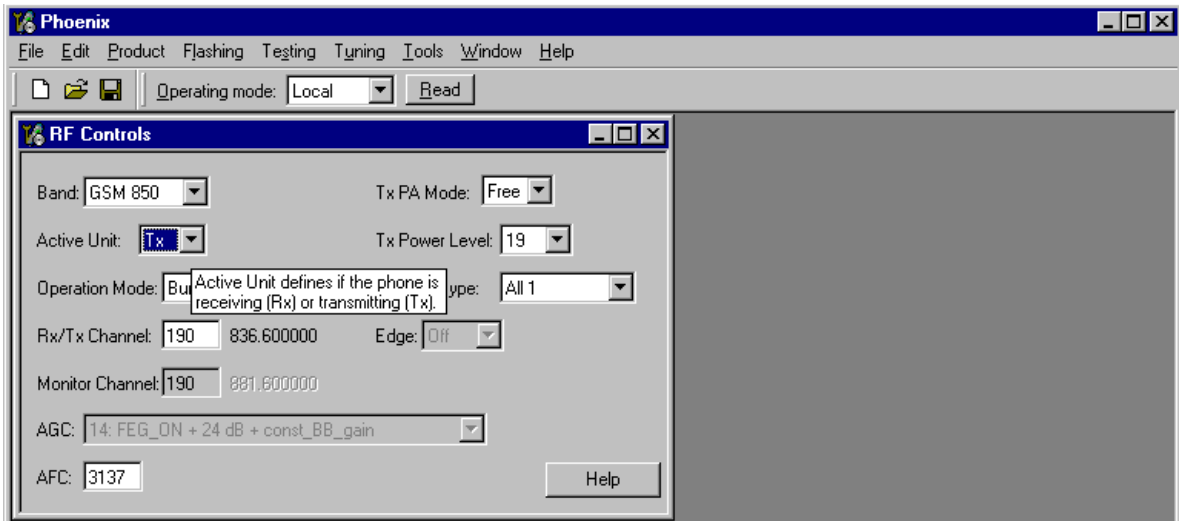


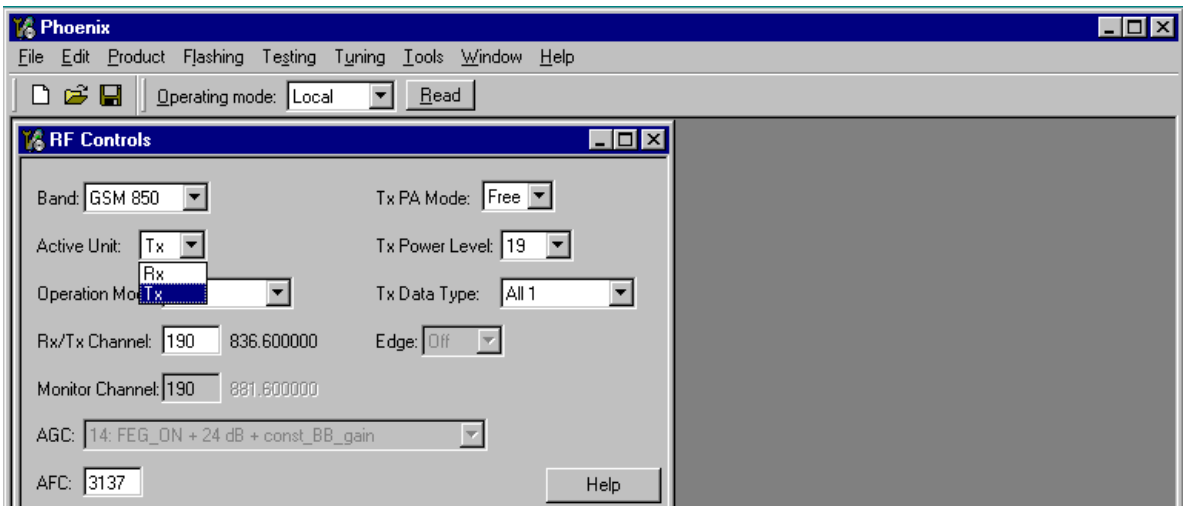


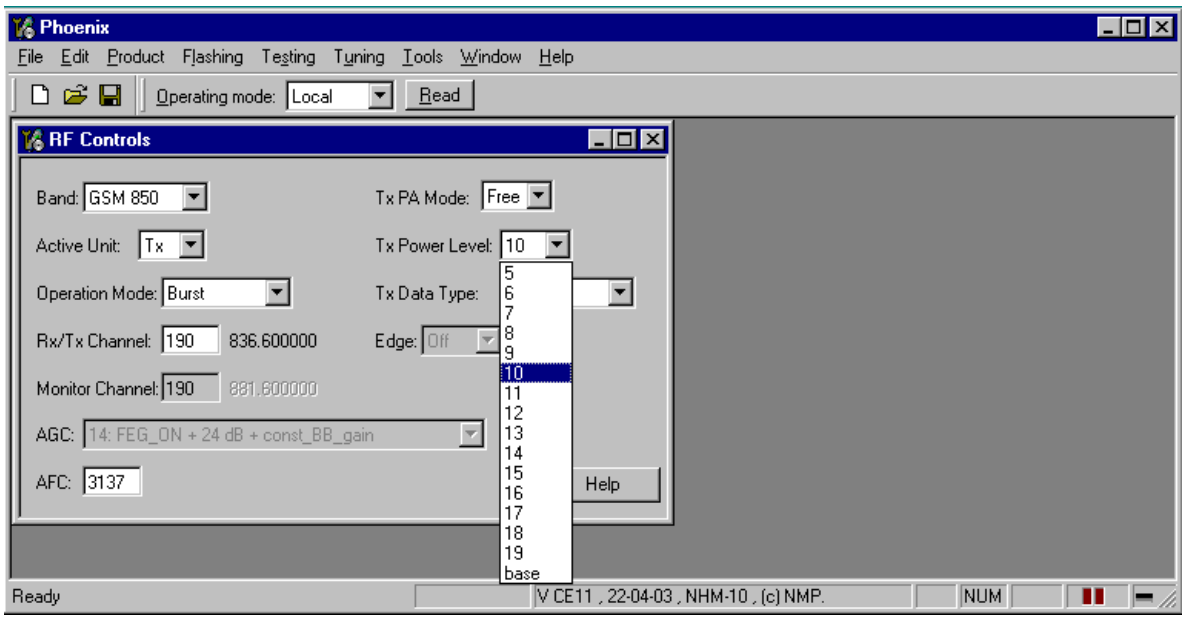



Copyright © 2003 Nokia Corporation
Company Confidential

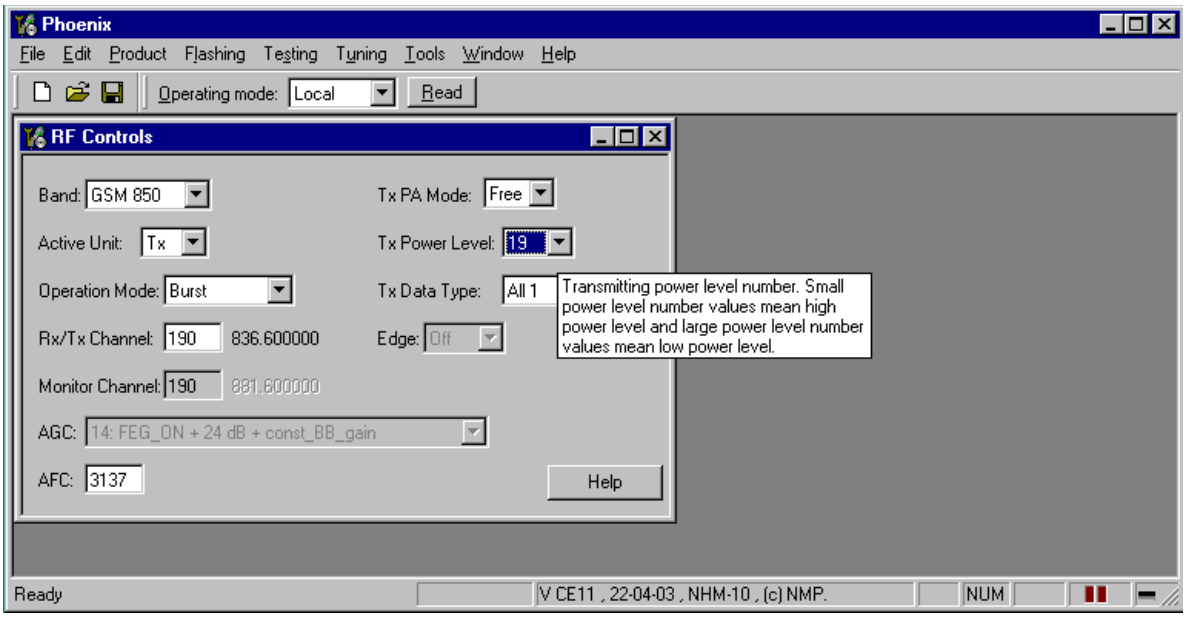
Phoenix
File Edit Product Flashing Testing Tuning Tools Window Help
Operating mode: Local
Read
RF Controls
Band: GSM 850
Tx PA Mode: Free
Active Unit: Tx
Tx Power Level: 19
Operation Mode: Burst
Tx Data Type: All 1
Transmitting power level number. Small power level number values mean high power level and large power level number values mean low power level.
Rx/Tx Channel: 190 836.600000
Edge: Off
Monitor Channel: 190 881.600000
AGC: 14: FEG_ON + 24 dB + const_BB_gain
AFC: 3137
Help
Ready
V CE11 , 22-04-03 , NHM-10 , (c) NMP.
NUM

# TX Digital I & Test Points

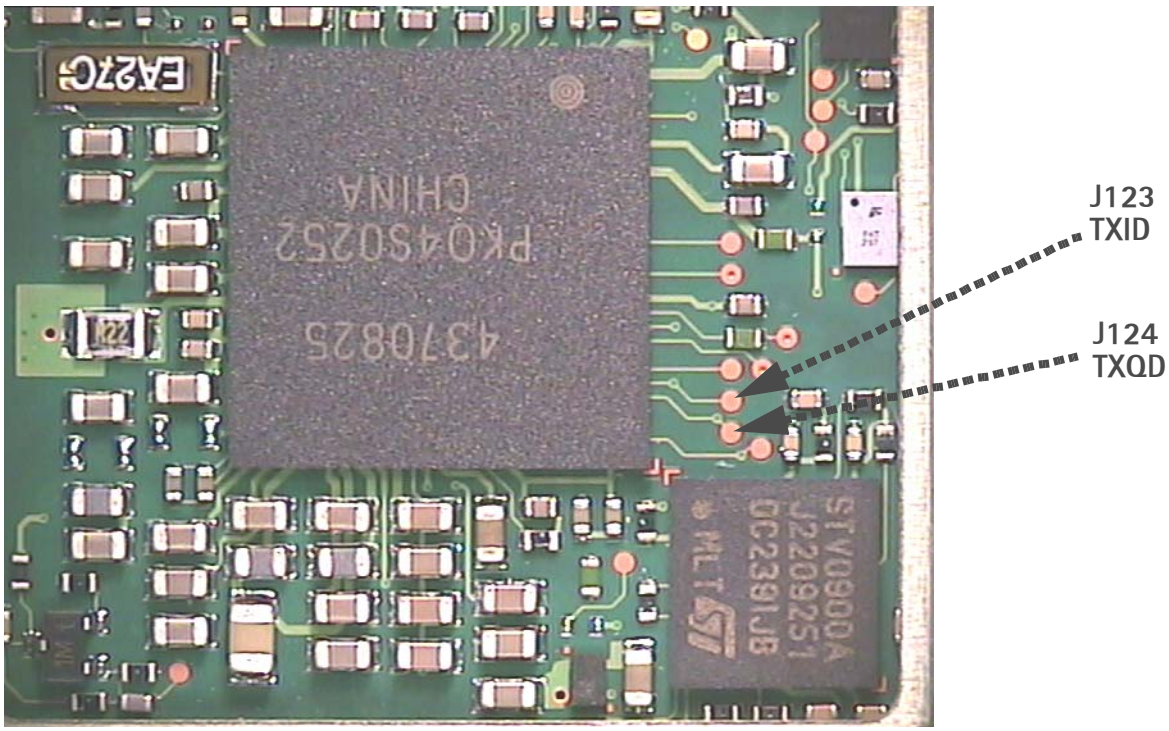



Copyright © 2003 Nokia Corporation
Company Confidential

# Tx Digital I & Q Data, J123 & 124

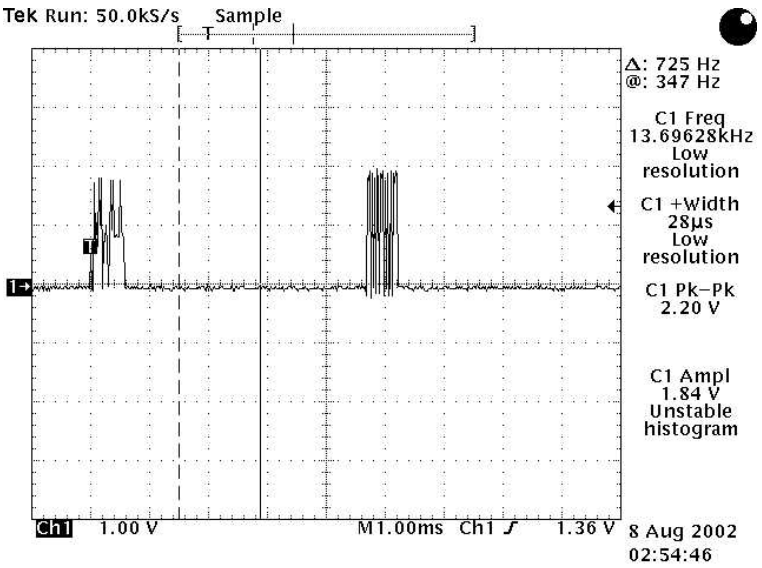


# Mjoelner Can Tx Test Points

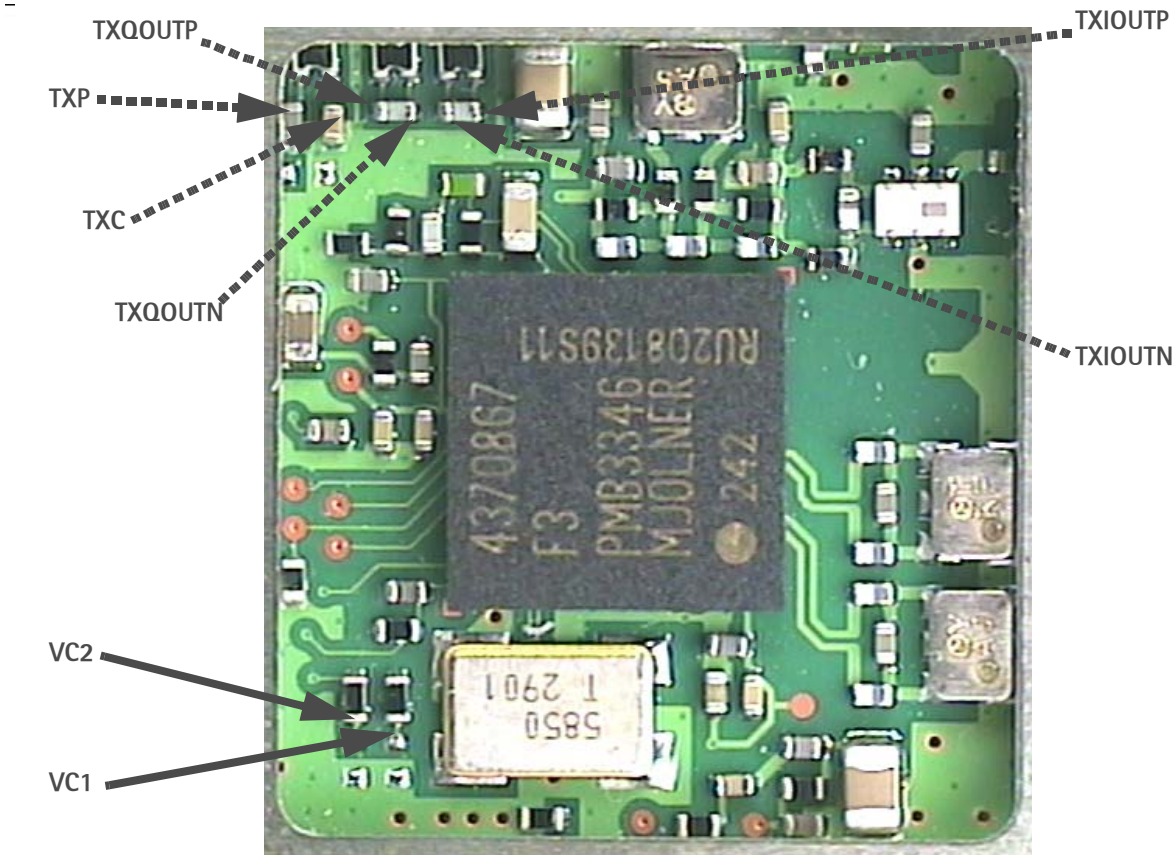



Copyright © 2003 Nokia Corporation
Company Confidential

## TX Analog I & Q Data, C715 & C716

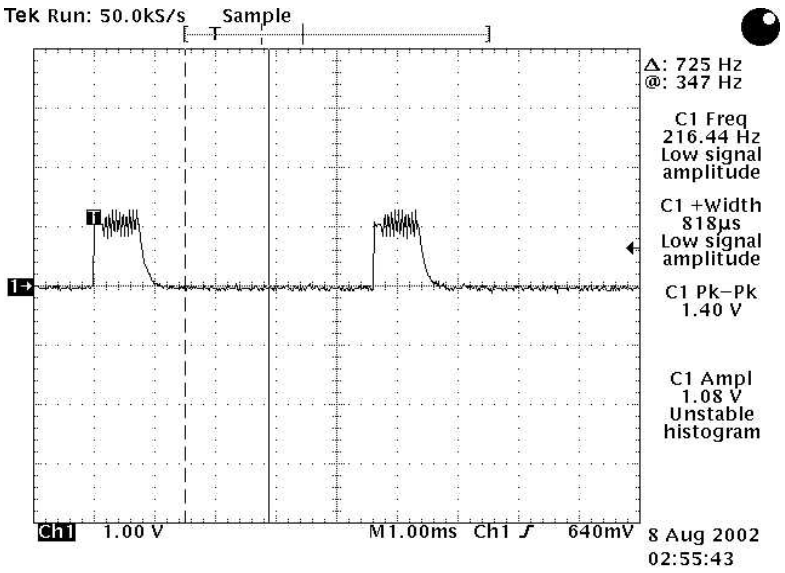


## Transmit TXP & TXC Test Points

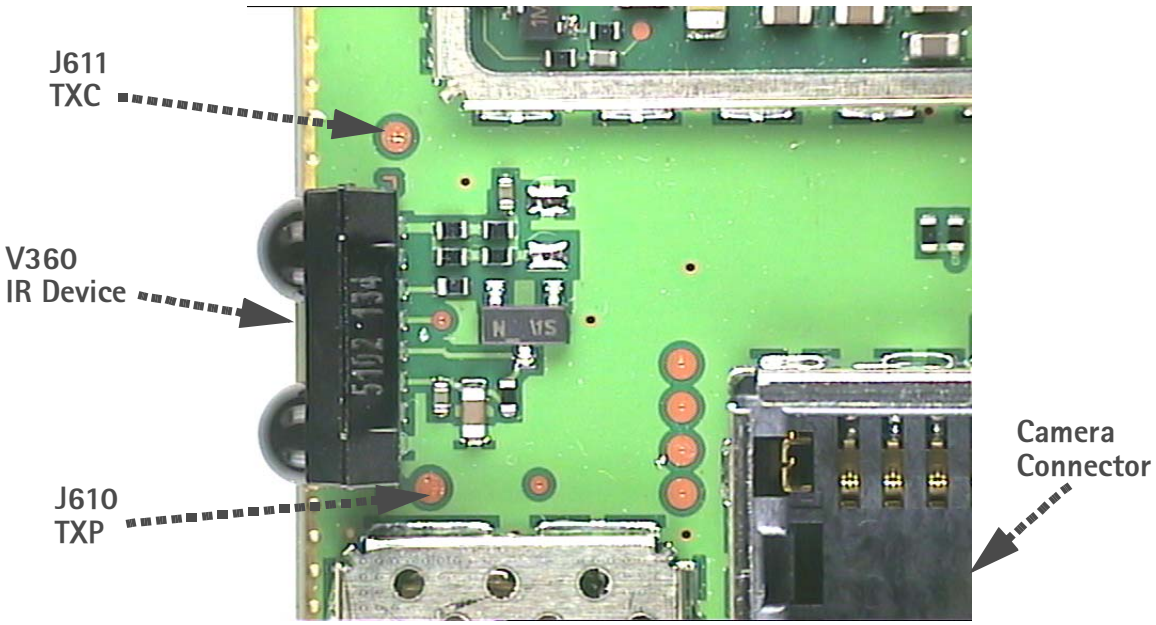



Copyright © 2003 Nokia Corporation
Company Confidential

## TXP & TXC Lines during Transmission

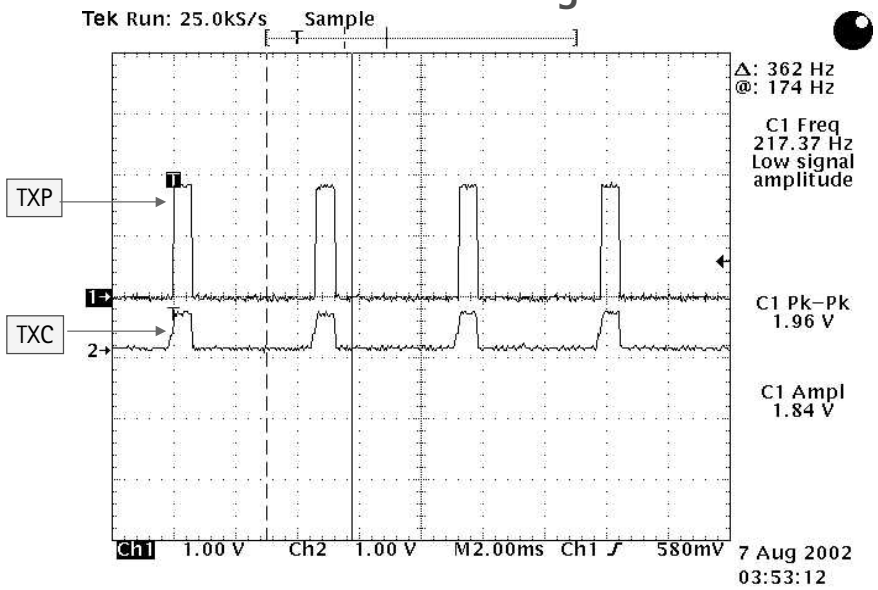


## TXP / TXC Mask

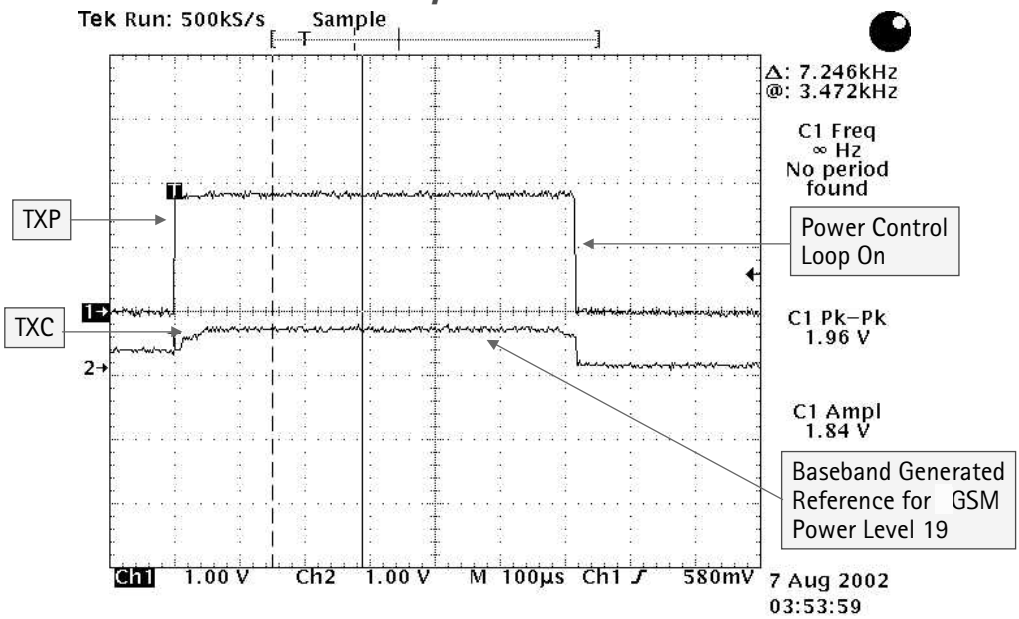



Copyright © 2003 Nokia Corporation
Company Confidential

## 850 TX Can Test Points

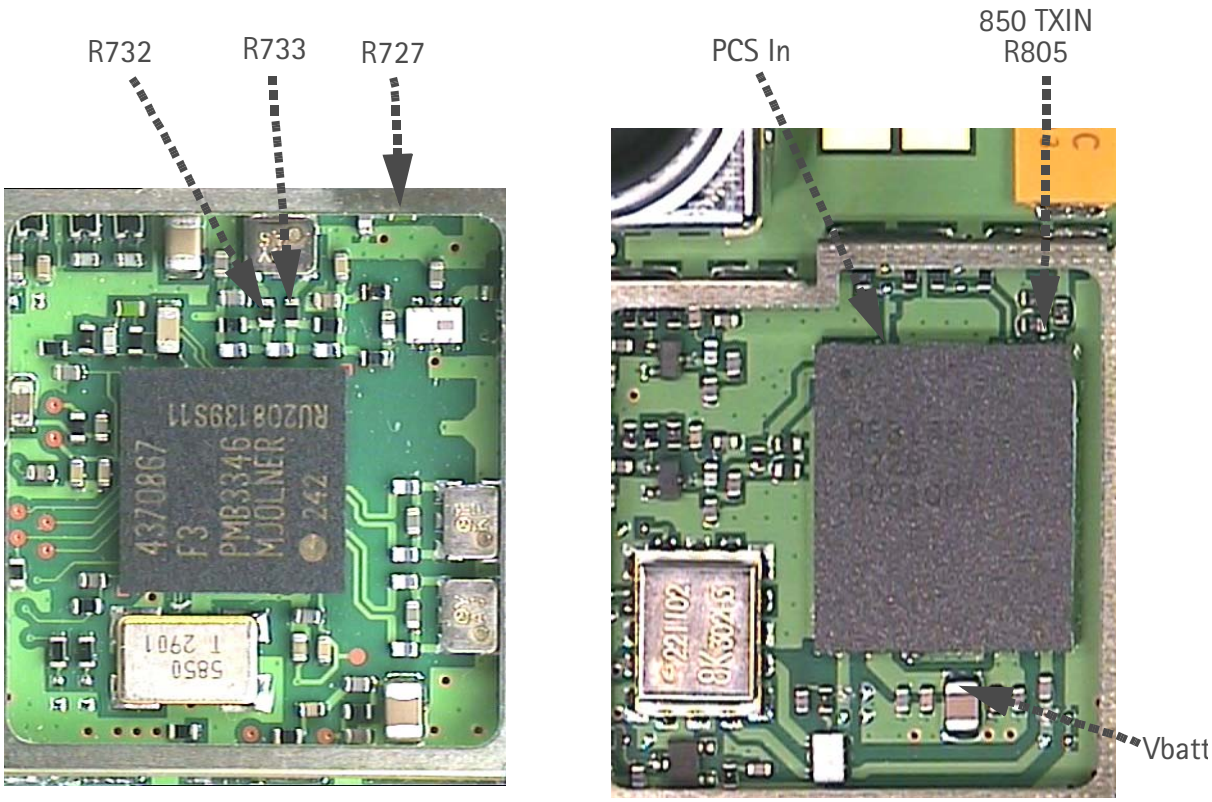


## VTXB_850 (850 V802 Pre-Amp Biasing Waveform)

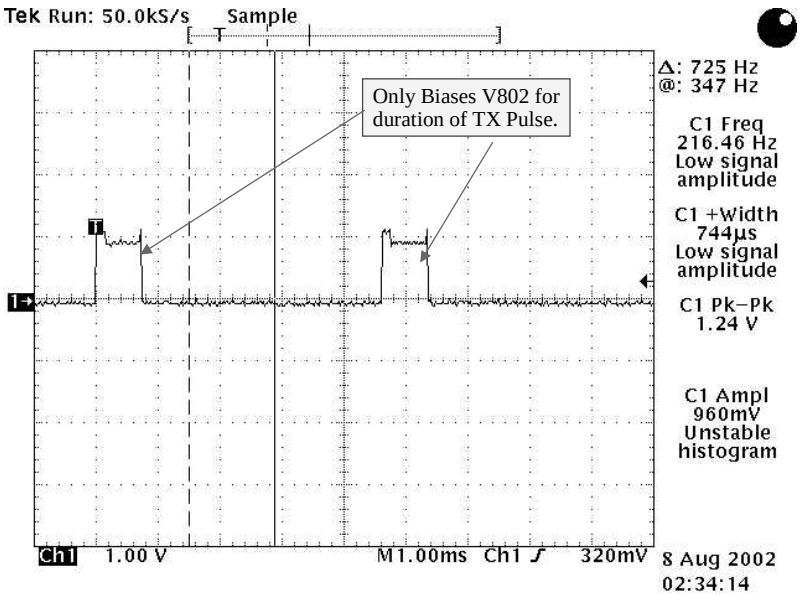



Copyright © 2003 Nokia Corporation
Company Confidential

850 Transmit Waveform (Burst, Power Level 19)

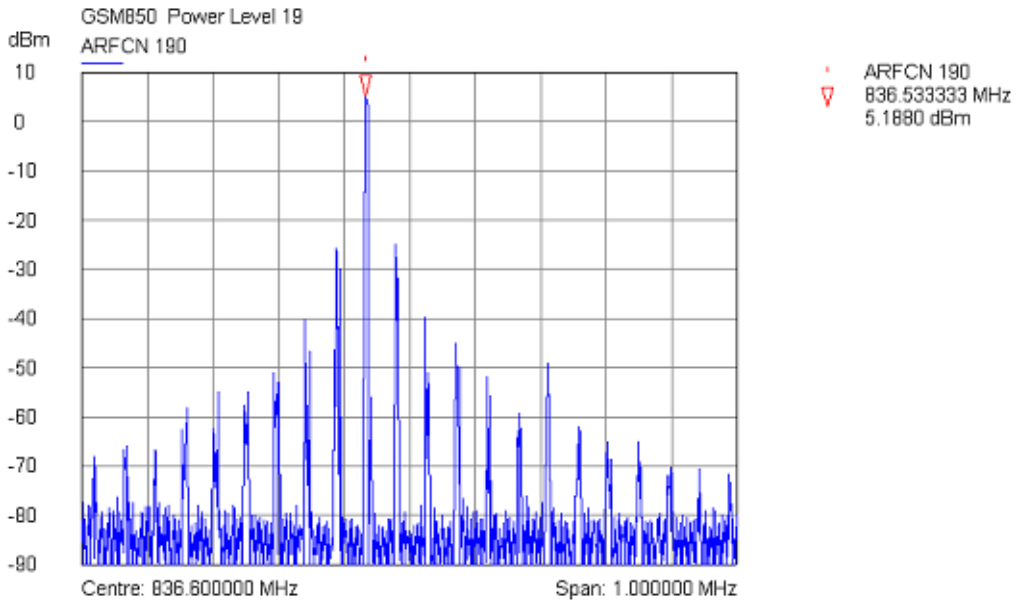


## TX Path of the transmitted GSM850 signal

For easy error tracing it is important to know the signal path of the GSM850 transmitter. The components can be grouped into blocks and drawn as shown below. Note that the following picture shows both GSM850 transmitter (bottom) and GSM1900 transmitter (top).

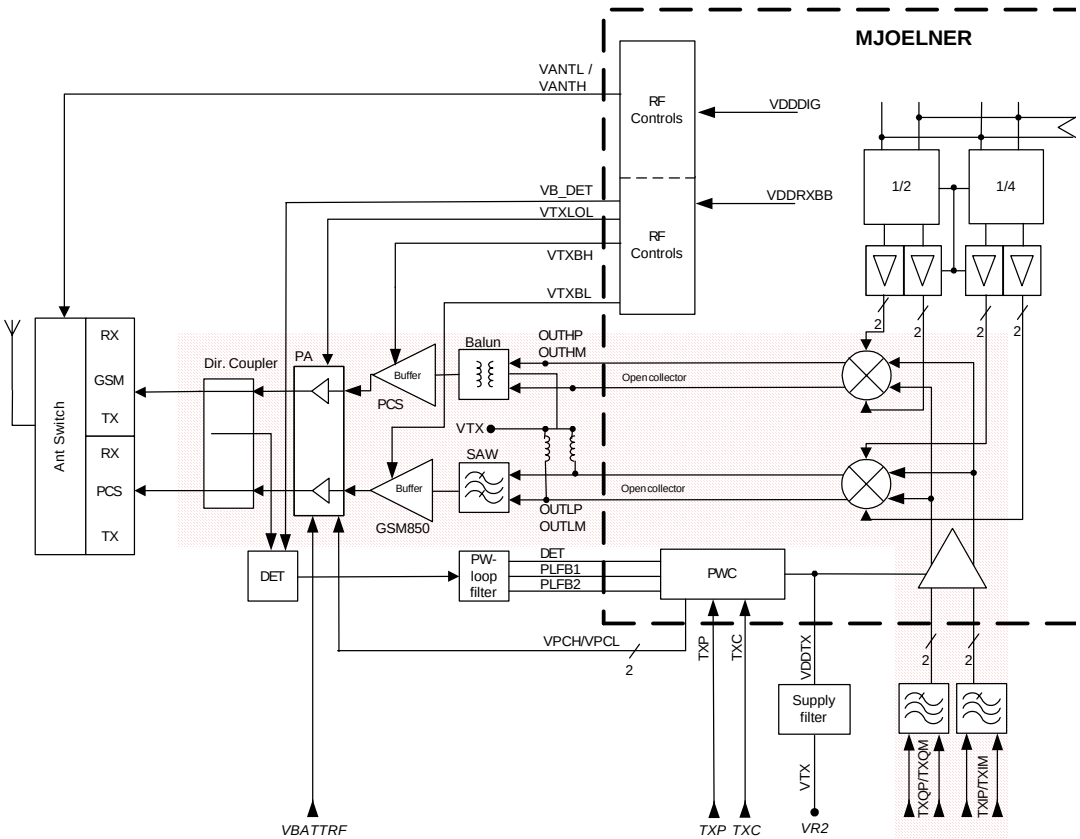



Copyright © 2003 Nokia Corporation
Company Confidential

### GSM850 TX path of Mjoelner RF ASIC

The balanced TX signal is provided by the base band and is coming to the Mjoelner RF ASIC. The TX paths of the Mjoelner RF ASIC include mainly two RF modulators for up-conversion of the base band signals, one for GSM850 and one for GSM1900. The base band signal is modulated with the LO signal corresponding to the wanted TX channel. The GSM TX output of the Mjoelner RF ASIC is a balanced signal.

From the output of the Mjoelner RFASIC the signal is fed through the 850 TX SAW filter (Balanced to single ended), the 850 MHz buffer, and a 10 dB pad to the PA input.

### GSM850 TX path of the Power Amplifier (PA)

The PA GSM850 part has a maximum output power of app. 35dBm. Voltage supply is coming directly from the Battery connectors.

The GSM850 output is controlled by the power control  loop. From the GSM850 output of the PA the RF signal is fed through the directional coupler (one of the power control loop components) to the antenna switch.

### Antenna Switch (TX/RX switch)

The antenna Switch works as a diplexer for the RX and TX signals.  Moreover, it suppresses the  TX harmonics generated by the PA. The antenna switch is controlled by the Mjoelner RF ASIC using the control signals VC1and VC2. The following table shows the possible different states.

| VC1 [Volt] | VC2 [Volt] | 850 Rx | PCS Rx | 850 Tx | PCS Tx |
|---|---|---|---|---|---|
| 0 | 0 | X | | | |
| 0 | 0 | | X | | |
| 0 | 2.7 | | | X | |
| 0 | 0 | | | | |
| 2.7 | 0 | | | | X |

Antenna Switch Test Points

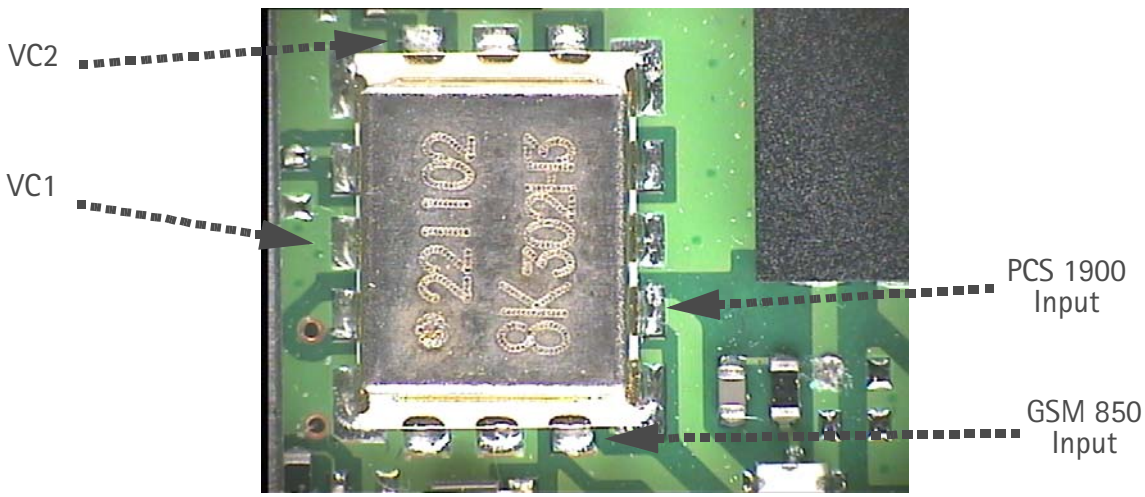



Copyright © 2003 Nokia Corporation
Company Confidential

Antenna Switch Control Line During GSM850 Transmission

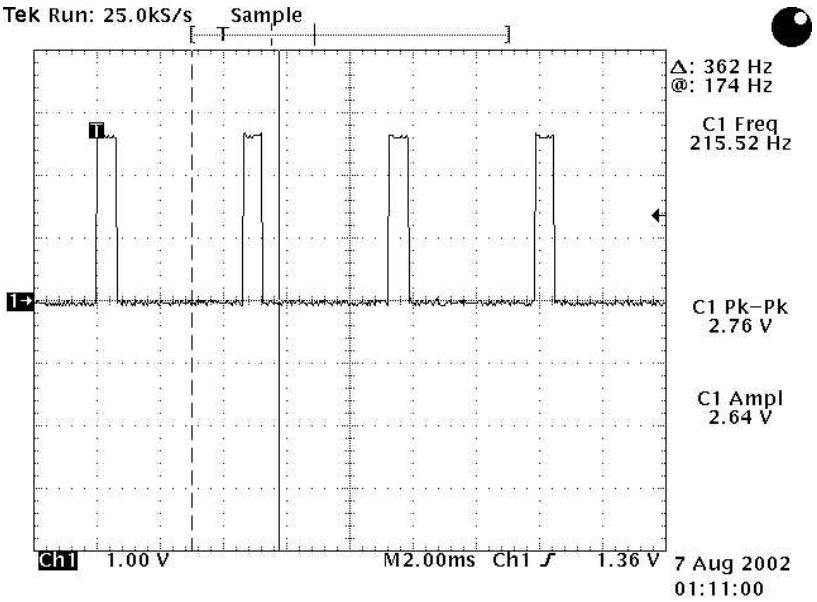


## Transmit Timing

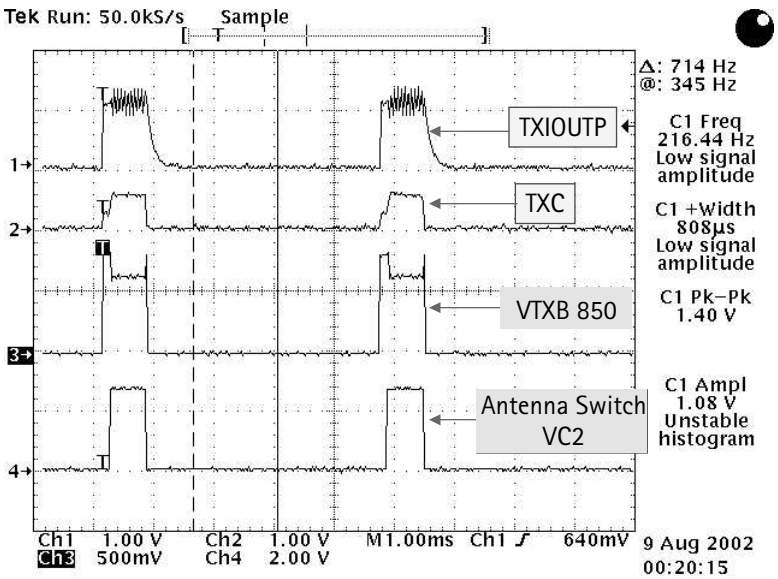


**850 Tx fault finding flow chart**

The first flow diagram assumes the following:

- Phoenix has been set up as shown in the following screen (the Tx power level may be increased using Phoenix if it makes the Tx pulse easier to see).
- Relevant components have been visually inspected for orientation, placement, etc.
- The transmit signal has been checked with a spectrum analyzer at RF connector, X602 and was found to be too low or non-existent.
- The VCO is running correctly.
- The power amplifier is getting a correct VBATRF suply via L381.


Copyright © 2003 Nokia Corporation
Company Confidential

- Mjoelner's supply voltages VR1A, VR2, VR3, VR4, VR5 & VR7 are all working correctly.

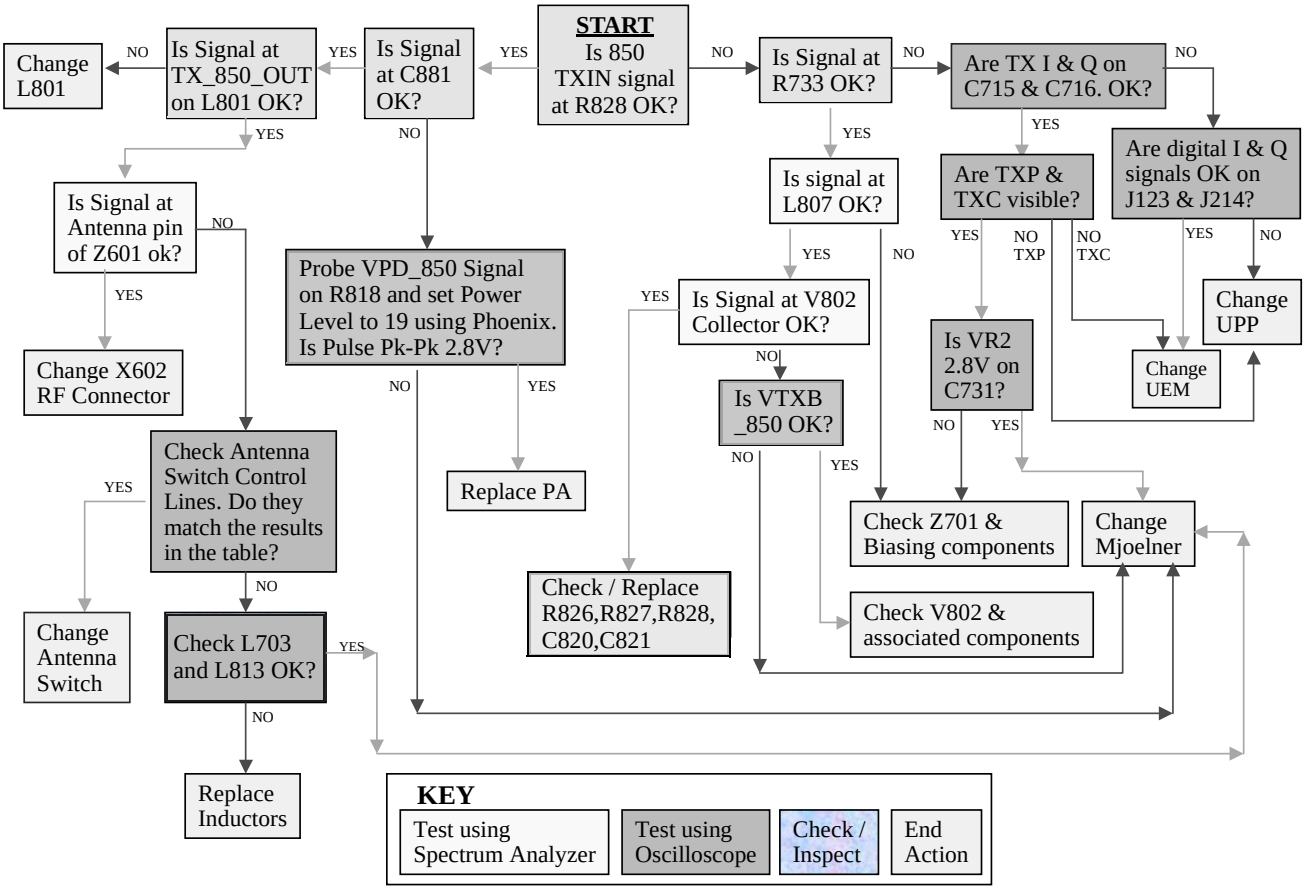
START
Is 850 TXIN signal at R828 OK?
Is Signal at C881 OK?
Is Signal at TX_850_OUT on L801 OK?
Change L801
Is Signal at Antenna pin of Z601 ok?
Change X602 RF Connector
Check Antenna Switch Control Lines. Do they match the results in the table?
Change Antenna Switch
Check L703 and L813 OK?
Replace Inductors
Probe VPD_850 Signal on R818 and set Power Level to 19 using Phoenix. Is Pulse Pk-Pk 2.8V?
Replace PA
Is Signal at R733 OK?
Is signal at L807 OK?
Is Signal at V802 Collector OK?
Check / Replace R826,R827,R828, C820,C821
Is VTXB _850 OK?
Check V802 & associated components
Are TX I & Q on C715 & C716. OK?
Are TXP & TXC visible?
Are digital I & Q signals OK on J123 & J214?
Change UPP
Change UEM
Is VR2 2.8V on C731?
Check Z701 & Biasing components
Change Mjoelner
YES
NO
TXP
TXC
KEY
Test using Spectrum Analyzer
Test using Oscilloscope
Check / Inspect
End Action

# GSM1900 Transmitter

## General instructions for GSM1900 TX troubleshooting

Apply an RF-cable to the RF-connector to allow the transmitted signal to act as normal. RF-cable should be connected to measurement equipment (GSM Test equipment, Power-meter, Spectrum Analyzer, or similar).

## PCS 1900 Tx fault finding flow chart

The following diagram assumes the following:

- Phoenix has been set up as shown previously (selecting PCS 1900 in the RF control box).
- Relevant components have been visually inspected for orientation, placement etc.
- The Transmit Signal has been checked with a Spectrum Analyzer at the RF connector , X602 and was found to be low or non-existent.
- The VCO is running correctly.
- The Power Amplifier is getting a correct VBATRF supply via L381.
- Mjoelner's supply voltages VR1A, VR2, VR3, VR4, VR5 & VR7 are all working correctly.


Copyright © 2003 Nokia Corporation
Company Confidential

## Path of the transmitted 1900 signal

For easy error tracking it is important to know the signal path of the GSM1900 transmitter. The components can be grouped into blocks and drawn as shown below. Note that the picture shows both 850 transmitter (bottom) and GSM1900 transmitter (top).

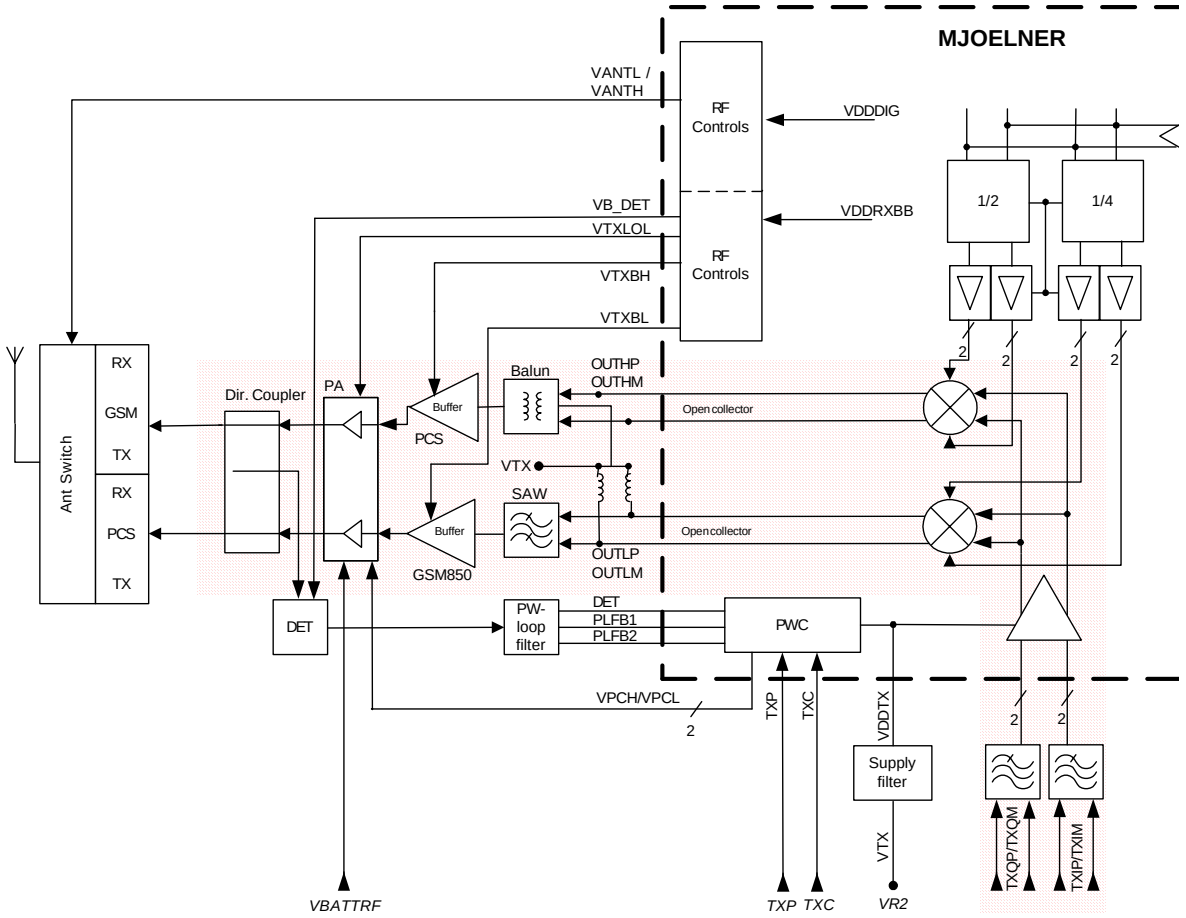


### The path of Mjoelner RF ASIC

The balanced TX signal from base band is coming to Mjoelner RF ASIC. The GSM1900 path includes a RF modulator for GSM1900. The BB signal is up-converted with the LO signal corresponding to the wanted TX channel. The GSM1900 TX output of Mjoelner is a balanced signal.

From the output of Mjoelner the signal is fed through the Balun T701 (Balanced to single ended), the 1900 buffer, and a 7 dB pad.

### The path of the PA

The GSM1900 part of the PA has a maximum output of approximately 33dBm. The supply is coming directly from the Battery connectors.

The output is controlled by the power control loop. From the output of the PA the signal goes through the directional coupler (one of the power control loop components) to the Antenna Switch.


Copyright © 2003 Nokia Corporation
Company Confidential

### Antenna Switch

The Antenna Switch works as a diplexer between RX and TX Bands. Moreover, it partly suppresses the harmonics generated by the PA. Mjoelner RF ASIC controls the antenna switch by two voltages VC1 and VC2. The following table shows the different states.

| VC1 [Volt] | VC2 [Volt] | 850 Rx | PCS Rx | 850 Tx | PCS Tx |
|---|---|---|---|---|---|
| 0 | 0 | X | | | |
| 0 | 0 | | X | | |
| 0 | 2.7 | | | X | |
| 0 | 0 | | | | |
| 2.7 | 0 | | | | X |

## Fault finding chart for GSM1900 transmitter

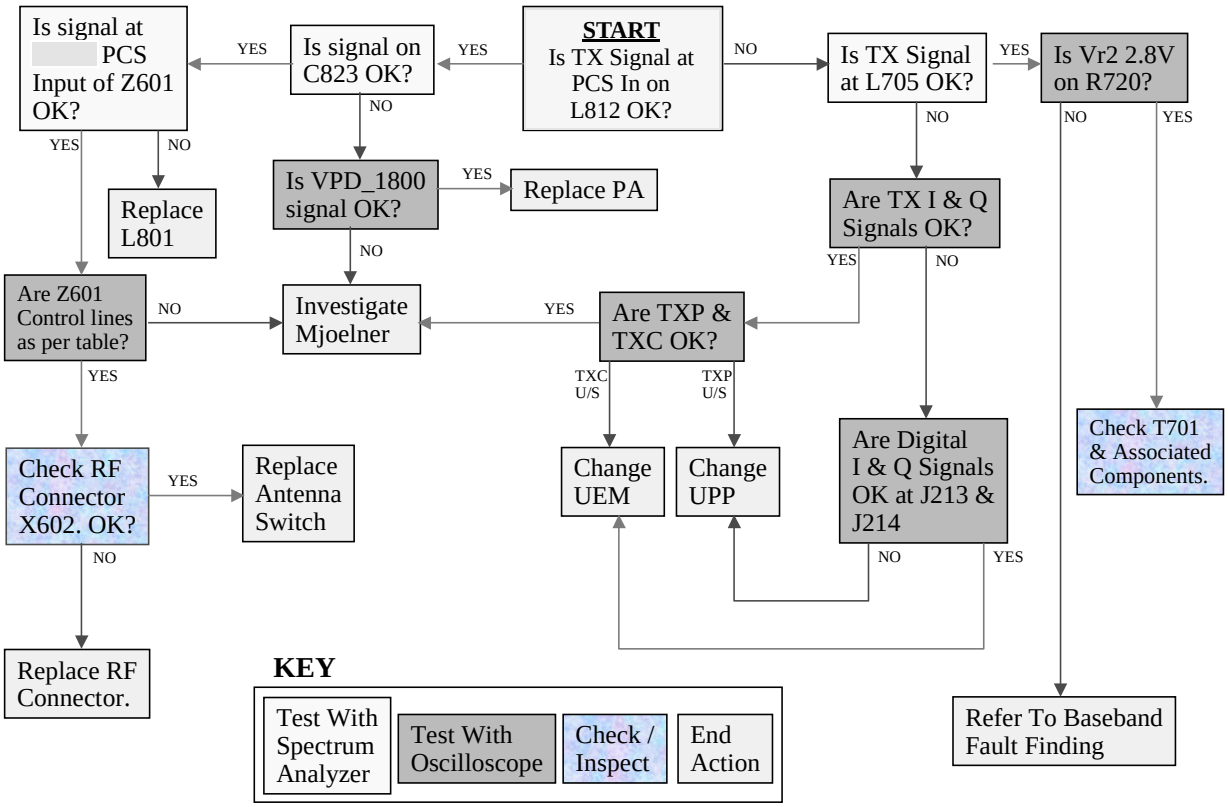


If the Tx output is too high, then it is most likely that there is a problem within the Power Control loop.

Mjoelner is receiving the Reference TXC from Baseband and not getting any feedback from DET to compare with TXC. The result is that Mjoelner drives VDP_850/VPD_1900 high to try and increase the power output so that the DET signal is matching TXC. With a break in the Power Control loop, the DET signal never reaches Mjoelner so it assumes


Copyright © 2003 Nokia Corporation
Company Confidential

that the PA is not outputting enough power so it tries to compensate by increasing the gain.

When checking the Power Control loop, make sure that VBD is pulsing at 2.8V Peak to Peak. Check the DET pulse at Mjoelner input on R706.

This case is the same for 850 & PCS1900.

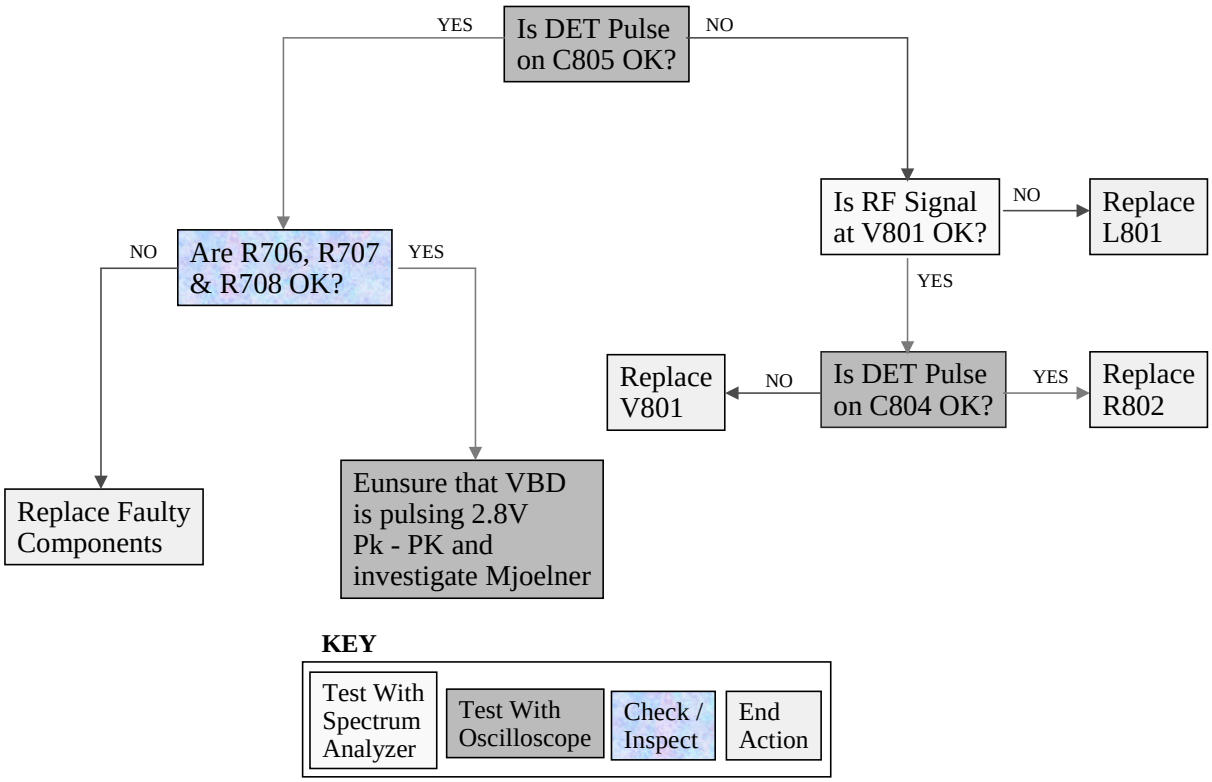


# NHM-10 Synthesiser

There is only one PLL synthesiser generating frequencies for both Rx and Tx for all three bands. VCO frequency is divided by 2 or by 4 in Mjoelner depending on which band is active.

## General instructions for Synthesiser troubleshooting

Connect the the phone to a PC with DAU-9P cable and dongle and follow these instructions:

**Start Phoenix Service Software (dongle needed):**

Select Scan Product Ctrl-R

Wait until phone information shows in the lower right corner of the screen.

Set operating mode to local mode.


Copyright © 2003 Nokia Corporation
Company Confidential

Start RF Control window:

| | | |
|---|---|---|
| Select | Testing | Alt-S |
| | RF Controls | R |

Wait until the RF Controls window pops up

Set the synthesiser to the following mode:

| | | |
|---|---|---|
| Select | Band | GSM 850 |
| | Active unit | RX |
| | Operation mode | Continuous |
| | RX/TX Channel | 190 |

The setup should now look like this:

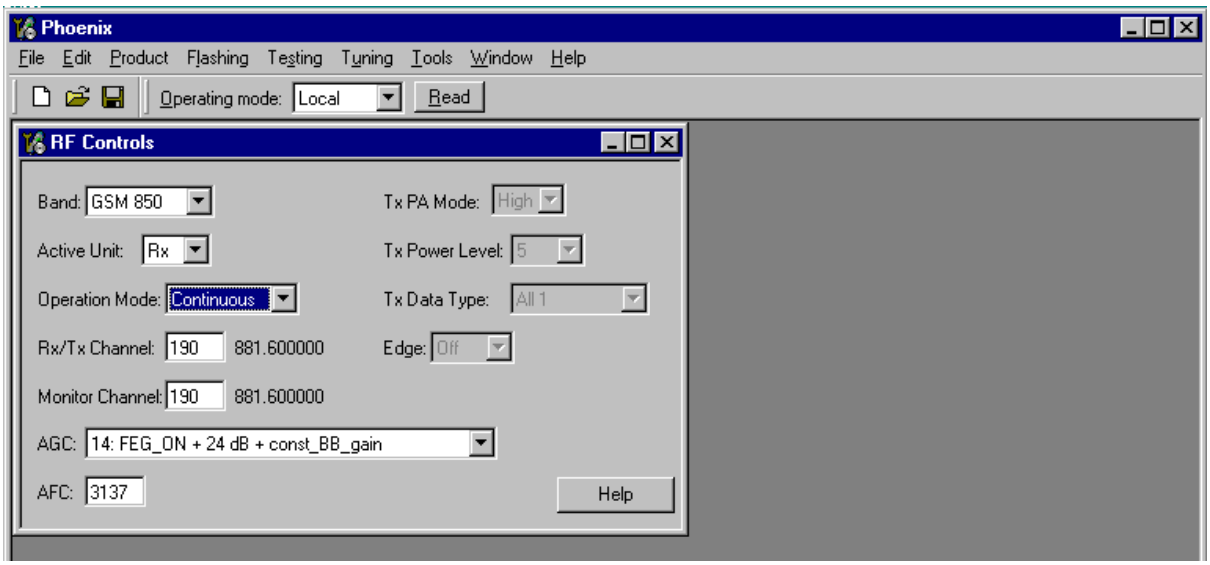


Since VCO chamber is completely shielded, it is not easy to measure frequency of 3526.4MHz at the output of the VCO (G701) using a resistive probe and a spectrum analyzer. It is possible to measure tuning voltage at charge pump output (C710) easily. For $f_{VCO}$ = 3526.4MHz the tuning voltage should be $2.3V_{DC}$ .. $2.8V_{DC}$ (Tuning sensitivity of VCO is 240MHz/V typ.).


Copyright © 2003 Nokia Corporation
Company Confidential

PLL Synthesizer Test Points

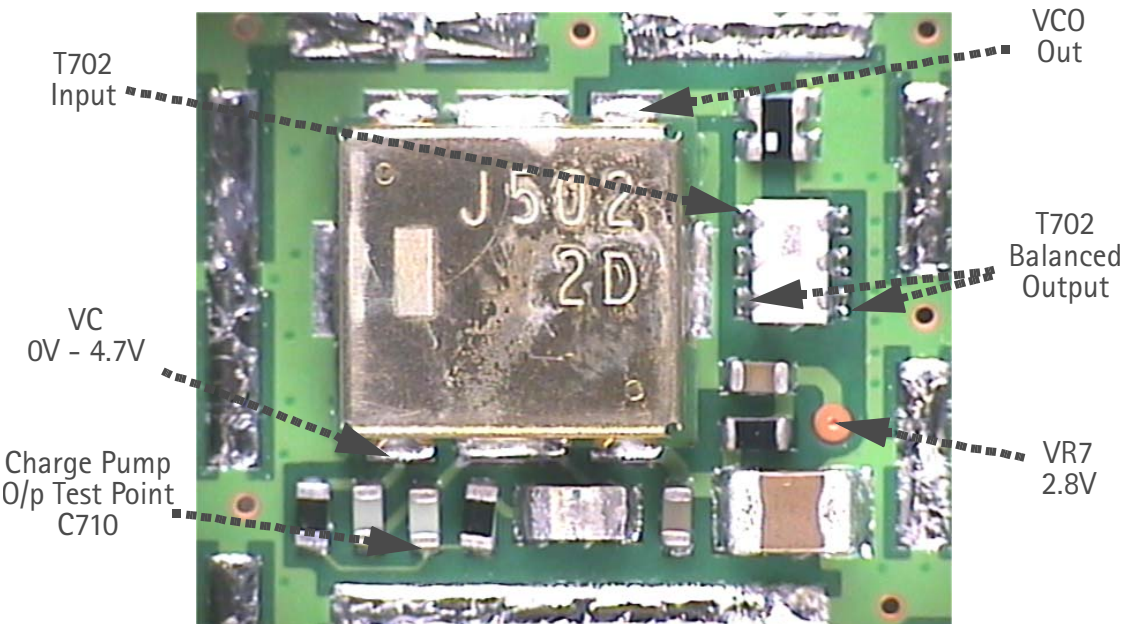


If this is not the case, then go to Fault finding chart in this document for troubleshooting.

Mjoelner Can Test Points

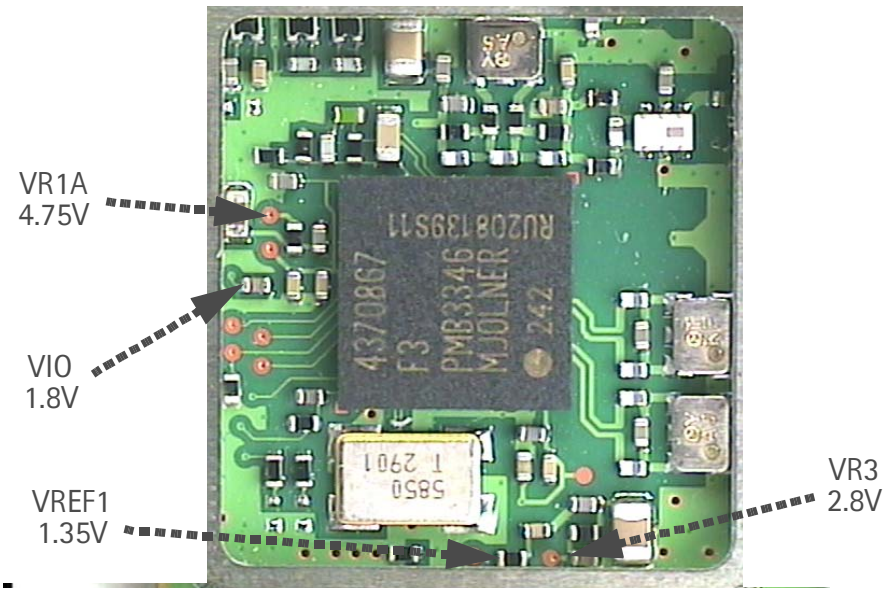


## 26 MHz reference oscillator ( VCXO )

The 26 MHz reference oscillator (VCXO) is part of Mjoelner RF-ASIC (N601). It needs only an external 26 MHz Xtal (B601) as external circuitry.

The reference oscillator has three functions:

- Reference frequency for the PLL synthesiser.


Copyright © 2003 Nokia Corporation
Company Confidential

- System clock for BB (RFClk_I = 26 MHz).
- 26 MHz Reference clock (LPRFClk_I) for Bluetooth Module (N430) via buffer V601.

For an error free initial synchronization, the 26MHz frequency of the VCXO must be accurate enough. Therefore, a **VCXO-calibration (cal)** value is written via the serial Bus into the RefOSCCAL register of Mjoelner and an additional bit in the RefOSCCntl register of the Mjoelner. That is necessary for the rough calibration of the VCXO.

The VCXO is fine tuned by programming the AFC value via the serial bus of Mjoelner. The necessary AFC value is written into the RefOSCAFC register in Mjoelner.

## VCO

The VCO is able to generate frequencies in the range from 3290MHz to 3980MHz when PLL is in function. The frequency of the VCO signal is divided by 2 or by 4 in Mjoelner RF-ASIC. So it is possible to generate the frequency of all channels in GSM850 and GSM1900 (both RX and TX). Frequency of the VCO is controlled by DC voltage (Vc) coming from the PLL loop filter. Range of Vc when PLL is in function is 0.7V– 3.8V. Typical tuning sensitivity of the VCO is 250MHz/V. Even if PLL is not working (Vc out of range) there is a frequency at the output of the VCO, which is between 3 and 4 GHz (if the VCO itself is ok).

## Fault finding chart for PLL Synthesiser

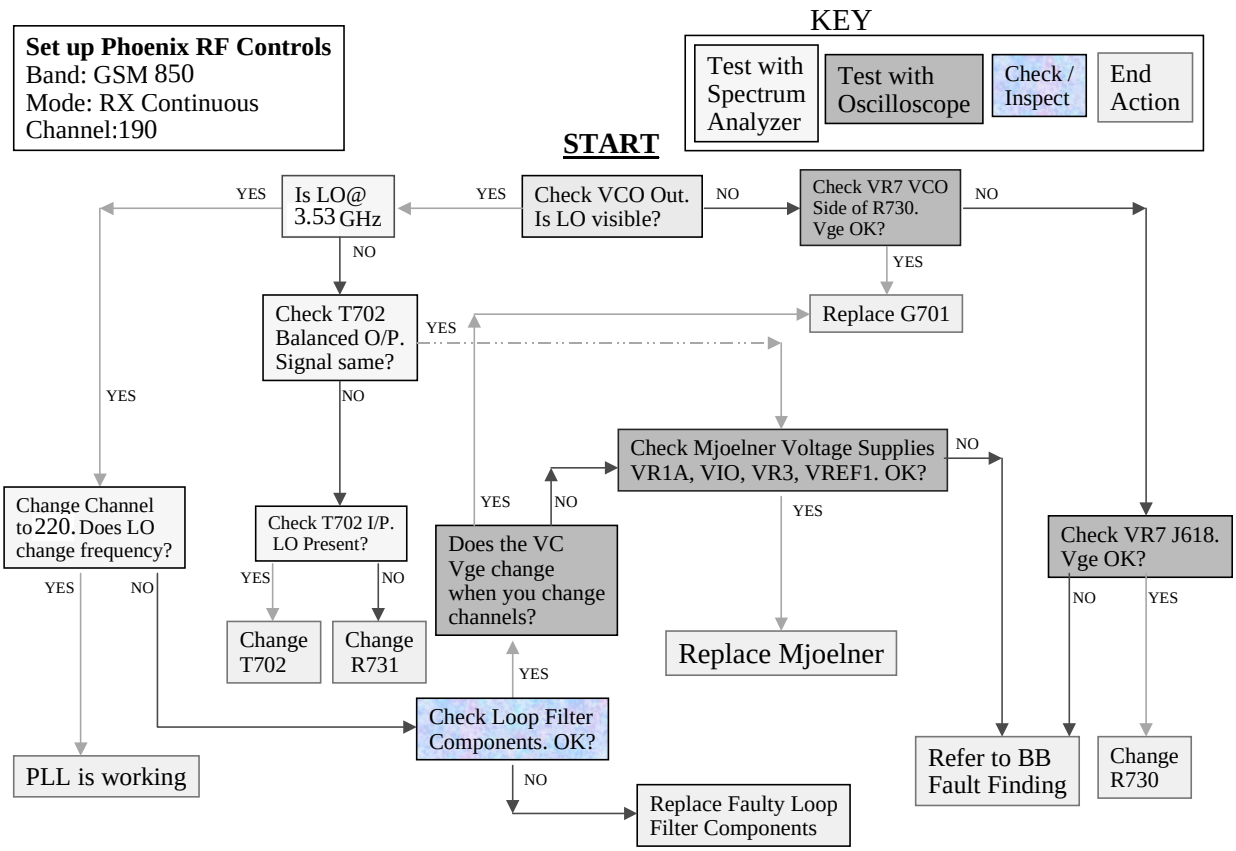



Copyright © 2003 Nokia Corporation
Company Confidential

It is important to say that power supply for VCXO ( VR3) is only switched 'OFF' in the so-called 'Deep Sleep Mode' and power supply for VCO (G701 VR7) is switched 'OFF' in so-called 'Sleep Mode'.

## PLL Blockdiagram

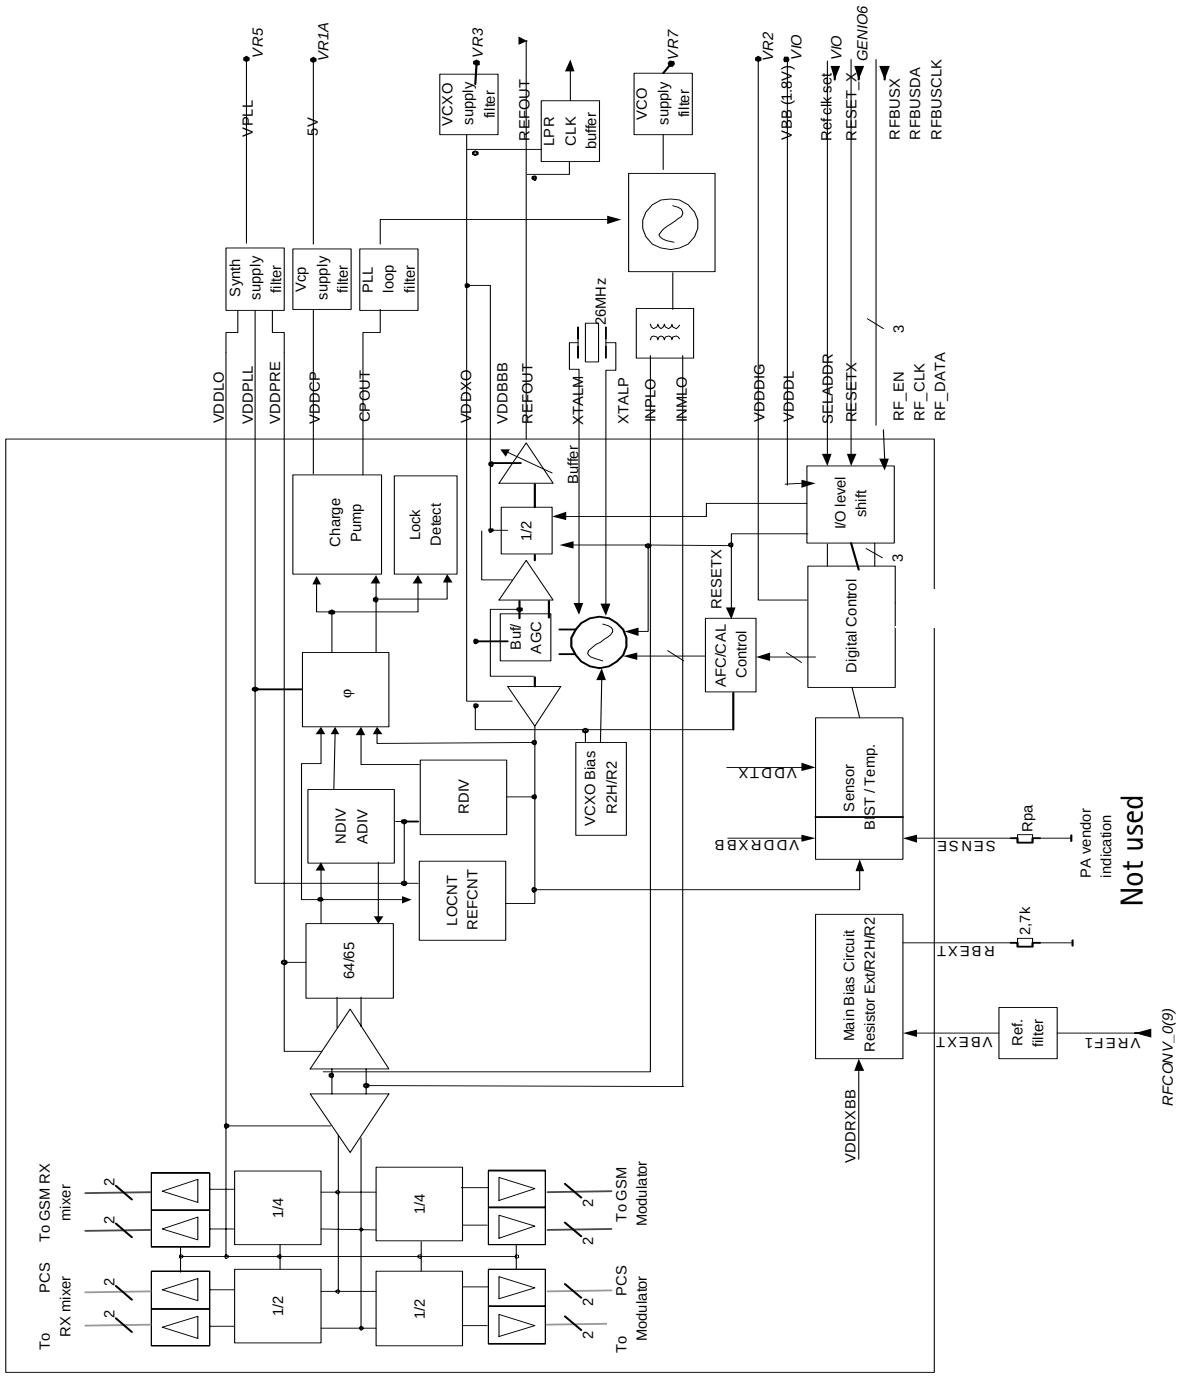



Copyright © 2003 Nokia Corporation
Company Confidential

## PLL power supply

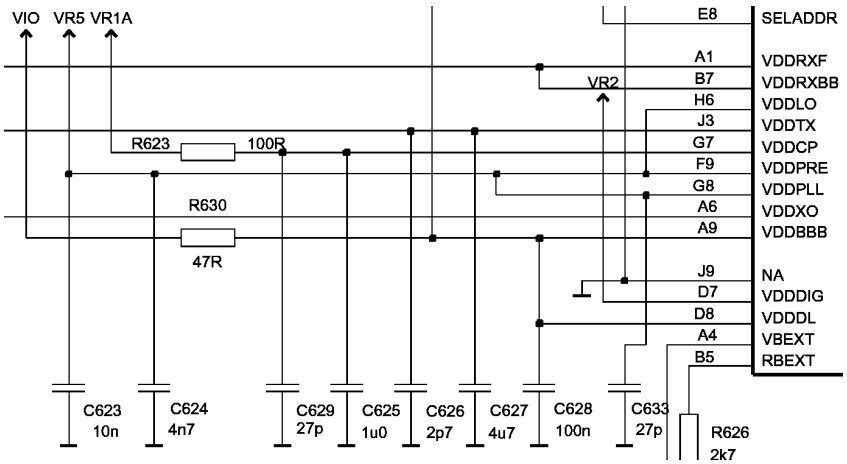


## Loop Filter

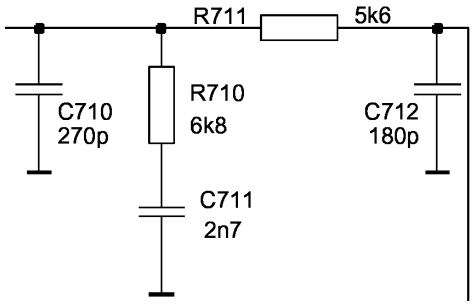


## VCO and power supply

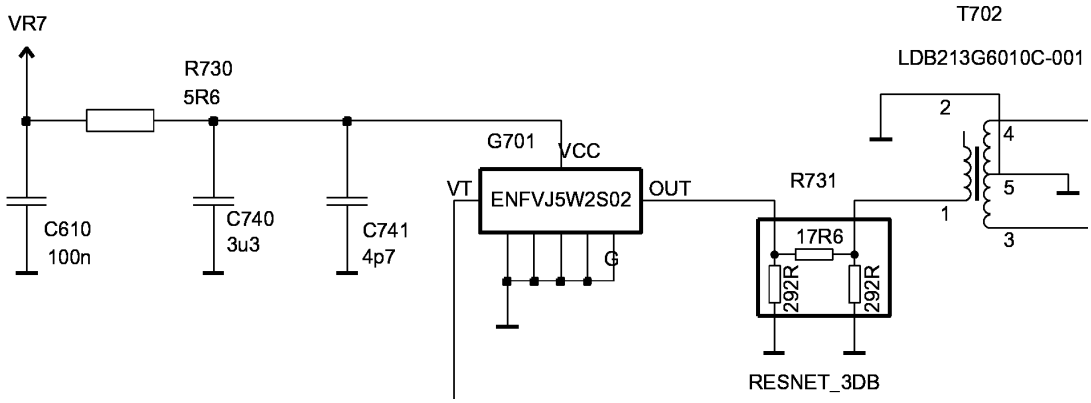


## 26MHz Bluetooth buffer

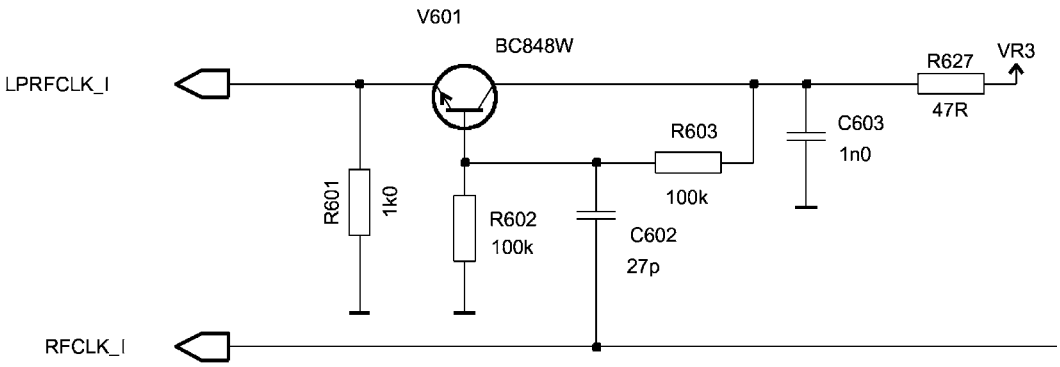



Copyright © 2003 Nokia Corporation
Company Confidential

# Phoenix tuning

Before any tuning the phone should synchronised with the PC.

Connect the phone to a PC with DAU-9P cable and dongle and follow the following instructions:

Provide the phone with power supply

Start Phoenix Service Software and open FBUS connection

Select File Scan Product

Wait until phone information is shown in the lower right corner of the screen.

## RF tuning after repairs

Different repairs require different tuning. In general it is necessary to determine in which section the repair was done to select which tunings to perform. To determine if RF tuning is necessary after repair it is important that the functionality of the repaired circuit is understood well.

- In general repairs in the TX part will require "TX Power Level Tuning" and "TX IQ Tuning".
- In general repairs in the RX part or PLL part always require "RX Calibration", “Rx Band Filter Response Calibration”.
- If Mjoelner is changed all calibrations have to be done.

Other parts interfacing to TX, RX or PLL might require tuning, but common sense should be used, e.g. if a component that has no influence on RF performance has been changed, e.g. the microphone, on/off key, mechanical parts or similar, there is no need to do any RF tuning.

## RX Calibration (incl. VCXO Calibration)

The "RX calibration" is used to determine gain at different gain-settings for front-end and Mjoelner and needs to be done in all three bands.

RX-calibration requires an external signal generator.

RX-calibration in GSM850 combines two tunings, VCXO-calibration and AGC-calibration:

Calibration of GSM1900 band only determines AGC values.

The **VCXO-calibration** finds out a calibration value for VCXO control, an AFC initial value and 3 AFC-slope coefficients.


Copyright © 2003 Nokia Corporation
Company Confidential

A value (RF_TEMP), which represents the RF hardware temperature, is determined during RX Calibration. This temperature value is used by DSP to RSSI reporting in Normal mode of the phone. It is not visible in the calibration process.

**AGC-calibration:**

The AGC-calibration finds the gain values of the RX-gain system.
The AGC consists of RF LNA, which can be either on or off (gain difference between on and off state is nominally 30dB) and BB gain which can be controlled in 6dB steps. This gives 15 gain steps RSSI0 to RSSI14. LNA is off for steps RSSI0 to RSSI4.
AGC-calibration measures the gain at gain step RSSI4 and RSSI7. The other gain values are calculated.

**VCXO-calibration:**

The VCXO-calibration ensures the function of an **initial** synchronization (before location update is done) when the mobile station is in Normal mode. For an error free initial synchronization, the 26MHz frequency of the VCXO must be accurate enough. Therefore, a **VCXO cal** value is written into the RefOSCCAL register of the Mjoelner.

During VCXO-calibration, the **VCXO cal** value is changed by a DSP-algorithm until a synchronization is possible. This means the VCXO oscillates at 26 MHz with a sufficient minimum frequency error.

To further minimize the frequency error, an initial **AFC value** is determined by the DSP and written into RefOSCAFC register of the Mjoelner.

Also the DSP algorithm determines 3 AFC slope coefficients **Slope C1...3** during VCXO calibration. One AFC slope value is not sufficient for Mjoelner **F3**, because the AFC slope is non-linear in this chip.

**GSM 850**

Set operating mode to local mode

| | | | |
|---|---|---|---|
| Select | Tuning | | Alt U |
| | | RX Calibration | C |

Wait until the RX Calibration window pops up.


Copyright © 2003 Nokia Corporation
Company Confidential

The setup should now look like this:

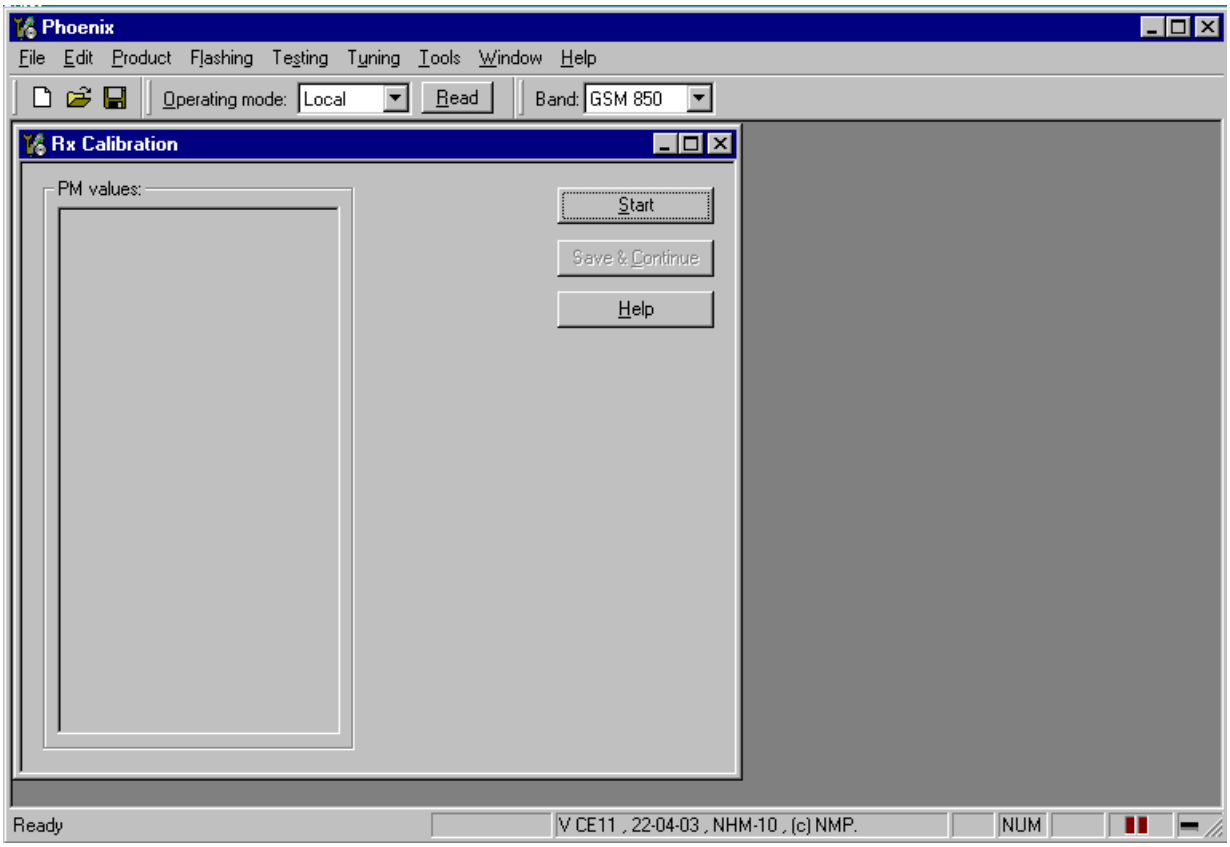


Press Start and a window pops up:

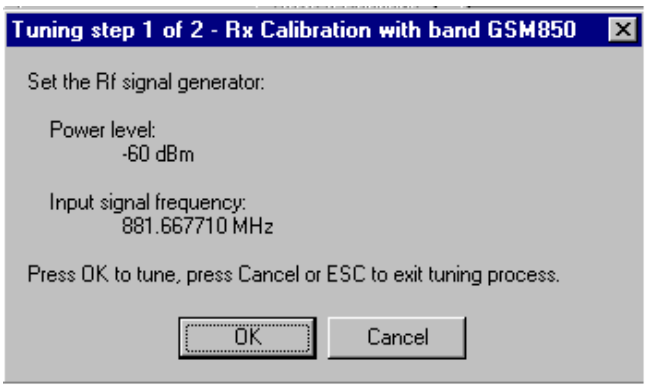
Tuning step 1 of 2 - Rx Calibration with band GSM850
Set the Rf signal generator:
Power level:
-60 dBm
Input signal frequency:
881.667710 MHz
Press OK to tune, press Cancel or ESC to exit tuning process.
OK
Cancel

Connect an external signal generator to the RF connector of the phone and set the generator as told in the window, taking care for external cable losses.

Press OK and the window closes.


Copyright © 2003 Nokia Corporation
Company Confidential

A typical result will look like this:

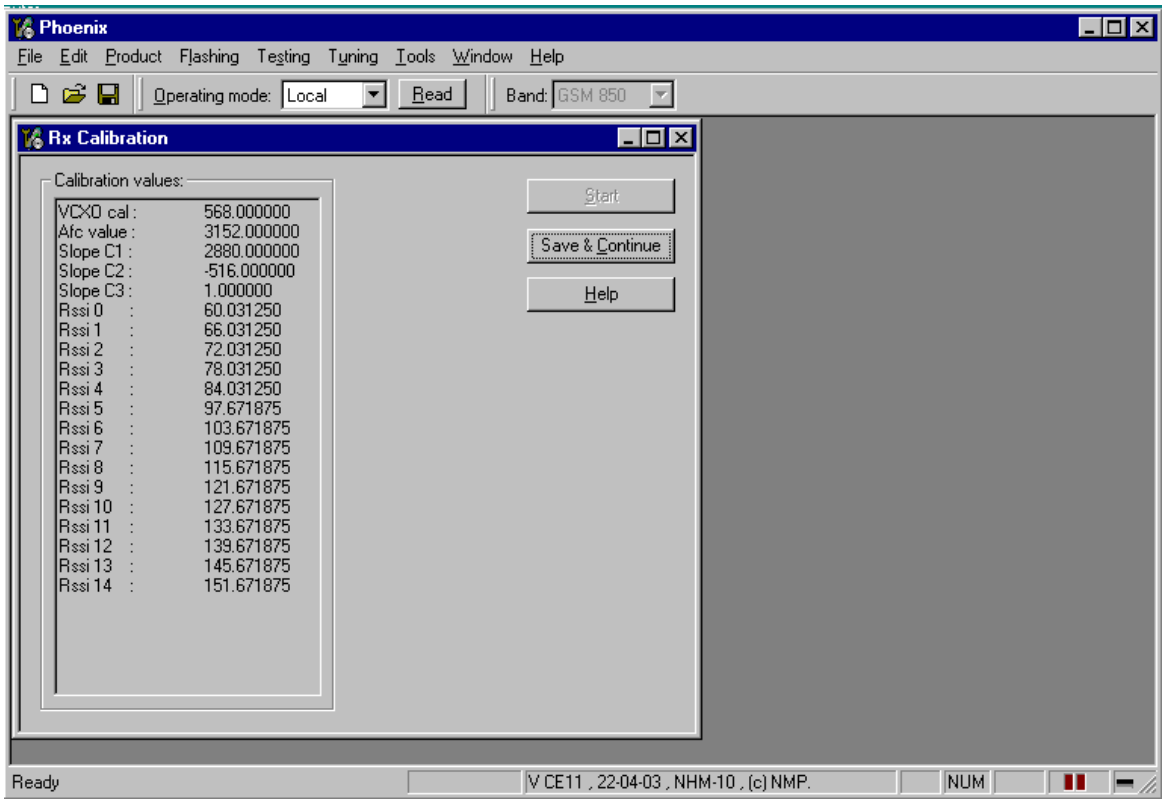


Press Save and Continue in the RX Calibration window:

### GSM1900 (PCS)

A window pops up:

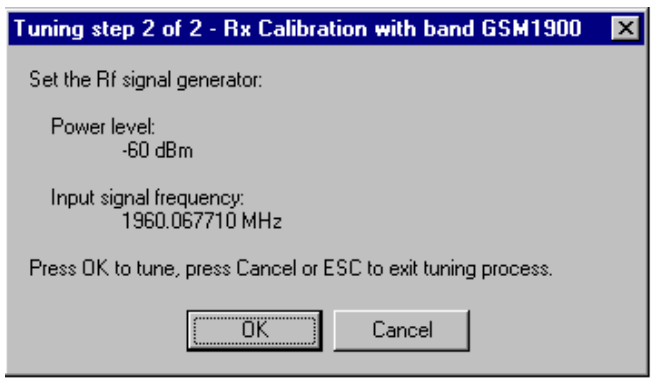
Tuning step 2 of 2 - Rx Calibration with band GSM1900
Set the Rf signal generator:
Power level:
-60 dBm
Input signal frequency:
1960.067710 MHz
Press OK to tune, press Cancel or ESC to exit tuning process.
OK
Cancel

Connect an external signal generator to the RF connector of the phone and set the generator as told in the window, taking care for external cable losses.

Press OK and the window closes.


Copyright © 2003 Nokia Corporation
Company Confidential

A typical result will look like this:

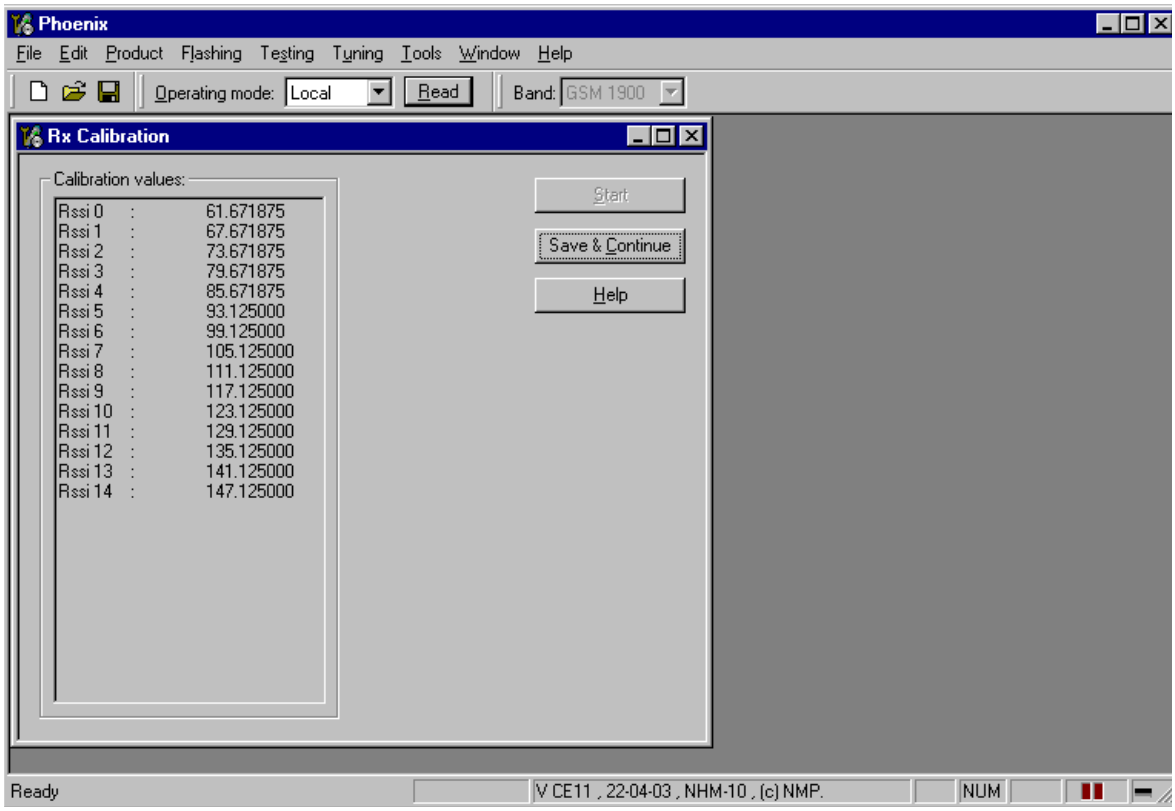


Press Save and Continue in the RX Calibration window and a new window pops up:

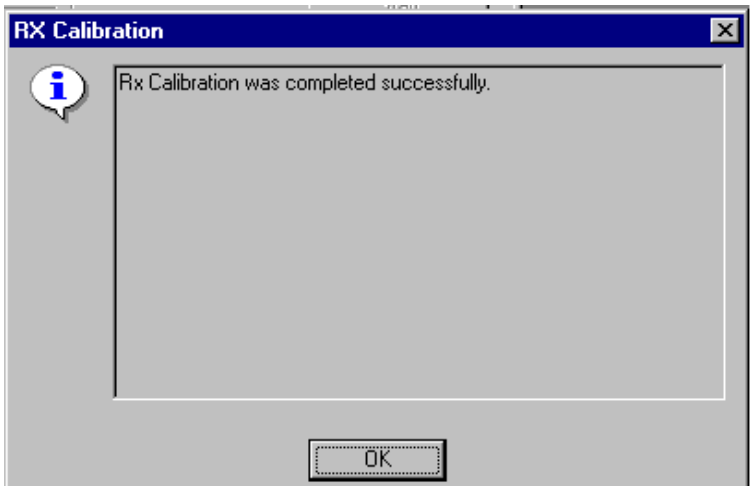


Press OK and the RX Calibration is finished.

## RX AGC limits

The Rx calibration is only valid if it is within certain limits.

For the most recent limits see NHM-10 Production Testing Requirements,

If calibration is not within limits, there is a fault in the RX chain.


Copyright © 2003 Nokia Corporation
Company Confidential

Below the values for RSSI4 and RSSI7 are given:

RSSI4:(Rx A5)

| band | min | typ | max |
|---|---|---|---|
| GSM850 | 81 | 85 | 91 |
| GSM1900 | 79 | 87 | 89 |

RSSI7:(Rx A8)

| band | min | typ | max |
|---|---|---|---|
| GSM850 | 103 | 109 | 113 |
| GSM1900 | 100 | 105 | 110 |

## RX Band Filter Response Compensation

### GSM850

Set operating mode to local mode

| | | | |
|---|---|---|---|
| Select | Tuning | | Alt U |
| | | RX Band Filter Response Compensation | B |


Copyright © 2003 Nokia Corporation
Company Confidential

The setup should now look like this:

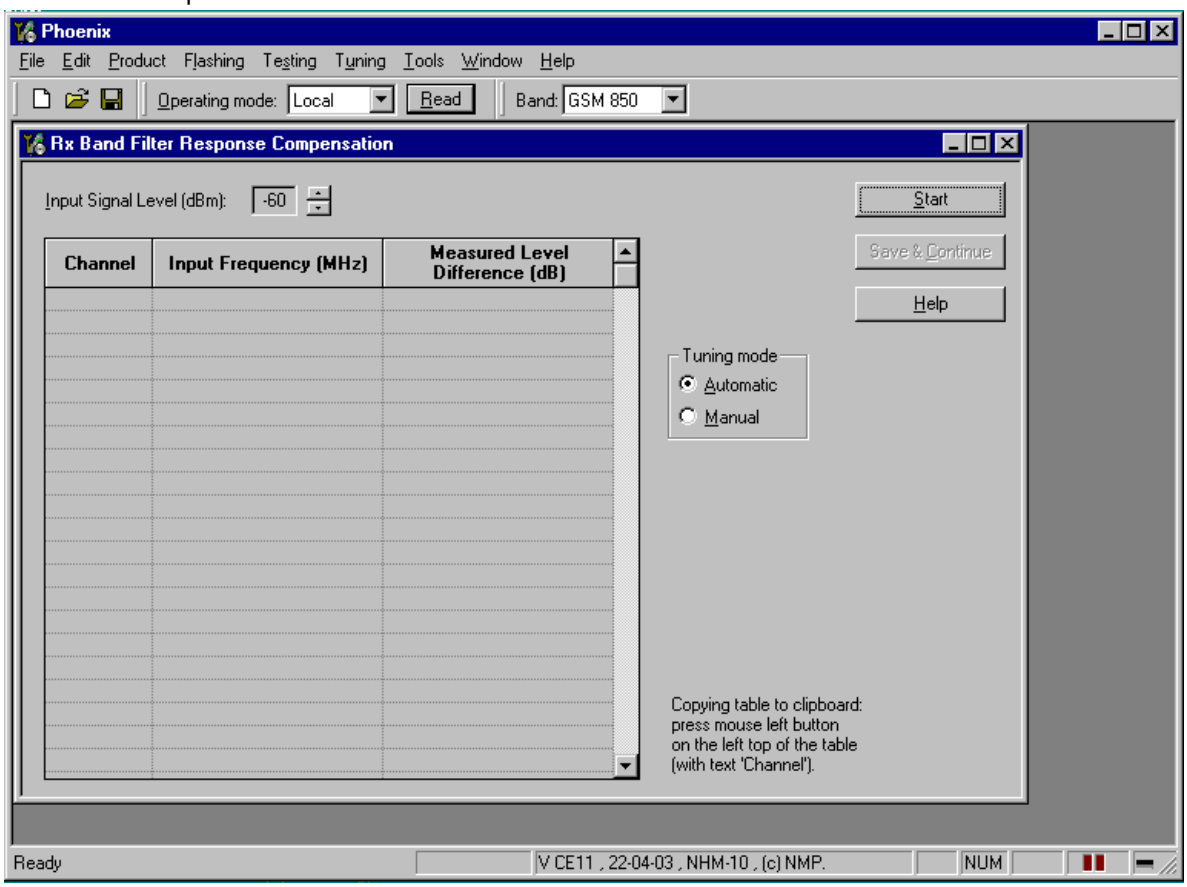


### Manual Tuning

Press Manual Tuning and Start and a window pops up:

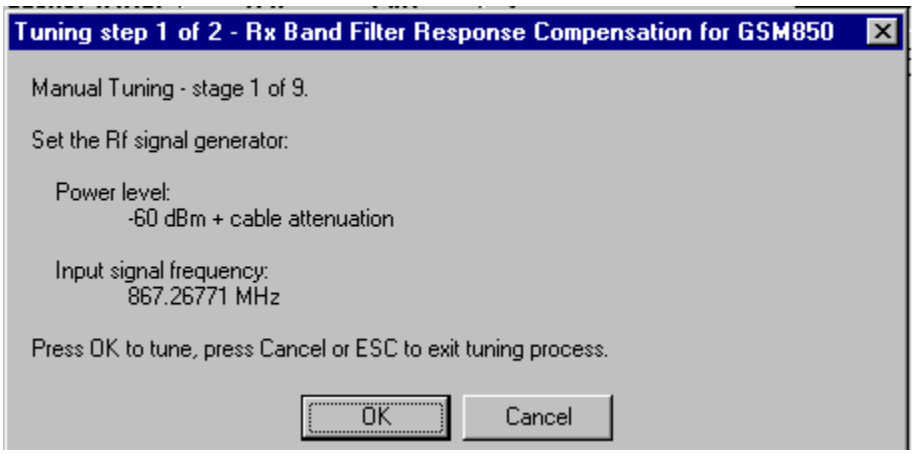
Tuning step 1 of 2 - Rx Band Filter Response Compensation for GSM850
Manual Tuning - stage 1 of 9.
Set the Rf signal generator:
Power level:
-60 dBm + cable attenuation
Input signal frequency:
867.26771 MHz
Press OK to tune, press Cancel or ESC to exit tuning process.
OK
Cancel

Connect an external signal generator to the RF connector of the phone and set the generator as told in the window.


Copyright © 2003 Nokia Corporation
Company Confidential

Press OK and a new window pops up:

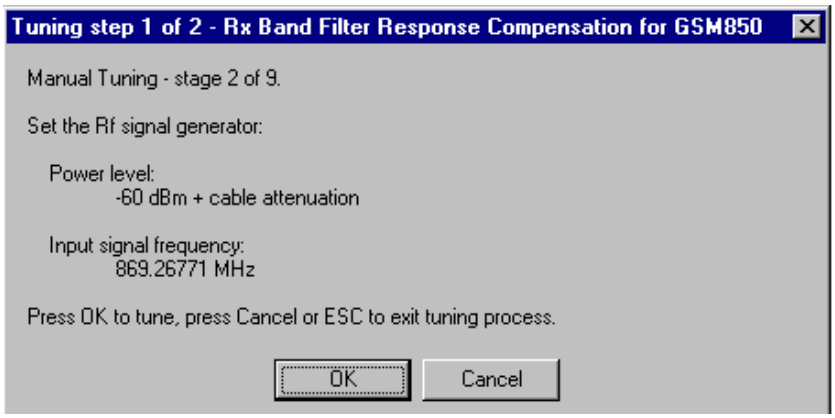
Tuning step 1 of 2 - Rx Band Filter Response Compensation for GSM850
Manual Tuning - stage 2 of 9.
Set the Rf signal generator:
Power level:
-60 dBm + cable attenuation
Input signal frequency:
869.26771 MHz
Press OK to tune, press Cancel or ESC to exit tuning process.
OK
Cancel

Set the generator as told in the window.

Press OK and a new window pops up. Repeat this sequence **9 times** until all channels are done.

Press Save and Continue and repeat the process for the 1900 band.

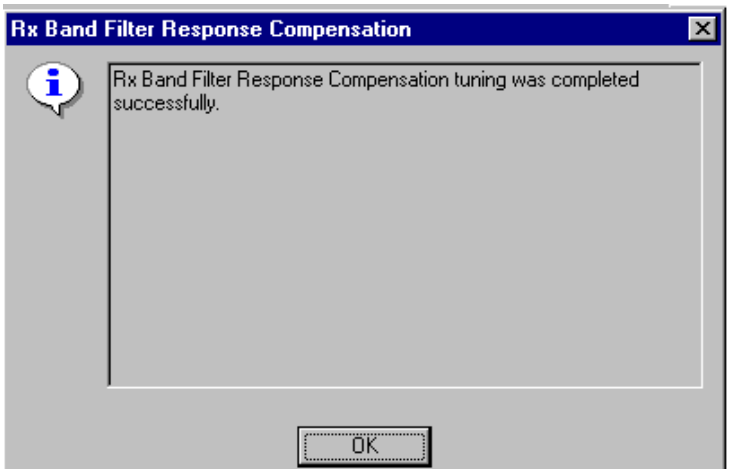


**Auto Tuning**

A faster and more convenient method for Band Filter Calibration can be performed by clicking on "Auto Tuning". This requires a signal Generator that can be programmed to seep a user defined list of frequencies.

Press Auto Tuning and Start.

Program the signal generator to the list of frequencies that are visible in the column "frequencies to sweep" .


Copyright © 2003 Nokia Corporation
Company Confidential

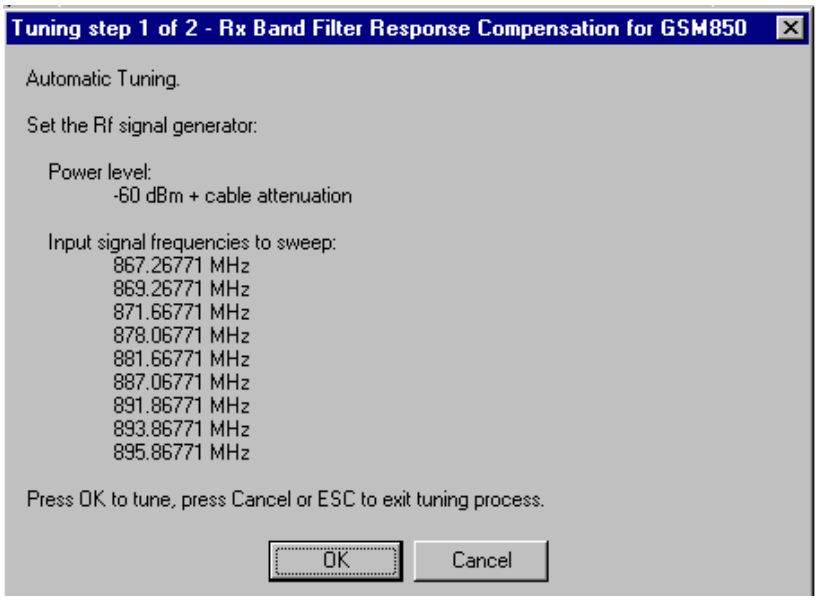


Connect an external signal generator to the RF connector of the phone and let the signal generator step sweep through the programmed frequency list.

Press OK.

Press Save and Continue and a window pops up for 1900 band:

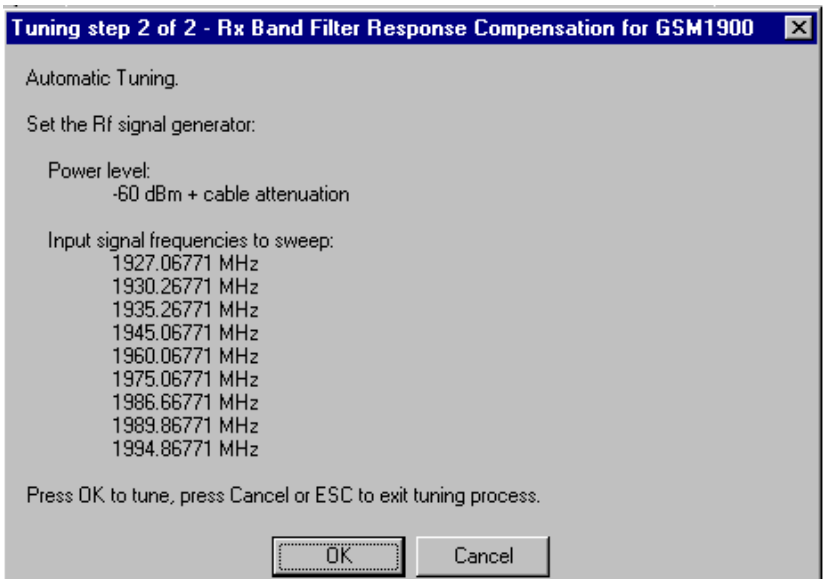


Press OK and Repeat, the process for the 1900 band..

## RX Channel Select Filter Calibration

This calibration is calibrating the Base band filter inside Mjoelner. It is done by internally measuring a prototype filter, for this reason the calibration is done once, not separately in 2 bands.


Copyright © 2003 Nokia Corporation
Company Confidential

Set operating mode to local mode

Select Tuning Alt U
RX Channel Select filter Calibration H

The RX Channel Select Filter Calibration window pops up.

The setup should now look like this:

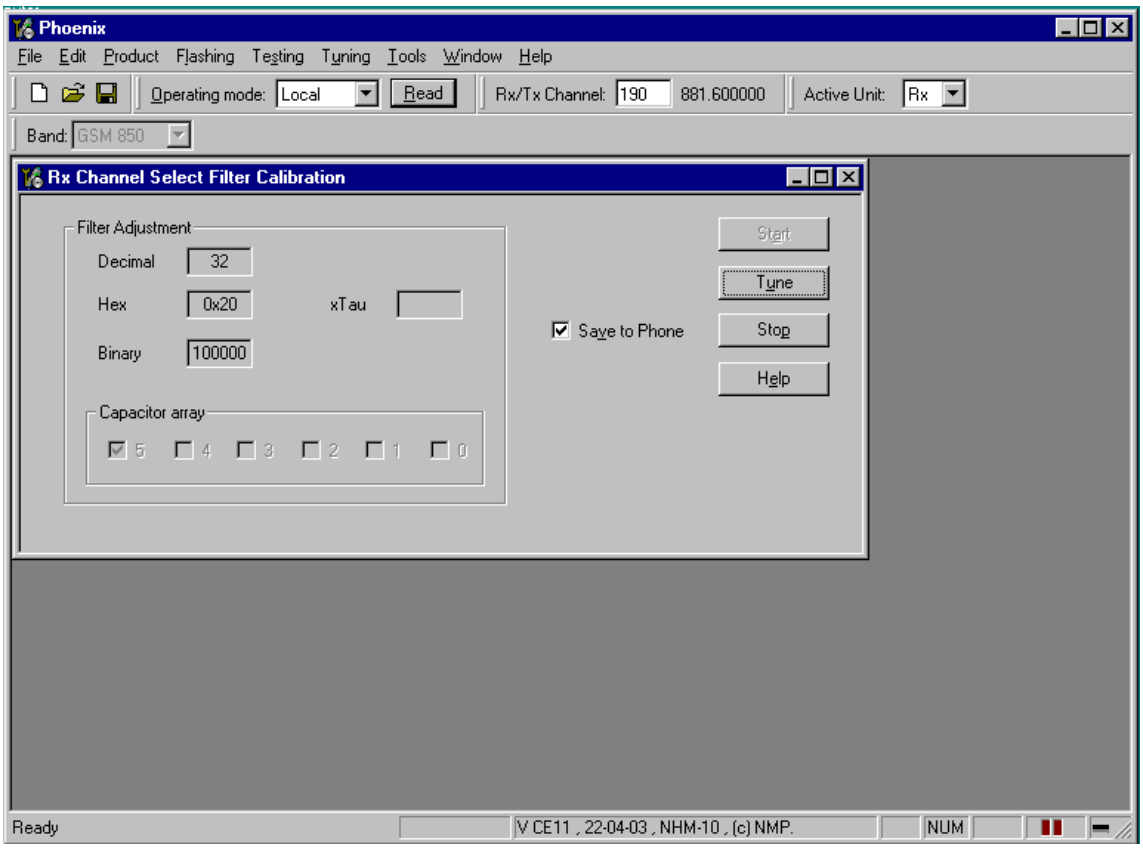


Press Tune and the optimal values are found.

Press Stop and the RX Channel Select Filter Calibration is finished.

## TX Power tuning

This tuning must be done in both bands.

Note: TX Power tuning must be done with a peak power meter, e.g. Anritsu model ML2408A with Anritsu Peak Power Sensor MA2442A and a suitable attenuator.

The use of power meter in GSM testers is likely to cause larger error than the use of a dedicated power meter and might cause the phone to be non-compliant with GSM specifications.


Copyright © 2003 Nokia Corporation
Company Confidential

**GSM850**

Set operating mode to local mode

Select RF Tuning TX Power Level Tuning

Wait until the TX Power Level Tuning window pops up.

Connect a **calibrated** powermeter or spectrum analyser to the RF connector of the phone.

Press Start and a window pops up:

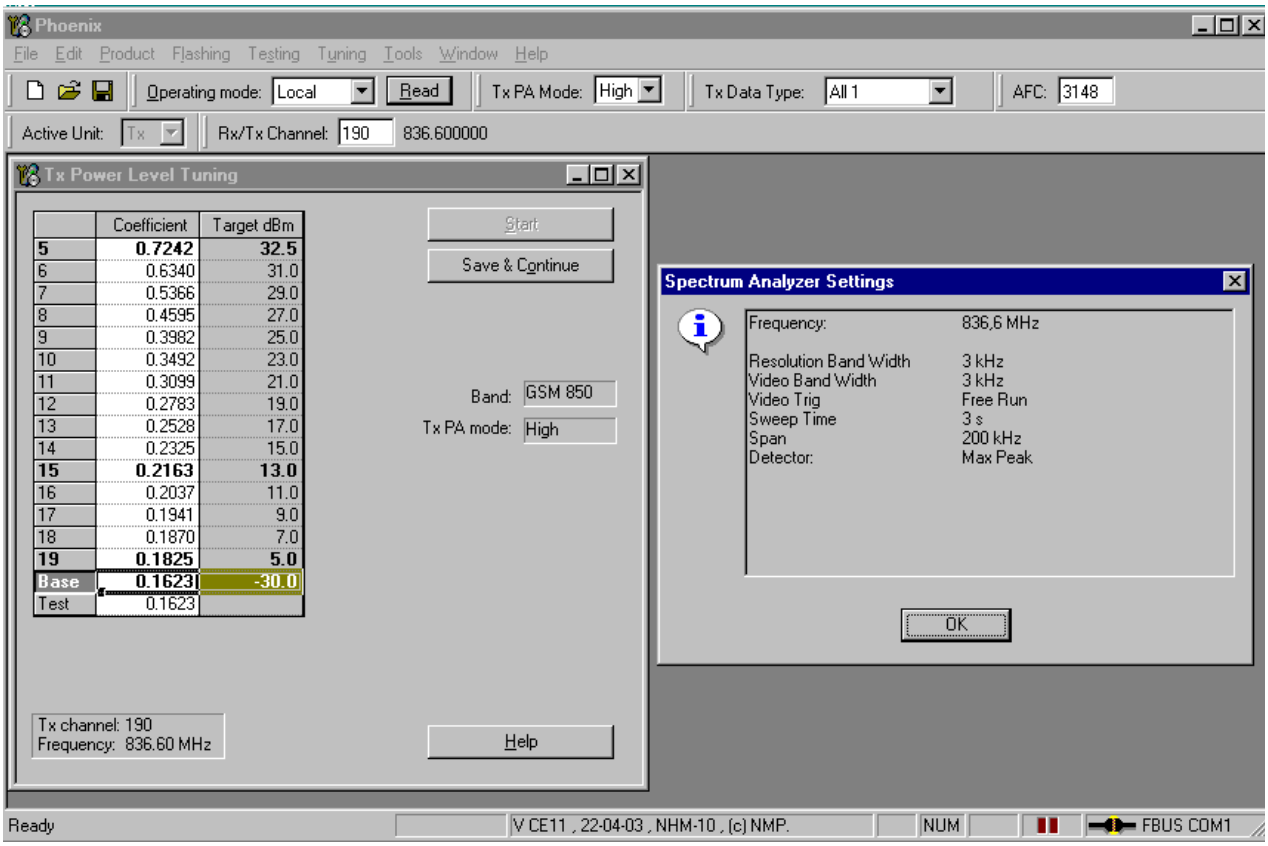


Tune Base level to –27 dBm.

Adjust DAC Values for Power Level 5 (32.5 dBm), 15 (13 dBm) and 19 (5 dBm) according to Target values. The Power levels may differ from Phoenix mentioned target power levels.

Press Save and Continue.

**Ignore table for low PA mode.**

Press Save and Continue.


Copyright © 2003 Nokia Corporation
Company Confidential

### GSM1900 (PCS)

The setup should now look like this:

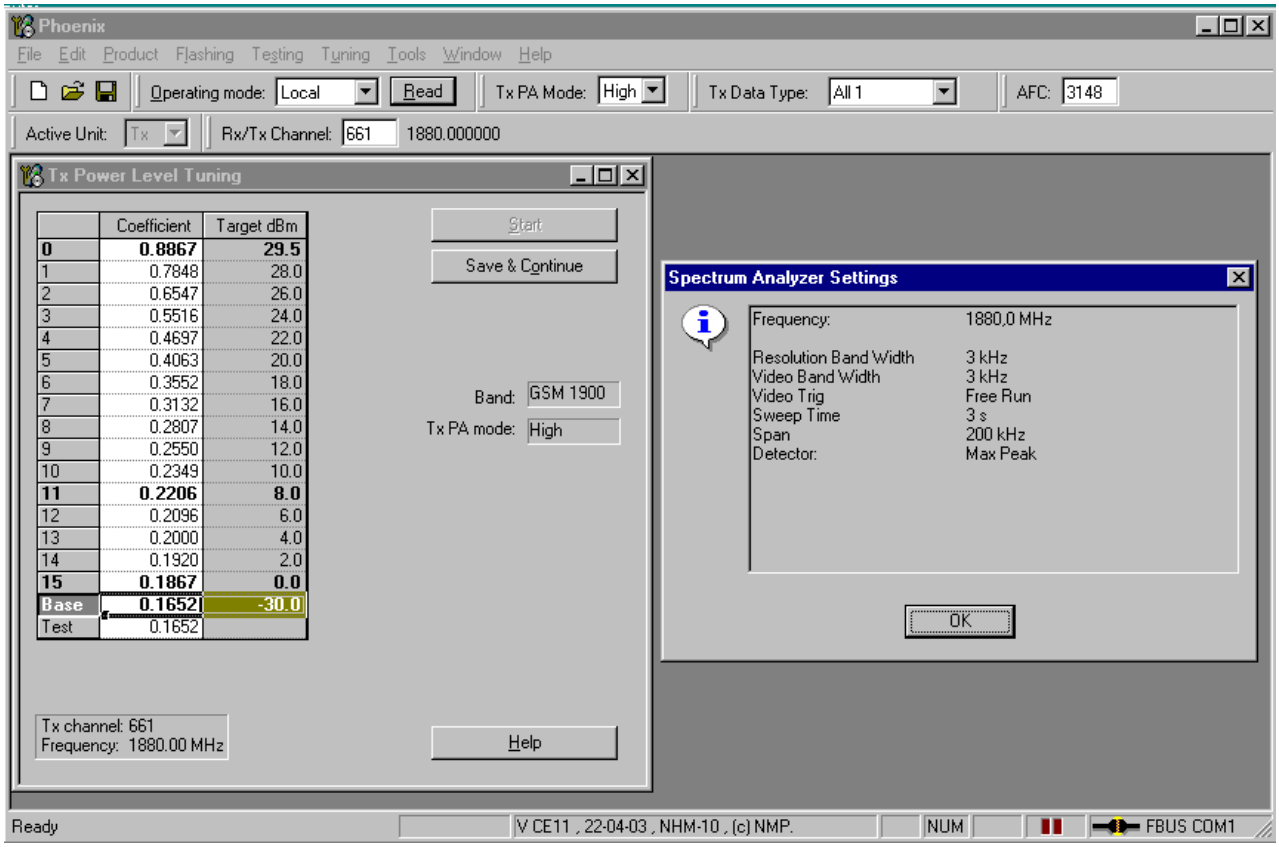


Press 'OK'

Tune Base level to –27 dBm.

Adjust DAC Values for Power Level 0 (29.5 dBm), 11 (8.2 dBm) and 15 (1 dBm). The Power levels may differ from Phoenix mentioned target power levels.

Press Save and Continue.

The TX Power Level Tuning is finished.

## TX I/Q Tuning

This tuning must be done in both bands.

### GSM850

Caution: If a spectrum analyser is used make sure that the external attenuation (20 - 30dB) between phone and spectrum analyser is high enough that the input of the analyser can't be destroyed. Adjust the reference level offset according to the insertion loss from the phone to the spectrum analyser .

PC/Phone operation:


Copyright © 2003 Nokia Corporation
Company Confidential

Set operating mode to local mode

Select Tuning Alt U
TX IQ Tuning I

Wait until the TX IQ Tuning window pops up.

Connect a Spectrum Analyzer or GSM tester with the option *Narrow Spectrum' to the RF connector of the phone.

If a spectrum analyzer is used then use the following settings.

| | **GSM850** |
|---|---|
| Center Frequency | 836.6 MHz |
| Frequency Span | 300 kHz |
| Resolution Bandwidth | 3kHz |
| Video Bandwidth | 3kHz |
| Sweep Time | 3 sec. |
| Sweep Type | Clear/Write |
| Detector Type | Max Peak |
| Reference level | 35 dBm |
| | EGSM/EGSM900 |
| Marker 1 | 836.6 -67 KHz |
| Marker 2 | 836.6 MHz |
| Marker 3 | 836.6 +67 KHz |


Copyright © 2003 Nokia Corporation
Company Confidential

The setup should now look like this:

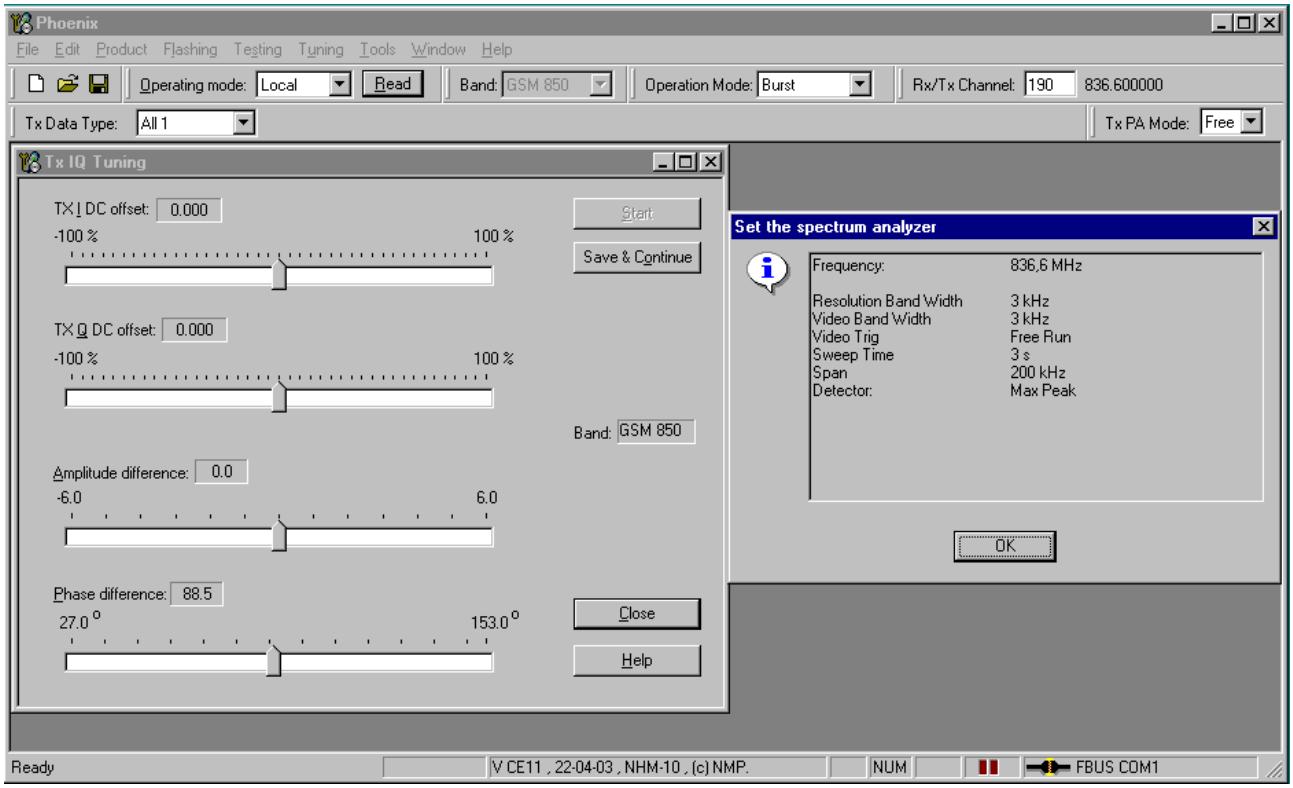


The Spectrum Analyzer now shows a plot like this:

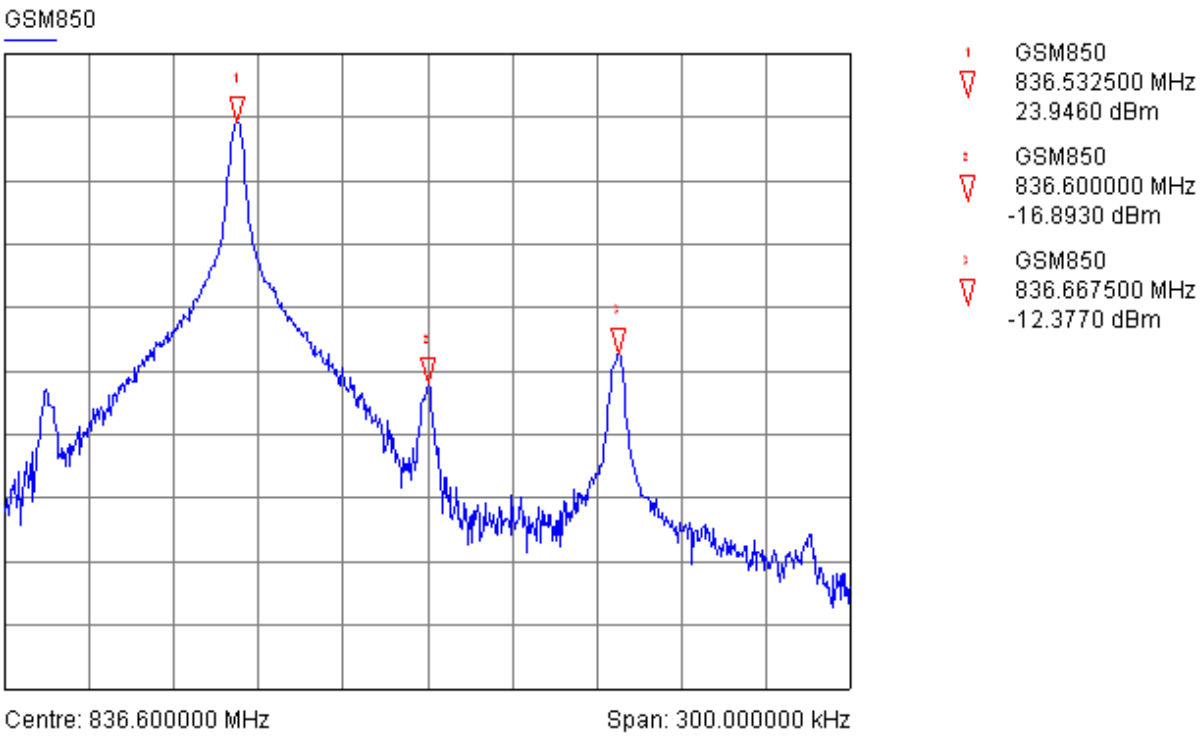



Copyright © 2003 Nokia Corporation
Company Confidential

The purpose of this tuning is to tune the carrier signal and the +67kHz signal to a minimum level (Marker 2 and 3).

Use the variables 'TX I DC offset' and 'TX Q DC offset' to adjust the carrier signal to a minimum level (Marker 2).

After tuning to the minimum the level difference between the peak levels at marker 1 and 2 must exceed 40dB.

Tuning is possible by using arrow keys on the keyboard. Pushing the sliders by using the mouse is less sensitive but even possible.

The Spectrum Analyzer now shows a plot like this:

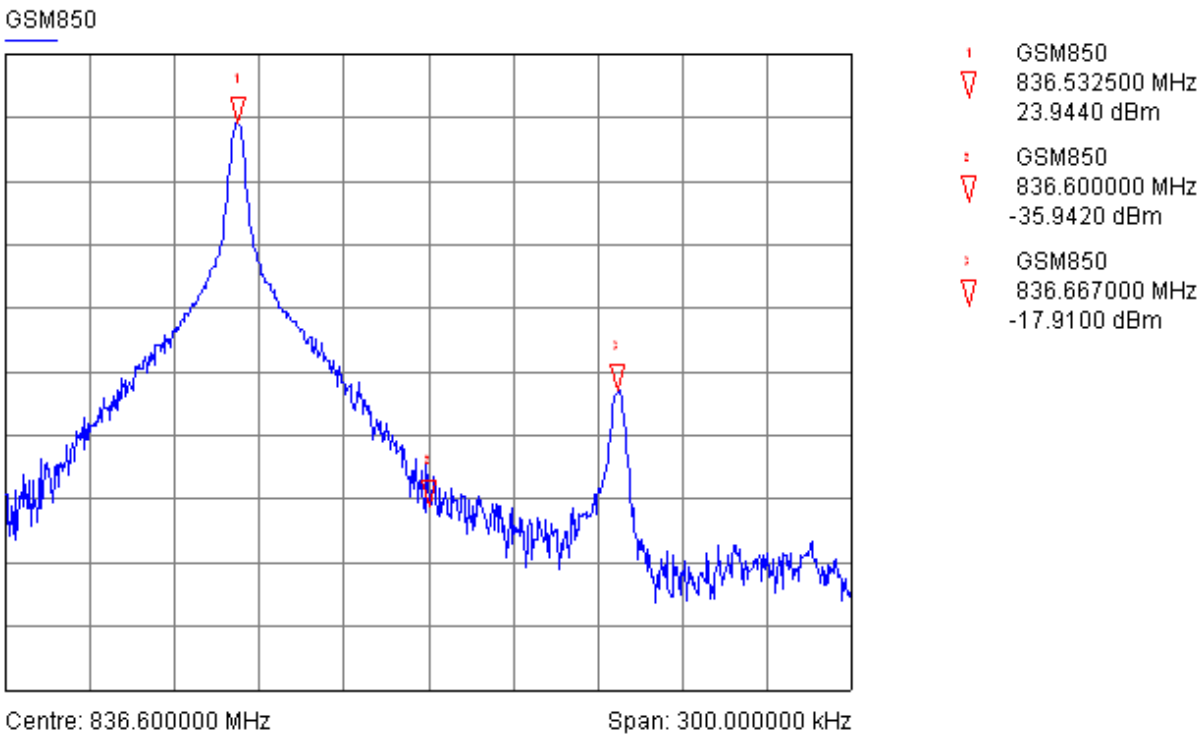


Use the variables 'Amplitude difference' and 'Phase difference' to adjust the +67kHz signal to a minimum level (Marker 3). After tuning to the minimum the level difference between the peak levels at marker 1 and 3 must exceed 40dB. Tuning is possible by using arrow keys on the keyboard. Pushing the sliders by using the mouse is less sensitive but even possible.


Copyright © 2003 Nokia Corporation
Company Confidential

The Spectrum Analyzer now shows a plot like this:

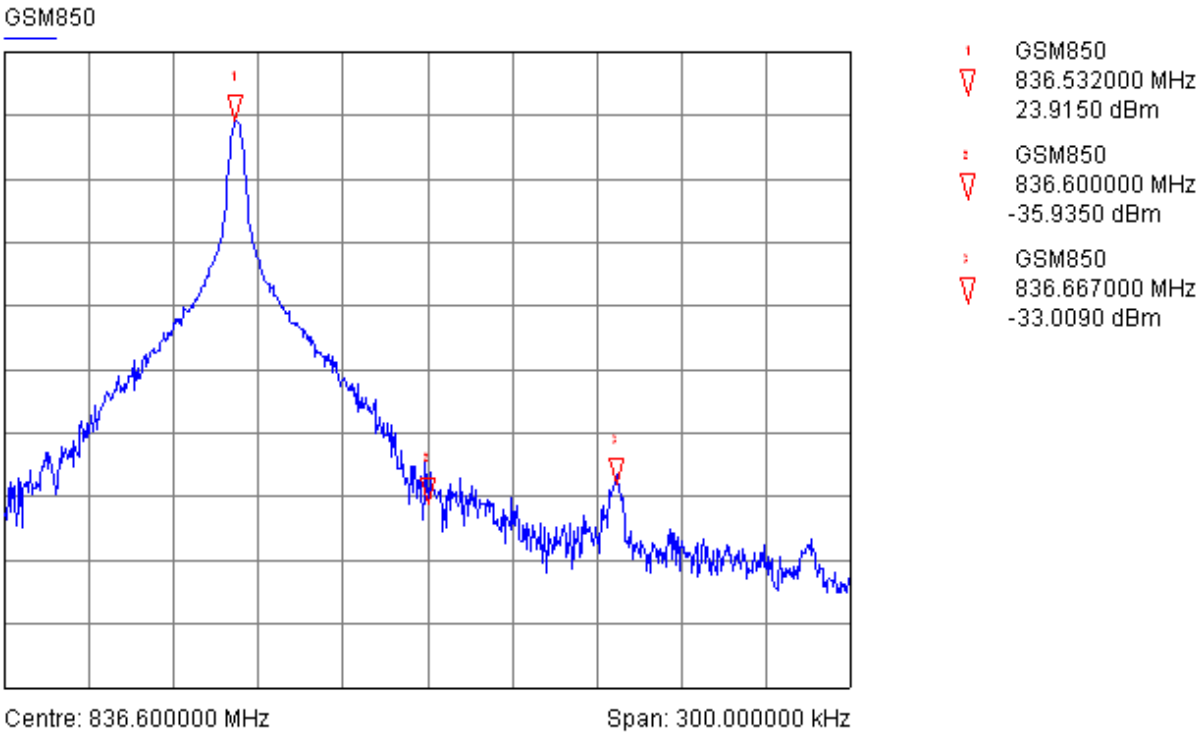


Select "Save and Continue"

Press Stop and the values are stored in the phone.

The 850 TX IQ Tuning is now finished.

Note: The optimal values for "TX I and Q Offset" and "Amplitude and Phase Difference" vary from phone to phone.

**GSM1900 (PCS)**

Caution: If a spectrum analyser is used make sure that the external attenuation (20 - 30dB) between phone and spectrum analyser is high enough that the input of the analyser can't be destroyed. Adjust the reference level offset according to the insertion loss from the phone to the spectrum analyser .

Wait until the RF Controls window pops up.

Connect a Spectrum Analyzer or GSM tester with the option *Narrow Spectrum' to the RF connector of the phone.

If a spectrum analyzer is used then use the following settings.

| | **GSM1900** |
|---|---|
| Center Frequency | 1880MHz |
| Frequency Span | 300 kHz |


Copyright © 2003 Nokia Corporation
Company Confidential

| | |
|---|---|
| Resolution Bandwidth | 3 kHz |
| Video Bandwidth | 3 kHz |
| Sweep Time | 3 sek. |
| Sweep Type | Clear/Write |
| Detector Type | Max Peak |
| Reference level | 35 dBm |
| Marker 1 | 1880 -67 KHz |
| Marker 2 | 1880 MHz |
| Marker 3 | 1880 +67 KHz |

The setup should now look like this:

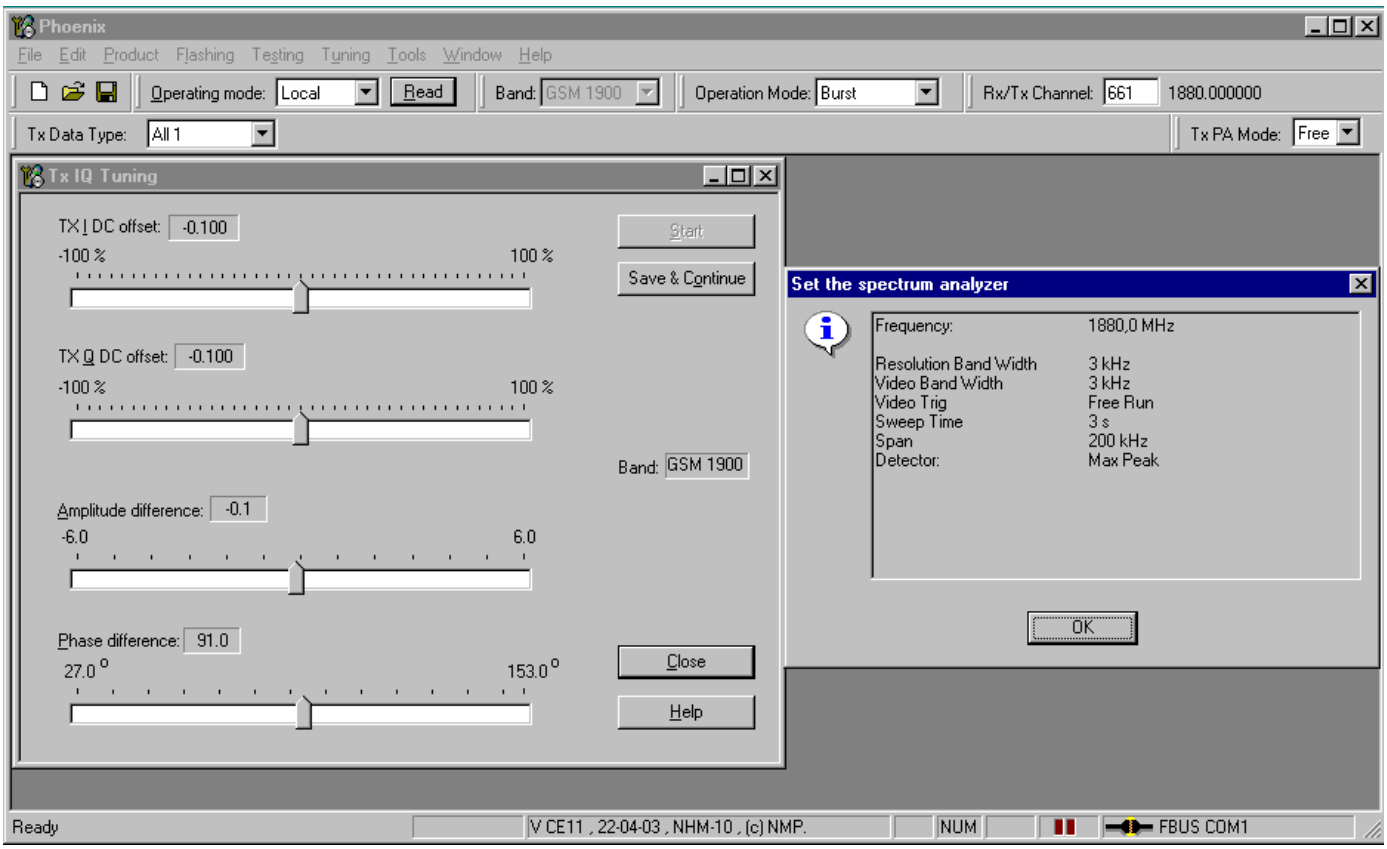



Copyright © 2003 Nokia Corporation
Company Confidential

The Spectrum Analyzer now shows a plot like this:

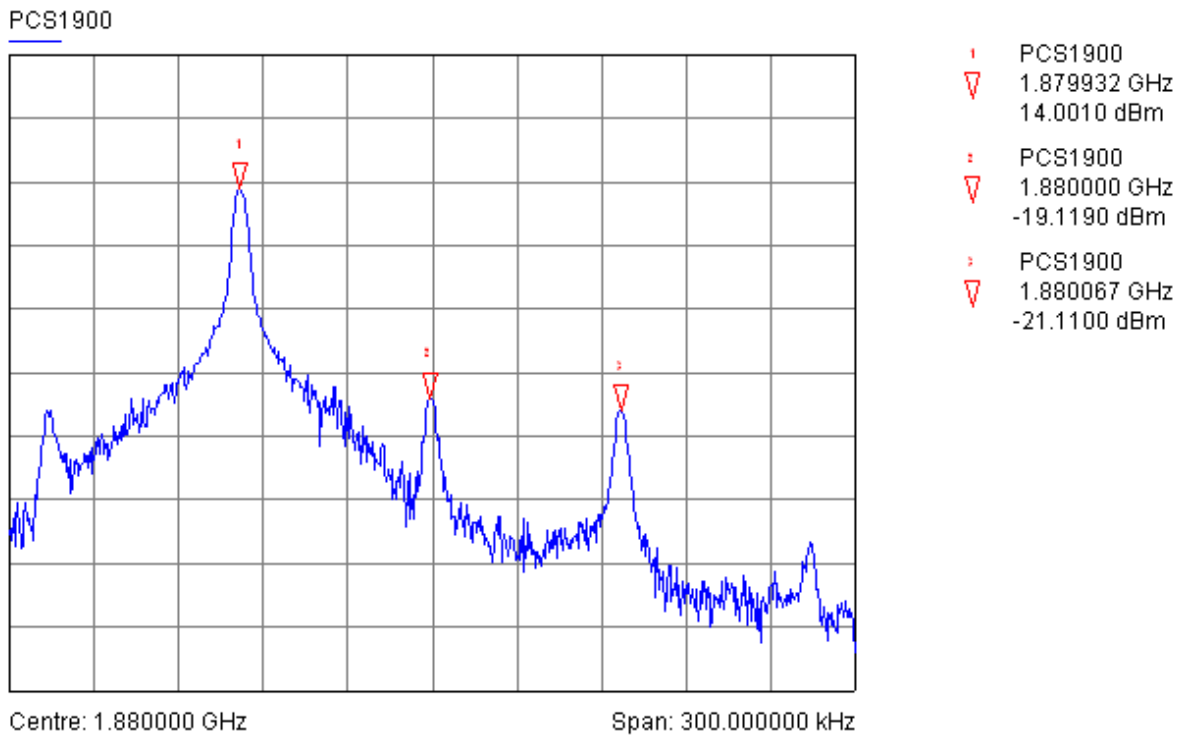


The purpose of this tuning is to tune the carrier signal and the +67kHz signal to a minimum level (Marker 2 and 3).

Use the variables 'TX I DC offset' and 'TX Q DC offset' to adjust the carrier signal to a minimum level (Marker 2).

After tuning to the minimum the level difference between the peak levels at marker 1 and 2 must exceed 40dB.

Tuning is possible by using arrow keys on the keyboard. Pushing the sliders by using the mouse is less sensitive but even possible.


Copyright © 2003 Nokia Corporation
Company Confidential

The Spectrum Analyzer now shows a plot like this:

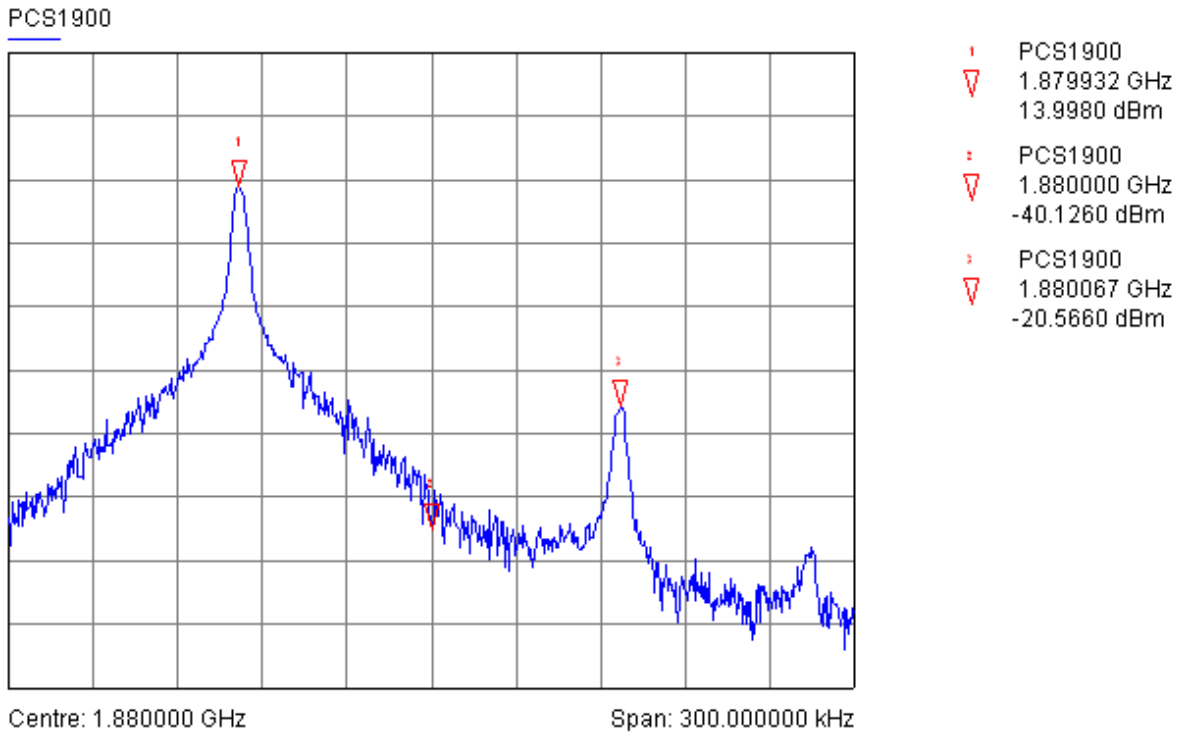


Use the variables 'Amplitude difference' and Phase difference' to adjust the +67KHz signal to a minimum level (Marker 3). After tuning to the minimum the level difference between the peak levels at marker 1 and 3 must exceed 40dB, Tuning is possible by using arrow keys on the keyboard. Pushing the sliders by using the mouse is less sensitive but even possible'


Copyright © 2003 Nokia Corporation
Company Confidential

The Spectrum Analyzer now shows a plot like this:

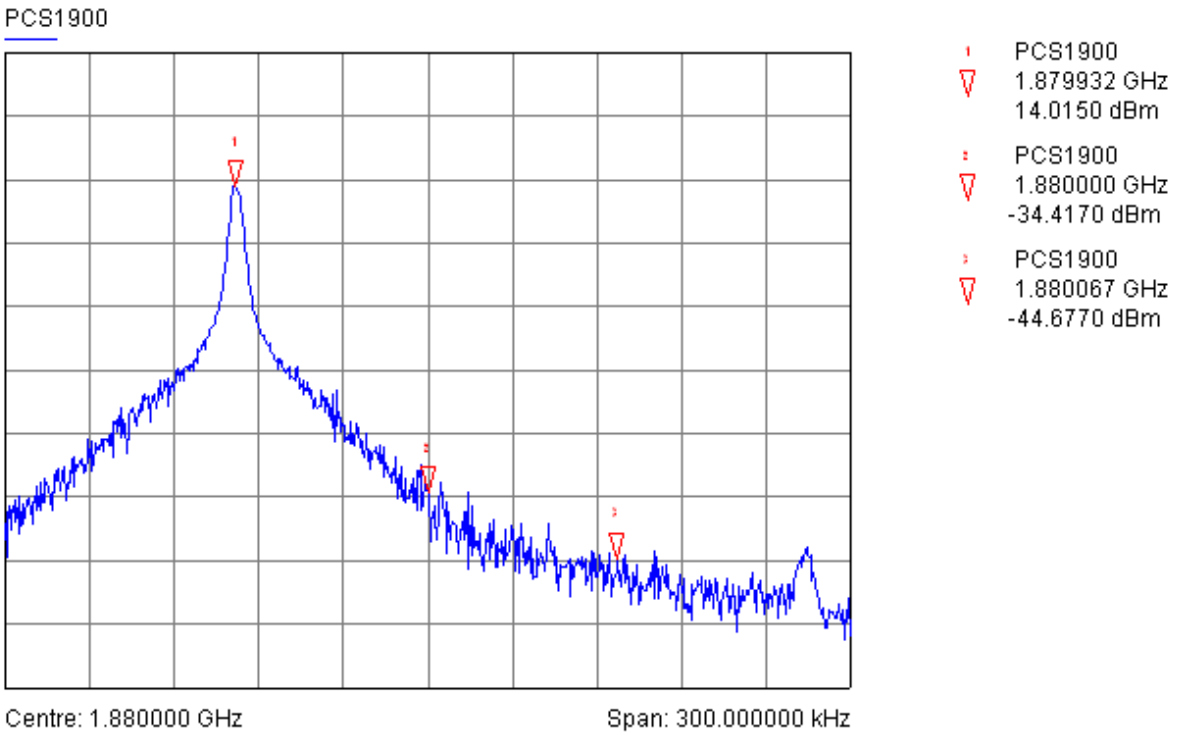


Press Save and Continue in the TX IQ Tuning Window and the values are stored in the phone.

The TX IQ Tuning is now finished.

Note: The optimal values for "TX I and Q Offset" and "Amplitude and Phase Difference" vary from phone to phone.


Copyright © 2003 Nokia Corporation
Company Confidential

**This page has been left blank intentionally**


Copyright © 2003 Nokia Corporation
Company Confidential